


Operation instruction

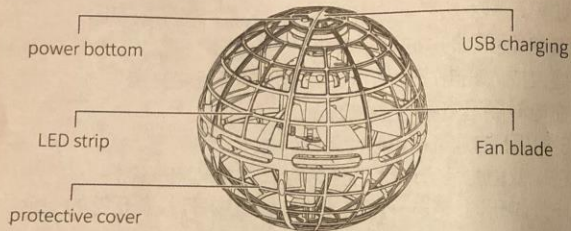

TURN ON / TURN OFF

- (1) Press the power bottom on the top of fly Nova pro with you finger the LED light bar will flash in different color after three seconds the fan blade will rotate automatically then use item remote control the fan blade will stop rotating press the power bottom again flynova will stop working.
- (2) Hold the fly nova pro horizontal and vertial to the ground with on hand tilt it up wards 15° to 45° and throw the fly nova pro will high speed proposal small angle throw.

SUSPENSION

Hold the fly nova pro with on hand vertial to ground the release rotate fly nova pro place the palm on the bottom 1-5cm floating in the air will move slowly.

FLYING TO THE TARGET

Hold the flynova pro with on hand tilt 15° to 65° degrees down to target release .

SOAR AND MAGNETIC LEVITATION (Need to buy a magicwand)

Flying and maglev need to buy magic use the five pointed star on the magic ward to attract by magnetism fly nova pro fly get rid of it quickly use your wrist power to throw the ball out it can become a flying state.

MATTER NEEDING ATTENTION

- (1) This product contains a non replaceable battery please do not disassemble it or let the battery get damp .
- (2) If the toy is heated seriously don't charge it let it cool before charging.
- (3) Please avoid strong impact and exposure to direct sunlight .
- (4) It is recommended to charge the fly nova pro with an adult .
- (5) Do not charge in an extremely hot or cold environment .
- (6) Toys should not be used by children under 6 years old .
- (7) Before playing fly nova pro please fully charge and keep the top up .
- (8) When playing outdoors please avoid river roads building ETC and have enough safe place to walk around .
- (9) Don't play with flynova pro in bad weather such as rain snow thunder electricity and storg wind so as to avoid injury or damage to products .
- (10) Do not flynova pro to light bulbs light tubes glass and other fragile products .
- (11) Never charge the product unattended for a long time disconnect the charge after the product is fully charged .
- (12) To product the batter life please turn off the power of flynova pro before charging .

PRODUCT PARAMETER

Product name	fly nova pro	Charging time	about 25-40 minutes
Color	blue / red	suitable for age	over 6 years old
battery type	lithium ion polymer battery	battery life	6-8 minutes
main material	PP plastic		