

EN

Ladies and Gentlemen, thank you for purchasing our product!
Before starting to use, please read the following instructions
for the correct use of the product. Please keep these instructions on
future and to follow its recommendations, as non-compliance may endanger life or health.

Important: KEEP FOR FUTURE REFERENCE!

- Please read it completely before use and follow all instructions in the manual.
- Do not use the product if any part is missing or damaged.
- Please keep this manual for future reference.

SPECIFICATION:

- material: metal, fabric
- case dimensions (width / height): 20 / 21 cm
- number of elements: 12
- weight of the set: 0.3 kg

INCLUDED

- a large pot
- a small pot
- frying pan
- colander
- lid
- pasta spoon
- shoulder
- colander
- a vase
- whisk
- fabric kitchen mat
- fabric glove
- transparent backpack with a handle

CHARACTERISTIC:

A set of silver pots allows for interesting fun at home, bar, restaurant. The classic silver color will suit any kitchen, and your toddler will feel like a real chef. It is located in a transparent backpack with a handle, which makes it easy for a child to take it with him to kindergarten, friend or garden; it is small and does not take up little space, so its storage is easy. The toy not only makes it possible to spend time in an interesting and joyful way, but also influences the intellectual development of the child and the growth of his motor (movement) skills. It develops imagination and stimulates creativity, as well as teaches cooperation in a group and improves social and integration skills. The set is perfect for independent play and with adults or other children.

WARNINGS FOR TOYS

- The toy is not recommended for children under 3 years of age.
- The product contains components that can be swallowed, cause choking or injure.
- The products are unfit for consumption.
- Do not expose to harsh weather conditions and fire.
- Use as intended.
- Do not ignore the user age recommendations.
- Do not use a damaged product.
- An adult is required for assembly.
- Do not store dismounted parts in places where they can be reached by children
- The packaging is not a toy. The toy should be unpacked by an adult, and the packaging and its fragments removed from the child's reach.

