


# eScooter manual

## 1. USP



**EN:**The light-weight eScooter that folds.  
**CH:**轻便的折叠电动车。


## 2.Introduction/说明

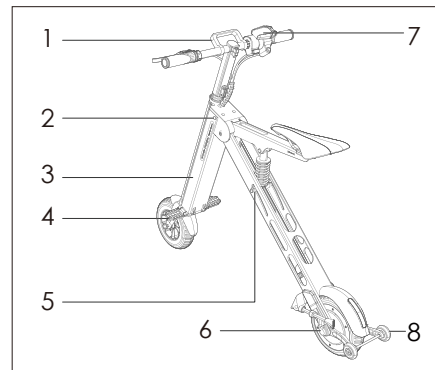


**EN:** 1.Trolley handle  
2.Charging port  
3.Battery  
4.Pedal  
5.Lock  
6.Motor  
7.Dashboard  
8.Trolley wheels

**CH:** 1.拉手  
2.充电口  
3.电池  
4.踏板  
5.锁  
6.马达  
7.仪表盘  
8.支撑小轮


## 3.Feature/特点

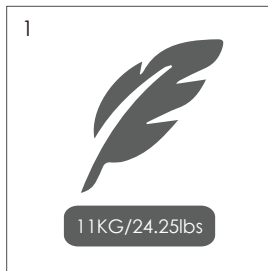


**EN:**Compact design, weighing only 11kg/24.25lbs.  
**CH:**简洁的设计, 仅11公斤。

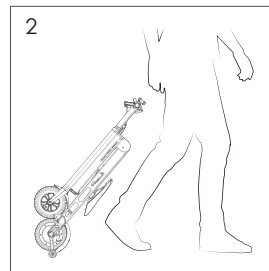


**EN:**Pull it along conveniently.  
**CH:**拖行方便。

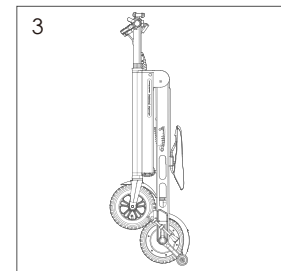


**EN:**Stands upright when folded.  
**CH:**折叠后可竖立放置。

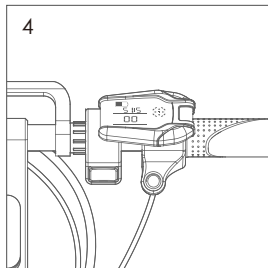

**EN:**Dashboard with speed display.  
**CH:**显示速度仪表盘。

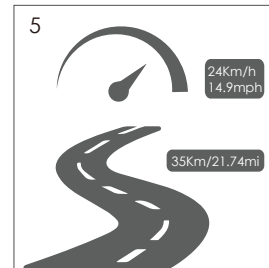


**EN:**Maximum speed of 24km/h(14.9mph) with a maximum distance per charge of 35km/21.74mi.  
**CH:**最高时速24KM/小时, 最大续航35KM.

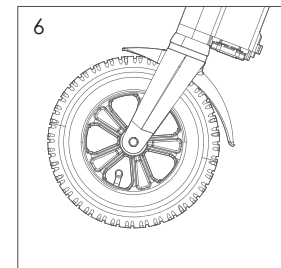


**EN:**8-inch pneumatic tires.  
**CH:**8寸充气轮胎。

## 4.How to assemble it/组装步骤

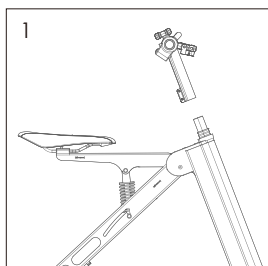


**EN:** Attach the handle to the frame.  
**CH:**拼接车把和车架。

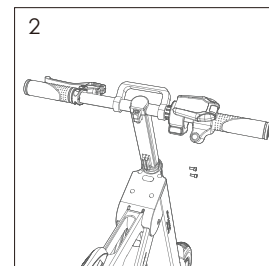


**EN:** Tighten the two screws.  
**CH:**拧紧两颗螺丝。


## 5. How to unfold it/展开操作

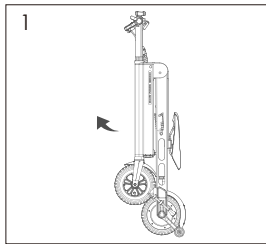

EN: Unfold the frame.  
CH: 展开车架。

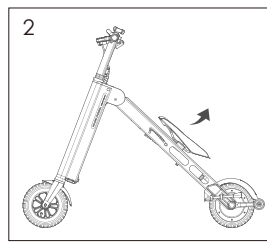


EN: Lift the seat upwards and set in place.  
CH: 抬起座椅。

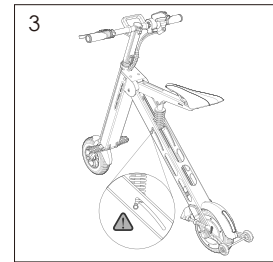


EN: Press the seat down to ensure that it's locked before riding.  
CH: 下压座椅, 即锁定, 骑行前确保座椅已锁定。


## 6. How to fold it/折叠操作

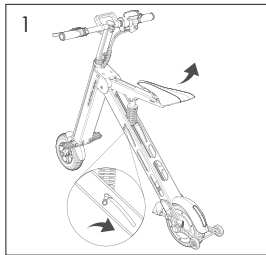

EN: Lift the seat up with your hand, push back the screw on the side of the shock absorber and unlock it.  
CH: 向上抬起座椅, 将减震器侧面的螺丝推出卡槽解除锁定。

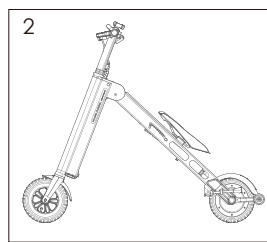



EN: Push down the seat and the screw on the side of the shock absorber. Slide them downwards..  
CH: 通过滑轨放下座椅, 使之与后车架贴合。

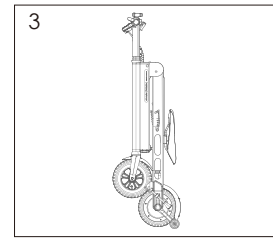

EN: Fold the frame with your hands. It is automatically fixed and locked with an integrated buckle.  
CH: 用手折叠车架, 卡扣会扣住车子。

## 7. About dashboard/关于仪表盘

EN: 1. Power On/Off  
2. Accelerator  
3. Battery  
4. Gear level  
5. Speed indicator

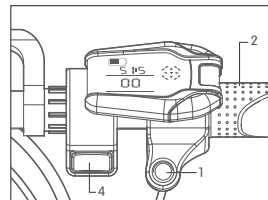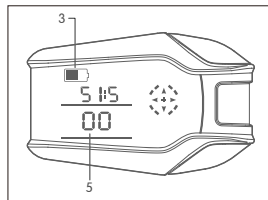


CH: 1. 电源键  
2. 加速  
3. 电池  
4. 档位  
5. 速度

## 8. Technical Specification/技术参数

Travel distance 行驶里程	25-35km/16-22mi	Max load 最大载重	120kg/264lb
Top speed 最大速度	12km/h/1.4mph(gear 1) 18km/h/11.2mph(gear 2) 24km/h/14.9mph(gear 3)	Motor 马达	250w DC brushless motor 250w 直流无刷电机
Weight 重量	11kg/24lb	Battery 电池	36V 7.2Ah
Charging time 充电时间	3h	Wheel size 轮胎大小	8 inch
Dimension(unfolded) 展开尺寸	L105*W51*H86(cm) L41*W20*H34(in)	Dimension(folded) 折叠尺寸	L34*W51*H107(cm) L13*W20*H42(in)

## 9. Note/注意事项

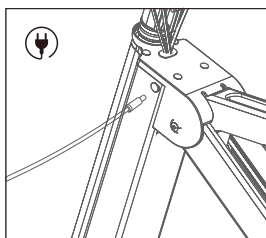

EN: Charge it once a month if bike is not used for a long period.  
CH: 若长时间不用, 请保持每月充一次电。

## 10. Sku

Sku	Color	Plug
	Grey / Black	
		US
		UK
		AU