



Hot Air Styler

Instructions for use



Please read the following instructions carefully and allow you to enjoy your quality product.

SAFETY PRECAUTIONS

1. Before plugging in the unit, check that the voltage indicated on the label matches the voltage at your home.
2. If the power cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person to avoid danger.
3. If the hair dryer is used in a bathroom, unplug it after use, as the proximity of water poses a hazard even when the hair dryer is turned off.
4. For added protection, it is recommended that the electrical current device (RCD) with a rated residual current limit of no more than 30 mA in the electrical circuit supplying the bathroom. Ask your installer for advice.



5. **WARNING** - Do not use this appliance near bathtubs, showers, sinks or other vessels containing water.
6. Do not use the hair dryer for purposes other than those described in these instructions.
7. This appliance may be used by children 8 years and older and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have received supervision or instruction on the use of the appliance in a safe manner and understand the Hazardous Child must not play with the hair dryer. Cleaning and user maintenance should not be performed by children without supervision.
8. Do not use outdoors.
9. Always unplug the appliance when not in use and before cleaning.
10. Do not immerse appliance in water or other liquids to avoid risk of electric shock.
11. Do not spray aerosol products when the hair dryer is in operation.
12. Do not leave the hair dryer on when not in use.
13. Do not use attachments other than those provided.
14. The air inlet and air outlet openings should never be blocked to prevent them from getting too hot.
15. However, if the airflow is accidentally blocked during use, the built-in thermal protection will automatically turn off the unit. The hair dryer will automatically turn back on after a few minutes of cooling.
16. Keep the device away from children, keeping to prevent it from being sucked in.
17. Store the device away from heat. Do not use it if you have water on your hands.
18. Never wrap the power cord around the device, this may cause damage.

Check the power cord and device regularly for reliable damage.

CHANGING THE STYLING ATTACHMENT

Place the attachment on the body of the device by aligning the guides on the two parts and press the two parts together while gently turning the attachment clockwise until you hear a click. To remove the attachment, press the device's release button and gently remove it.

HOW TO USE THE ATTACHMENTS

- A. Left curler. Take a strand of hair and gently twist it around the right curler and position it so that the hair is sucked around the curler. Hold it around the curler for a few seconds and then slowly lower it. Do this with all of the hairstyle. Add your styling spray/hair spray/dry shampoo on hair to keep the curls firm.
- B. Right curler. Take a strand of hair and gently twist it around the right curler and position it so that the hair is sucked around the curler. Hold it around the curler for a few seconds and then slowly lower it. Do this with all of the hairstyle. Add your styling spray/hair spray/dry shampoo on hair to keep the curls firm.
- G. Blow-dryer. This dries your hair by blow drying it 20 centimeters away from your hair. You have a choice of 3 heat settings.
- H. Round brush. Curls or straightens your hair. You have a choice of 3 heat settings.
- I. Straight brush. For straightening your hair.

CLEANING THE PRODUCT

1. The device can be cleaned with a dry cloth.
2. The attachments can be cleaned with a damp cloth or rinsed under a running tap. Remove the attachments from the unit before cleaning. Make sure the attachments are dry before using or storing them.
3. Never rinse the appliance with water.

WARRANTY INFORMATION

The manufacturer provides warranty in accordance with the laws of the customer's country of residence, with a minimum of 1 year (Germany: 2 years), from the date the appliance was sold to the end user.

The warranty covers only material and manufacturing defects.

Warranty repairs may only be carried out by an authorized service center.

When making a warranty claim, the original purchase invoice (with purchase date) must be submitted.

The warranty does not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading the unit, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-compliance with the operating instructions, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions.
- Partially or completely disassembled device

STORAGE SAFETY

Unplug the device when not in use.

Let the appliance cool down and store it in a dry place. Never wrap the cord around the appliance because the cord will wear out and break prematurely. If the power cord of this device becomes damaged, replace it by returning it to the store where the product was purchased or to a similarly qualified person to avoid danger.

Technical Data

Power supply: □AC110V-60Hz □AC220-240V-50/60Hz