



ML-30 CR
User Manual
LAMP CLOCK RADIO WITH SOUNDS OF NATURE



PLEASE READ THE INSTRUCTION CAREFULLY BEFORE OPERATING THE UNIT

UNPACKING YOUR UNIT


When you unpack your new clock radio, make sure that you have removed all the accessories and information papers:

- Main unit
- User manual


LOCATION OF CONTROLS

- Brightness control of main light; Pause or start the cycle of the ambience color light
- Main light on; Color light on; light off
- Display dimmer; alarm snooze; setting confirmation.
- Light diffuser
- LCD display
- Setting mode switch (time, alarm1, alarm2, lock)
- Volume adjustment knob
- NAP button
- SLEEP button
- Alarm 2 setting button
- Alarm 1 setting button
- ON/OFF button (turn on/off the radio or natural sounds)
- Backward button
- Forward button
- FM/MW/ Radio band and natural sounds switch
- TUNING knob
- AUX: Auxiliary input jack
- Speaker
- Battery compartment
- AC power cord
- FM antenna wire


Front view

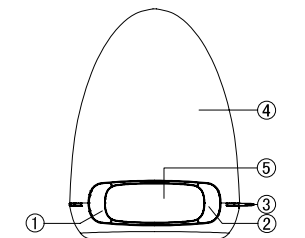


Left view

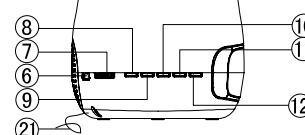

Right view

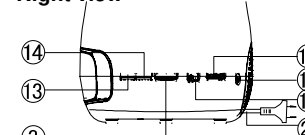

Bottom view

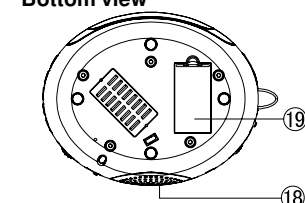

GB - 1

POWER SUPPLY

AC power: 230 V ~ 50 Hz (CE standard)
Insert the AC power cord (20) into a convenient standard AC wall outlet.

DC power: 3V (2 batteries UM4/AAA/R03 type, not provided) for clock and alarm time backup.
Batteries of alkaline type are recommended. For optimum performance, batteries should be replaced every 6 months.
Open the lid of the battery compartment (19) and insert two (type UM4/AAA/R03) batteries (not supplied), with the + and - marks correctly aligned, then close the lid.
SYSTEM BACK-UP: Ensures that the unit will continue to operate as normal after an AC power disruption (in order to preserve the battery life, the display will not light up). All clock settings will be kept in the memory, however, the clock time may require adjustment for exact accuracy.

If no battery is installed, the display (5) will blink 0:00 to indicate that you have to reset the time and alarm.


* Please refer the operation to section "TIME SETTING".

Notes on batteries:

- Do not mix different types of batteries or old batteries with new ones.
- Never recharge, apply heat to them or take the batteries apart.
- In order to avoid leakage, always remove the batteries when unit will not be used for a long period of time.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

GB - 2

LCD DISPLAY

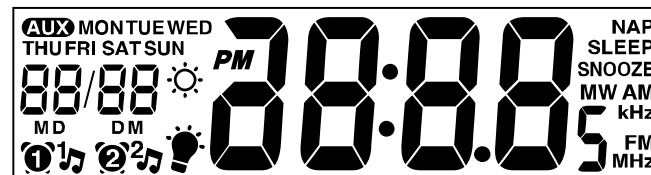

Setting the brightness of the display

When the alarm is not triggered, and the setting switch is at position, press button (3) repeatedly to adjust the brightness (high, medium or low level) of the display.

TIME SETTING

- Slide the setting mode switch (6) to (time) position, the HOUR digit will flash on display (5).
 - Press </> (13/14) to adjust the value. The time decrements or increments at a faster rate when you press and hold the buttons. Press button (3) to confirm your setting.
 - Repeat step 2 to complete the setting of minute-date-month-year-12/24hour mode.
 - After finish the setting, slide the setting mode switch (6) to (lock) position.
- NOTE:** When the switch is NOT at position, some of the function keys are disabled.

GB - 3

Auxiliary device

- Connect your auxiliary source (e.g. mp3 player) to the AUX input jack (17).
- Turn on the unit (12) and turn on your auxiliary source. Adjust the volume by the knob (7) to the desired level.
- To stop listening to the auxiliary source, disconnect your auxiliary source from the AUX input jack (17).

SETTING THE ALARM AND WAKE-UP MODE

This unit allows two wake times and to set the main light to turn on automatically and progressively a certain time before the alarm triggers.

1. To set the alarm time

- Slide the setting mode switch (6) to (alarm1) or (alarm2) position, "AL 1" or "AL 2" will appear on display and the HOUR digit will flash.
- Press </> (13/14) to adjust the value. The time decrements or increments at a faster rate when you press and hold the buttons.
- Press button (3) and the MINUTE digit will flash, press </> (13/14) to adjust.

2. To set the progressive light

- (with setting mode switch (6) on or position)
- Press button (1) repeatedly to adjust the progressive light activated duration (OFF-05-10-15-20-OFF) before alarm triggers. " " is displayed (5).
- NOTE: When set to "OFF", the main light will remain switched off at wake-up, " " is not displayed.

3. When alarm time and progressive light settings are completed, slide the setting mode switch (6) to (lock) position.

4. To select the alarm source (buzzer or radio/natural sound)

- Press or (11 or 10).
- 1st press: " " (wake up by buzzer)
- 2nd press: " " (wake up by radio/natural sound)
- 3rd press: alarm off
- NOTE: Waking up by FM/MW radio or natural sound depends on position (FM-MW-) of the sound mode switch.

GB - 5

5. To check the alarm settings

- Press and hold or button (11 or 10) for 3 seconds. Time, alarm source and progressive light status are displayed for the corresponding alarm. Release this button to go back to clock display.



STOPPING THE ALARM

The alarm is programmed to run for 59 minutes.

Once the alarm 1 or alarm 2 is activated, corresponding alarm indicator " " or " " will flash on display, the main light will turn on automatically if progressive light is set for the alarm. Stopping the alarm will turn off the progressive light.

- Press (3): Press to stop the alarm temporarily, the alarm will trigger again 9 minutes later. " " or " " and "SNOOZE" flash on display (5). " " remains displayed if progressive light has been set.
- ON/OFF (12): Press to stop the alarm and it will sound again 24 hours later. " " or " " remains displayed. " " remains displayed if progressive light has been set.

3. Press or (11 or 10) repeatedly until the alarm indicator " " or " " goes off. The alarm is turned off permanently,

GB - 6

NAP FUNCTION

This function wakes you up after a short period of time. Only buzzer sound is available for NAP alarm.

- Press and release the NAP (8) button. The "NAP" icon and the current nap time flashes on display (5). During this period, adjust nap time by pressing </> or (13/14).
- NOTE: The nap range is up to 2 hours. (The default time is 10 minutes)
- If no button is pressed after 5 seconds, it will return to clock display with "NAP" icon.
- When the Nap alarm is triggered, press NAP (8) to stop, "NAP" icon will disappear.
- To check the remaining time before the NAP alarm is triggered, press NAP button (8), ON/OFF (12), or button (3).
- To cancel NAP function before NAP alarm is triggered, press NAP button (12), adjust nap time to "00" by pressing </> or (13/14), it will return to clock display after 5 seconds, "NAP" icon disappears.

SLEEP FUNCTION

In sleep mode, the audio will turn off automatically after a specified time. If the main light is on, it will turn off gradually 5 minutes before the SLEEP activates.

- To set the sleep time, press SLEEP button (9), the radio or natural sound will turn on automatically, then press this button repeatedly to adjust the value (120, 110, 100...0).
- If no button is pressed after 5 seconds, it will return to clock display with "SLEEP" icon.
- The radio or natural sound will turn off when the preset time elapses. The "SLEEP" icon will disappear.
- To check the remaining time before automatic turning off, press SLEEP button (9)
- To turn off the radio/natural sound before the SLEEP activates, press ON/OFF button (12), or press SLEEP button (9) repeatedly until value is adjusted to "00". It will return to normal display after 5 seconds, the sleep function will be cancelled and "SLEEP" icon will not be displayed.

GB - 7

LIGHTING

- Your clock radio is equipped with a saving energy LED (Light Emitting Diode) main light and multicolor ambience light.

Main light

- Press button (2) once to turn on the main light. The current level of brightness will show on display for 5 seconds.
- Press button (1) repeatedly to adjust the level of brightness (from 01 to 20).

Color light

- Press button (2) twice to turn on the color light, then it will start to cycle different colors.
- Press button (1) to stop at current color, press this button again to resume the cycle.
- Press button (2) thrice to turn off the light.

AUDIO

Press ON/OFF button (12) to switch on/off the audio function (radio, natural sounds or auxiliary input.)

Radio

- Slide the sound switch (15) to FM or MW position to select the band.
- Select a radio station with tuning knob (16).
- Adjust the volume (7) to the desired level.
- For better reception, in FM mode, extend the antenna (21); in MW mode, rotate the unit.

Natural sounds

- Turn on unit (12) and slide the sound switch (15) to position.
- Press </> or (13/14) to select a different kind of natural sound. There are 4 options available. "S1"... "S4" will show on display
- Adjust the volume (7) to the desired level.

GB - 4

MORE INFORMATION



ATTENTION : To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

WARNING - To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.



For indoor use only

Class 1 LED product.

GB - 8

IMPORTANT

- Do not throw batteries in fire!
- Do not place the product in closed bookcases or racks without proper ventilation.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- Attention should be drawn to the environmental aspects of battery disposal.
- The marking information is located at the bottom of apparatus.
- Ensure a minimum distance of 5cm around the apparatus for sufficient ventilation.
- Ensure that the ventilation is not impeded by covering the ventilation openings with items, such as newspapers, table-clothes, curtains, etc.
- Do not place naked flame sources, such as lighted candles on the apparatus.
- Use the apparatus only in moderate climates.
- Do not be exposed to dripping or splashing. And that no object filled with liquids, such as vases, shall be placed on the apparatus.
- Do not use your set immediately after transport from a cold place to a warm place, there may be condensation problems.
- Make sure that you keep your set away from water and high temperatures.
- Clean the player with a soft cloth, or damp chamois leather. Never use solvent.
- To be completely disconnected the power input, the mains plug of the apparatus shall be disconnected from the mains completely.
- The mains plug should not be obstructed or should be easily accessed during intended use.
- Where the mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- Under the influence of electrical fast transient or/and electrostatic phenomenon, the product may malfunction and require user to power reset.



If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

GB - 9

