

# MUSE

## M-10CR


### User Manual Digital Alarm Clock Radio



PLEASE READ THE INSTRUCTION CAREFULLY  
BEFORE OPERATING THE UNIT

#### LOCATION OF CONTROLS

1. Function Selector
2. Snooze: Alarm repetition
3. Sleep: On / set
4. Minute: set
5. Hour: set
6. Time: set
7. Alarm: set / Stop
8. Tone (High / Low)
9. Tuning knob
10. Volume Control
11. Battery back-up compartment
12. FM wire antenna
13. AC Power cord
14. Digital display
15. Alarm ON indicator
16. Dial scale and pointer

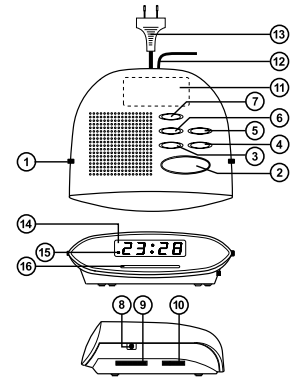

#### POWER SUPPLY

**AC power:** 230V ~ 50 Hz (CE standard)

**DC power:** 9V battery type 006P (not provided) for clock back-up system only. An alkaline type battery is recommended. For optimum performance, this battery should be replaced every 6 months.

1. Insert the AC power cord (13) into a convenient standard AC wall outlet.
2. Connect the 9V battery inside the compartment at the bottom of the unit (11).

**BACK-UP SYSTEM:** Ensures that the unit will continue to operate as normal during an AC power disruption (in order to preserve the battery life the display will not light). All clock settings will be kept in the memory, however, the clock time may require adjustment for exact accuracy. If this battery is not installed, the display will blink **12:28** to indicate that you have to redo the time and alarm settings.

#### SETTING THE TIME

1. Press and hold TIME (6) and press (4) or (5) to adjust to your desired time. Release TIME (6) to store your setting in memory.

GB - 1

#### LISTENING TO THE RADIO

1. Switch the function selector to the ON position (1) and for a better reception, extend the antenna (12).
2. Adjust the volume (10) and the tone (8) to the desired level.
3. Select your desired radio station (9) and (16).
4. To stop listening to the radio, switch to OFF (1).

#### SETTING THE ALARM AND WAKE-UP MODE

1. Press and hold the ALARM (7), and press (4) or (5) to adjust your desired alarm time, then release the ALARM (7) to store your setting in memory.
2. To wake up to the radio follow 1 to 3 in "LISTENING TO THE RADIO", then select the AUTO position (1). The Alarm indicator will alight (15).
3. To wake up to the alarm sound, select the BUZZER position (1). The Alarm indicator will alight (15).

#### STOPPING THE ALARM

The alarm is programmed to run for 1hr 59 min.

1. SNOOZE (2): Press to stop the alarm temporarily, the alarm will ring again in 9 min.
2. ALARM (7): The alarm will stop, and will sound again 24 hours later.
3. OFF (1): To turn off the alarm permanently, the alarm LED indicator (15) will go off.

#### SLEEP TO MUSIC

Press SLEEP (3), the sound will come on for 59 min. If you want to change this sleep time, press and hold SLEEP (3), and use (4) or (5) to adjust to the desired time. If you want to turn off the music earlier, press SNOOZE (2).

#### MORE INFORMATION

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

ATTENTION: To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

#### WARNING

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

#### IMPORTANT

- DO NOT THROW BATTERIES IN FIRE !
  - THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING.
  - ENSURE A MINIMUM DISTANCE OF 5CM AROUND THE APPARATUS FOR SUFFICIENT VENTILATION.
  - ENSURE THAT THE VENTILATION IS NOT IMPEDED BY COVERING THE VENTILATION OPENINGS WITH ITEMS, SUCH AS NEWSPAPERS, TABLE-CLOTHS, CURTAINS, ETC.
  - DO NOT PLACE NAKED FLAME SOURCES, SUCH AS LIGHTED CANDLES ON THE APPARATUS.
  - TAKE ATTENTION TO THE ENVIRONMENTAL ASPECTS OF BATTERY DISPOSAL.
  - USE THE APPARATUS ONLY IN MODERATE CLIMATES (NOT IN TROPICAL CLIMATES).
  - DO NOT EXPOSE THE APPARATUS TO DRIPPING OR SPLASHING.
  - DO NOT PLACE OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, ON THE APPARATUS.
  - BATTERIES SHALL NOT BE EXPOSED TO EXCESSIVE HEAT SUCH AS SUNSHINE, FIRE OR THE LIKE.
  - THE MARKING PLATE IS LOCATED ON THE BACK ENCLOSURE.
  - MAINS PLUG IS USED AS THE DISCONNECT DEVICE AND IT SHALL REMAIN READILY OPERABLE. TO BE COMPLETELY DISCONNECTED THE POWER INPUT, THE MAINS PLUG OF THE APPARATUS SHALL BE DISCONNECTED FROM THE MAINS COMPLETELY.
  - THE MAINS PLUG SHOULD NOT BE OBSTRUCTED OR SHOULD BE EASILY ACCESSED DURING INTENDED USE.
- UNDER THE INFLUENCE OF ELECTRICAL FAST TRANSIENT OR/AND ELECTROSTATIC PHENOMENON, THE PRODUCT MAY MALFUNCTION AND REQUIRE USER TO POWER RESET.



If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

GB - 2

GB - 3

