

HP8655
HP8656
HP8657

	En	your manual	IT	Manuale utente
DA	Danish	Brugervejledning	DE	Bedienungsanleitung
ES	Spanish	Manual de usuario	FR	Mode d'emploi
FI	Finnish	Käyttöohje	GR	Εγχειρίδιο
FR	French	Mode d'emploi	IT	Manuale utente
GR	Greek	Εγχειρίδιο	DE	Bedienungsanleitung
ES	Spanish	Manual de usuario	PT	Manual do utilizador
FI	Finnish	Käyttöohje	SV	Användarhandboken
FR	French	Mode d'emploi	TR	Kullanım kılavuzu

PHILIPS

Specifications are subject to change without notice.
© 2016 Koninklijke Philips N.V.
All rights reserved.

3140 035 3058

English
Congratulations on your purchase, and welcome to Philips. To fully enjoy the benefits of your Philips shaver, register your product at www.philips.com/welcome.

1 Important

Read this manual carefully before you use the appliance and keep it for future reference.

WARNING: Do not use this appliance

near water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

Always unplug the appliance after use.

If the main cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similar qualified persons in order to avoid a hazard.

The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understanding the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer to advise you.

Do not insert metal objects into the shaver. Do not block the air grilles.

Do not connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

Do not use the appliance for any other purpose than described in this manual.

Only use for drying and styling scalp hair. Do not use the appliance on artificial hair.

When the appliance is connected to the power, never leave it unattended.

Never use any accessories or parts from other manufacturers than that of Philips, do not use specifically recommended by you, use such accessories or parts, your guarantee becomes invalid.

When the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes.

When you switch the appliance on again, check the locks to make sure they are not blocked by fluff, hair etc.

Do not wind the main cord round the appliance.

Wait until the appliance has cooled down before you store it.

Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Environment
This appliance has the potential that it will be disposed of with normal household waste (2012/19/EC). Follow your country's rules for the separate collection of electrical and electronic products. Contact your local waste management authority for more information.

2 Style your hair

New! After use the appliance and attachments cool down before you use them. Do not use the appliance on completely wet hair. Do your hair with a styling comb or brush before you use the appliance. Always unplug the appliance before you start.

If the appliance overheats, it switches off automatically. Unplug the appliance

