

Please take the time to carefully read this quick start guide and follow the Important Safety Instructions.
For additional information about your earbuds, refer to the Owner's Guide: <http://global.bose.com>
U.S. only: <http://Owners.Bose.com/freestyle>

Important Safety Instructions

CAUTIONS
• Sounds that you rely on as reminders or warnings may be aware of an unfamiliar character when using headsets. Be aware of how these sounds may vary in character so you can recognize them as needed.
• Long-term exposure to loud music may cause hearing damage. It is best to avoid high volume levels when using headset, especially for extended periods.
• Use caution when using your headset while operating a vehicle or any other activity that requires your full attention. Check and follow local laws regarding headset use. Some jurisdictions impose specific limitations, such as single earpiece configuration, on the use of such products while driving.
• This product conforms to all applicable EU directive requirements. The complete declaration of conformity can be found at www.bose.com/compliance

WARNINGS
• Contains small parts which may be a choking hazard. Not suitable for children under age 3.
• This product contains magnetic material.
• Long-term exposure to loud music may cause hearing damage. It is best to avoid high volume levels when using headset, especially for extended periods.
• Use caution when using your headset while operating a vehicle or any other activity that requires your full attention. Check and follow local laws regarding headset use. Some jurisdictions impose specific limitations, such as single earpiece configuration, on the use of such products while driving.
• This product conforms to all applicable EU directive requirements. The complete declaration of conformity can be found at www.bose.com/compliance

CLEANING
Your earbuds may require periodic cleaning:
• Ear tips: First, remove them from the earbuds and wash the tips with a mild detergent and water. Make sure you thoroughly clean and dry them before putting them back on the earbuds.
• Earbud nozzles: Clean only with a dry, soft cotton swab or equivalent. Never insert any cleaning tool into the nozzle.

REINIGUNG
Die Ohrstöpsel und Ohrhörer können gelegentlich gereinigt werden:
• Ohrstöpsel: Zuerst entfernen Sie die Ohrstöpsel von den Ohrhörern und waschen Sie sie mit einem milden Reinigungsmittel und Wasser. Stellen Sie sicher, dass Sie die Ohrstöpsel gründlich säubern und trocknen lassen, bevor Sie sie wieder auf die Ohrhörer setzen.
• Ohrhörer: Reinigen Sie die Ohrhörer mit einem trockenen, weichen Wattebauschwamm oder etwas Äthylalkohol. Führen Sie keine spitz zulaufenden oder scharfen Reinigungsmittel in die Ohrhörer ein.

Components
A. Charging case
B. Adjustable slider
C. In-line microphone and 3-button remote
D. Stay/Hear™ tips: Large (black)
E. Stay/Hear™ tips: Medium, installed (grey)
F. Stay/Hear™ tips: Small (white)
G. Carrying case

Connecting to an Apple Device
1 You can connect the earbuds to the standard 3.5 mm headphone jack on your iPhone, iPod or other Apple device.

Using the earbuds with your Apple device
The Bose® FreeStyle™ earbuds come with a small in-line microphone and 3-button remote for convenient control of your iPhone and iPod models. To control the volume, press and hold the +/– button. To answer or End call and play or pause a song or video, press and release the Answer/End button.
Note: Full controls may not be available for some Apple products.
Note: For information on using your earbuds with non-Apple devices, refer to www.bose.com

Importance of Proper Fit
When you wear the earbuds properly, they provide the comfort and clarity you expect from Bose.

2 Each tip is marked with either an L or an R to indicate which earbud it is for. Be sure to attach the left Stay/Hear™ tip to the left earbud and the right Stay/Hear™ tip to the right earbud.
3 Fitting the earbud to your ear
The earbuds have a soft Stay/Hear™ tip attached, allowing it to rest comfortably in the bowl of your ear. The wing part of the tip fits just under your ear ridge.

To determine if a tip is the right size:
1. Insert the earbud into the ear canal just enough so the earbud is snug but not tight.
2. Tilt the earbud back and press the tip wing under the ear ridge until it is secure. The tips should fit comfortably yet securely in the bowl of the ear.

4 Changing ear tips
Select the type and size of ear tip that provides you with the best comfort and fit.

1. Gently peel the edges of the attached tip away from the earbud, using care not to tear the tip.
CAUTION: To prevent damage, do not pull on the Stay/Hear™ wing.
2. Position the new edge of the new tip over the nozzle with the small slot over the nozzle hook.
3. Ease the base of the tip down around the base of the earbud until the tip feels secure.

Troubleshooting
Poor Sound Quality of Missing Audio Channels)
• Make sure the earbuds are securely plugged into the headphone jack of the Apple device.
• Adjust the bass and treble settings in the audio device.
• Try another audio device.

Microphone not working
• Ensure you are using a compatible Apple device (see list of compatible devices below).
• Make sure the earbuds are securely plugged into the headphone jack of the Apple device.
• Make sure the microphone opening on the back of the Answer/End button is not blocked.
• Try another phone call.
• Try another compatible Apple device.

Apple device is not responding to (remote) button commands
• Ensure you are using a compatible Apple device (see list of compatible devices below).
• Make sure the earbuds are securely plugged into the headphone jack of the Apple device.
• For multi-press functions, vary speed of button presses.
• Try another compatible Apple device.

 
For use with:
The remote and mic are supported only on iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (12GB, 16GB), and iPod nano (4th generation or later). The remote is also supported on iPod nano (4th generation or later). Apple is supported by all iPad and iPod models.
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™

For use with:
The remote and mic are supported only on iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (12GB, 16GB), and iPod nano (4th generation or later). The remote is also supported on iPod nano (4th generation or later). Apple is supported by all iPad and iPod models.
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™

For use with:
The remote and mic are supported only on iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (12GB, 16GB), and iPod nano (4th generation or later). The remote is also supported on iPod nano (4th generation or later). Apple is supported by all iPad and iPod models.
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™

For use with:
The remote and mic are supported only on iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (12GB, 16GB), and iPod nano (4th generation or later). The remote is also supported on iPod nano (4th generation or later). Apple is supported by all iPad and iPod models.
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™

For use with:
The remote and mic are supported only on iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (12GB, 16GB), and iPod nano (4th generation or later). The remote is also supported on iPod nano (4th generation or later). Apple is supported by all iPad and iPod models.
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™



Bitte nehmen Sie sich die Zeit, diese Kurzanleitung sorgfältig zu lesen und zu befolgen.
Weitere Informationen über die Ohrhörer finden Sie in der Bedienungsanleitung: <http://global.bose.com>
Nur USA: <http://Owners.Bose.com/freestyle>

Wichtige Sicherheitshinweise

ACHTUNG
• Bekannte akustische Hinweise- und Warnsignale können anders klingen, wenn Sie Headsets tragen. Machen Sie sich bewusst, inwieweit diese Signale sich von denen unterscheiden, die Sie in den entsprechenden Situationen erkennen.
• Lassen Sie das Headset nicht fallen, setzen Sie sich nicht darauf, und schützen Sie es vor Nässe.
WARNUNG
• Enthält kleine Teile, die verschluckt werden können und eine Erstickungsgefahr darstellen. Nicht geeignet für Kinder unter drei Jahren.
• Dieses Produkt enthält magnetische Materialien.
• Lauter Musik kann zu Gehörbeschäden führen. Wenn Sie hohe Lautstärke, insbesondere über längere Zeiträume, verwenden Sie das Headset vorsichtig.
• Seien Sie vorsichtig, wenn Sie das Headset während des Betriebs eines Fahrzeugs oder während Aktivitäten verwenden, die Ihre volle Aufmerksamkeit erfordern. Lesen und befolgen Sie die örtlichen Gesetze und Vorschriften für die Verwendung von Headsets in Ländern gemäß bestimmte Einschränkungen, zum Beispiel die Verwendung von einem einzigen Ohrhörer während des Fahrens.
• Dieses Produkt konform mit allen Anforderungen der Europäischen Union (EU-Richtlinien). Die vollständige Konformitätsklärung finden Sie unter www.bose.com/compliance

ACHTUNG
• Bekannte akustische Hinweise- und Warnsignale können anders klingen, wenn Sie Headsets tragen. Machen Sie sich bewusst, inwieweit diese Signale sich von denen unterscheiden, die Sie in den entsprechenden Situationen erkennen.
• Lassen Sie das Headset nicht fallen, setzen Sie sich nicht darauf, und schützen Sie es vor Nässe.
WARNUNG
• Enthält kleine Teile, die verschluckt werden können und eine Erstickungsgefahr darstellen. Nicht geeignet für Kinder unter drei Jahren.
• Dieses Produkt enthält magnetische Materialien.
• Lauter Musik kann zu Gehörbeschäden führen. Wenn Sie hohe Lautstärke, insbesondere über längere Zeiträume, verwenden Sie das Headset vorsichtig.
• Seien Sie vorsichtig, wenn Sie das Headset während des Betriebs eines Fahrzeugs oder während Aktivitäten verwenden, die Ihre volle Aufmerksamkeit erfordern. Lesen und befolgen Sie die örtlichen Gesetze und Vorschriften für die Verwendung von Headsets in Ländern gemäß bestimmte Einschränkungen, zum Beispiel die Verwendung von einem einzigen Ohrhörer während des Fahrens.
• Dieses Produkt konform mit allen Anforderungen der Europäischen Union (EU-Richtlinien). Die vollständige Konformitätsklärung finden Sie unter www.bose.com/compliance

REINIGUNG
Von Zeit zu Zeit sollten Sie die Ohrhörer reinigen:
• Ohrstöpsel: Nehmen Sie die Ohrstöpsel von den Ohrhörern ab und waschen Sie sie mit einem milden Reinigungsmittel und Wasser. Stellen Sie sicher, dass Sie die Ohrstöpsel gründlich säubern und trocknen lassen, bevor Sie sie wieder auf die Ohrhörer setzen.
• Ohrhörer: Reinigen Sie die Ohrhörer mit einem trockenen, weichen Wattebauschwamm oder etwas Äthylalkohol. Führen Sie keine spitz zulaufenden oder scharfen Reinigungsmittel in die Ohrhörer ein.

Komponenten
A. Ladefutteral
B. Einstellbarer Schieber
C. In-line-Mikrofon und Fernbedienung mit 3 Knöpfen
D. Stay/Hear™-Ohrstöpsel: Groß (schwarz)
E. Stay/Hear™-Ohrstöpsel: Mittel, installiert (grau)
F. Stay/Hear™-Ohrstöpsel: Klein (weiß)
G. Tragetasche

Connecting to an Apple Device
1 You can connect the earbuds to the standard 3.5 mm headphone jack on your iPhone, iPod or other Apple device.

Using the earbuds with your Apple device
The Bose® FreeStyle™ earbuds come with a small in-line microphone and 3-button remote for convenient control of your iPhone and iPod models. To control the volume, press and hold the +/– button. To answer or End call and play or pause a song or video, press and release the Answer/End button.
Note: Full controls may not be available for some Apple products.
Note: For information on using your earbuds with non-Apple devices, refer to www.bose.com

Using the earbuds with your Apple device
The Bose® FreeStyle™ earbuds come with a small in-line microphone and 3-button remote for convenient control of your iPhone and iPod models. To control the volume, press and hold the +/– button. To answer or End call and play or pause a song or video, press and release the Answer/End button.
Note: Full controls may not be available for some Apple products.
Note: For information on using your earbuds with non-Apple devices, refer to www.bose.com

Importance of Proper Fit
When you wear the earbuds properly, they provide the comfort and clarity you expect from Bose.

2 Each tip is marked with either an L or an R to indicate which earbud it is for. Be sure to attach the left Stay/Hear™ tip to the left earbud and the right Stay/Hear™ tip to the right earbud.
3 Fitting the earbud to your ear
The earbuds have a soft Stay/Hear™ tip attached, allowing it to rest comfortably in the bowl of your ear. The wing part of the tip fits just under your ear ridge.

To determine if a tip is the right size:
1. Insert the earbud into the ear canal just enough so the earbud is snug but not tight.
2. Tilt the earbud back and press the tip wing under the ear ridge until it is secure. The tips should fit comfortably yet securely in the bowl of the ear.

4 Changing ear tips
Select the type and size of ear tip that provides you with the best comfort and fit.

1. Gently peel the edges of the attached tip away from the earbud, using care not to tear the tip.
CAUTION: To prevent damage, do not pull on the Stay/Hear™ wing.
2. Position the new edge of the new tip over the nozzle with the small slot over the nozzle hook.
3. Ease the base of the tip down around the base of the earbud until the tip feels secure.

Troubleshooting
Poor Sound Quality of Missing Audio Channels)
• Make sure the earbuds are securely plugged into the headphone jack of the Apple device.
• Adjust the bass and treble settings in the audio device.
• Try another audio device.

Microphone not working
• Ensure you are using a compatible Apple device (see list of compatible devices below).
• Make sure the earbuds are securely plugged into the headphone jack of the Apple device.
• Make sure the microphone opening on the back of the Answer/End button is not blocked.
• Try another phone call.
• Try another compatible Apple device.

Apple device is not responding to (remote) button commands
• Ensure you are using a compatible Apple device (see list of compatible devices below).
• Make sure the earbuds are securely plugged into the headphone jack of the Apple device.
• For multi-press functions, vary speed of button presses.
• Try another compatible Apple device.

For use with:
The remote and mic are supported only on iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (12GB, 16GB), and iPod nano (4th generation or later). The remote is also supported on iPod nano (4th generation or later). Apple is supported by all iPad and iPod models.
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™

For use with:
The remote and mic are supported only on iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (12GB, 16GB), and iPod nano (4th generation or later). The remote is also supported on iPod nano (4th generation or later). Apple is supported by all iPad and iPod models.
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™

For use with:
The remote and mic are supported only on iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (12GB, 16GB), and iPod nano (4th generation or later). The remote is also supported on iPod nano (4th generation or later). Apple is supported by all iPad and iPod models.
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™

For use with:
The remote and mic are supported only on iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (12GB, 16GB), and iPod nano (4th generation or later). The remote is also supported on iPod nano (4th generation or later). Apple is supported by all iPad and iPod models.
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™

For use with:
The remote and mic are supported only on iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (12GB, 16GB), and iPod nano (4th generation or later). The remote is also supported on iPod nano (4th generation or later). Apple is supported by all iPad and iPod models.
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™



Dedicare il tempo che sia necessario per leer esta guida de inicio rápido y seguir atentamente estas instrucciones de seguridad importantes.
Para obtener información adicional sobre los auriculares, consulte la Guía del usuario: <http://global.bose.com>
Solo EE.UU.: <http://Owners.Bose.com/freestyle>

Instrucciones de seguridad importantes

PRECAUCIONES
• Los sonidos que usted interpreta como avisos o advertencias pueden presentar un carácter distinto del habitual al utilizar los auriculares. Recuerde que el modo en que puede variar la realización de estos sonidos de modo que los pueda reconocer cuando sea preciso.
• No deje caer los auriculares, no se siente sobre ellos y no los sumerja.
ALERTAS
• Contiene piezas pequeñas que pueden suponer riesgo de asfixia. No adecuado para niños menores de 3 años.
• Este producto contiene material magnético.
• La exposición prolongada a música a gran volumen puede causar daños auditivos. Evitar utilizar estos auriculares a un volumen alto, en especial durante largos períodos de tiempo.
Tenga cuidado al utilizar los auriculares mientras maneja cualquier vehículo o realiza cualquier actividad que requiera toda la atención. Lea y siga las leyes locales sobre el uso de auriculares. Algunas jurisdicciones imponen limitaciones específicas, como la configuración de un solo auricular, en el uso de estos productos mientras se conduce.
Este producto cumple con todos los requisitos aplicables de las Directivas de la UE. Encontrará la declaración de conformidad completa en www.bose.com/compliance

PRECAUCIONES
• Los sonidos que usted interpreta como avisos o advertencias pueden presentar un carácter distinto del habitual al utilizar los auriculares. Recuerde que el modo en que puede variar la realización de estos sonidos de modo que los pueda reconocer cuando sea preciso.
• No deje caer los auriculares, no se siente sobre ellos y no los sumerja.
ALERTAS
• Contiene piezas pequeñas que pueden suponer riesgo de asfixia. No adecuado para niños menores de 3 años.
• Este producto contiene material magnético.
• La exposición prolongada a música a gran volumen puede causar daños auditivos. Evitar utilizar estos auriculares a un volumen alto, en especial durante largos períodos de tiempo.
Tenga cuidado al utilizar los auriculares mientras maneja cualquier vehículo o realiza cualquier actividad que requiera toda la atención. Lea y siga las leyes locales sobre el uso de auriculares. Algunas jurisdicciones imponen limitaciones específicas, como la configuración de un solo auricular, en el uso de estos productos mientras se conduce.
Este producto cumple con todos los requisitos aplicables de las Directivas de la UE. Encontrará la declaración de conformidad completa en www.bose.com/compliance

REINIGUNG
Von Zeit zu Zeit sollten Sie die Ohrhörer reinigen:
• Ohrstöpsel: Nehmen Sie die Ohrstöpsel von den Ohrhörern ab und waschen Sie sie mit einem milden Reinigungsmittel und Wasser. Stellen Sie sicher, dass Sie die Ohrstöpsel gründlich säubern und trocknen lassen, bevor Sie sie wieder auf die Ohrhörer setzen.
• Ohrhörer: Reinigen Sie die Ohrhörer mit einem trockenen, weichen Wattebauschwamm oder etwas Äthylalkohol. Führen Sie keine spitz zulaufenden oder scharfen Reinigungsmittel in die Ohrhörer ein.

Komponenten
A. Pinza para ropa
B. Deslizador ajustable
C. In-line-Mikrofon und Fernbedienung mit 3 Tasten
D. Stay/Hear™-Ohrstöpsel: Groß (schwarz)
E. Stay/Hear™-Ohrstöpsel: Mittel, installiert (grau)
F. Stay/Hear™-Ohrstöpsel: Klein (weiß)
G. Tragetasche

Connecting to an Apple Device
1 You can connect the earbuds to the standard 3.5 mm headphone jack on your iPhone, iPod or other Apple device.

Using the earbuds with your Apple device
The Bose® FreeStyle™ earbuds come with a small in-line microphone and 3-button remote for convenient control of your iPhone and iPod models. To control the volume, press and hold the +/– button. To answer or End call and play or pause a song or video, press and release the Answer/End button.
Note: Full controls may not be available for some Apple products.
Note: For information on using your earbuds with non-Apple devices, refer to www.bose.com

Using the earbuds with your Apple device
The Bose® FreeStyle™ earbuds come with a small in-line microphone and 3-button remote for convenient control of your iPhone and iPod models. To control the volume, press and hold the +/– button. To answer or End call and play or pause a song or video, press and release the Answer/End button.
Note: Full controls may not be available for some Apple products.
Note: For information on using your earbuds with non-Apple devices, refer to www.bose.com

Importance of Proper Fit
When you wear the earbuds properly, they provide the comfort and clarity you expect from Bose.

2 Each tip is marked with either an L or an R to indicate which earbud it is for. Be sure to attach the left Stay/Hear™ tip to the left earbud and the right Stay/Hear™ tip to the right earbud.
3 Fitting the earbud to your ear
The earbuds have a soft Stay/Hear™ tip attached, allowing it to rest comfortably in the bowl of your ear. The wing part of the tip fits just under your ear ridge.

To determine if a tip is the right size:
1. Insert the earbud into the ear canal just enough so the earbud is snug but not tight.
2. Tilt the earbud back and press the tip wing under the ear ridge until it is secure. The tips should fit comfortably yet securely in the bowl of the ear.

4 Changing ear tips
Select the type and size of ear tip that provides you with the best comfort and fit.

1. Gently peel the edges of the attached tip away from the earbud, using care not to tear the tip.
CAUTION: To prevent damage, do not pull on the Stay/Hear™ wing.
2. Position the new edge of the new tip over the nozzle with the small slot over the nozzle hook.
3. Ease the base of the tip down around the base of the earbud until the tip feels secure.

Troubleshooting
Poor Sound Quality of Missing Audio Channels)
• Make sure the earbuds are securely plugged into the headphone jack of the Apple device.
• Adjust the bass and treble settings in the audio device.
• Try another audio device.

Microphone not working
• Ensure you are using a compatible Apple device (see list of compatible devices below).
• Make sure the earbuds are securely plugged into the headphone jack of the Apple device.
• Make sure the microphone opening on the back of the Answer/End button is not blocked.
• Try another phone call.
• Try another compatible Apple device.

Apple device is not responding to (remote) button commands
• Ensure you are using a compatible Apple device (see list of compatible devices below).
• Make sure the earbuds are securely plugged into the headphone jack of the Apple device.
• For multi-press functions, vary speed of button presses.
• Try another compatible Apple device.

For use with:
The remote and mic are supported only on iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (12GB, 16GB), and iPod nano (4th generation or later). The remote is also supported on iPod nano (4th generation or later). Apple is supported by all iPad and iPod models.
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™

For use with:
The remote and mic are supported only on iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (12GB, 16GB), and iPod nano (4th generation or later). The remote is also supported on iPod nano (4th generation or later). Apple is supported by all iPad and iPod models.
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™

For use with:
The remote and mic are supported only on iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (12GB, 16GB), and iPod nano (4th generation or later). The remote is also supported on iPod nano (4th generation or later). Apple is supported by all iPad and iPod models.
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™

For use with:
The remote and mic are supported only on iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (12GB, 16GB), and iPod nano (4th generation or later). The remote is also supported on iPod nano (4th generation or later). Apple is supported by all iPad and iPod models.
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™

For use with:
The remote and mic are supported only on iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (12GB, 16GB), and iPod nano (4th generation or later). The remote is also supported on iPod nano (4th generation or later). Apple is supported by all iPad and iPod models.
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™
• Made for iPod™, Made for iPhone™, and Made for iPad™



Prenez le temps de consulter attentivement ce guide de démarrage et respectez les instructions importantes consignées de sécurité.
Pour plus d'informations sur vos écouteurs, consultez le Guide du propriétaire: <http://global.bose.com>
USA uniquement: <http://Owners.Bose.com/freestyle>

Instrucciones de seguridad importantes

PRECAUCIONES
• Los sonidos que usted interpreta como avisos o advertencias pueden presentar un carácter distinto del habitual al utilizar los auriculares. Recuerde que el modo en que puede variar la realización de estos sonidos de modo que los pueda reconocer cuando sea preciso.
• No deje caer los auriculares, no se siente sobre ellos y no los sumerja.
ALERTAS
• Contiene piezas pequeñas que pueden suponer riesgo de asfixia. No adecuado para niños menores de 3 años.
• Este producto contiene material magnético.
• La exposición prolongada a música a gran volumen puede causar daños auditivos. Evitar utilizar estos auriculares a un volumen alto, en especial durante largos períodos de tiempo.
Tenga cuidado al utilizar los auriculares mientras maneja cualquier vehículo o realiza cualquier actividad que requiera toda la atención. Lea y siga las leyes locales sobre el uso de auriculares. Algunas jurisdicciones imponen limitaciones específicas, como la configuración de un solo auricular, en el uso de estos productos mientras se conduce.
Este producto cumple con todos los requisitos aplicables de las Directivas de la UE. Encontrará la declaración de conformidad completa en www.bose.com/compliance

PRECAUCIONES
• Los sonidos que usted interpreta como avisos o advertencias pueden presentar un carácter distinto del habitual al utilizar los auriculares. Recuerde que el modo en que puede variar la realización de estos sonidos de modo que los pueda reconocer cuando sea preciso.
• No deje caer los auriculares, no se siente sobre ellos y no los sumerja.
ALERTAS
• Contiene piezas pequeñas que pueden suponer riesgo de asfixia. No adecuado para niños menores de 3 años.
• Este producto contiene material magnético.
• La exposición prolongada a música a gran volumen puede causar daños auditivos. Evitar utilizar estos auriculares a un volumen alto, en especial durante largos períodos de tiempo.
Tenga cuidado al utilizar los auriculares mientras maneja cualquier vehículo o realiza cualquier actividad que requiera toda la atención. Lea y siga las leyes locales sobre el uso de auriculares. Algunas jurisdicciones imponen limitaciones específicas, como la configuración de un solo auricular, en el uso de estos productos mientras se conduce.
Este producto cumple con todos los requisitos aplicables de las Directivas de la UE. Encontrará la declaración de conformidad completa en www.bose.com/compliance

REINIGUNG
Von Zeit zu Zeit sollten Sie die Ohrhörer reinigen:
• Ohrstöpsel: Nehmen Sie die Ohrstöpsel von den Ohrhörern ab und waschen Sie sie mit einem milden Reinigungsmittel und Wasser. Stellen Sie sicher, dass Sie die Ohrstöpsel gründlich säubern und trocknen lassen, bevor Sie sie wieder auf die Ohrhörer setzen.
• Ohrhörer: Reinigen Sie die Ohrhörer mit einem trockenen, weichen Wattebauschwamm oder etwas Äthylalkohol. Führen Sie keine spitz zulaufenden oder scharfen Reinigungsmittel in die Ohrhörer ein.

Komponenten
A. Pinza para ropa
B. Deslizador ajustable
C. In-line-Mikrofon und Fernbedienung mit 3 Tasten
D. Stay/Hear™-Ohrstöpsel: Groß (schwarz)
E. Stay/Hear™-Ohrstöpsel: Mittel, installiert (grau)
F. Stay/Hear™-Ohrstöpsel: Klein (weiß)
G. Tragetasche

Connecting to an Apple Device
1 You can connect the earbuds to the standard 3.5 mm headphone jack on your iPhone, iPod or other Apple device.

Using the earbuds with your Apple device
The Bose® FreeStyle™ earbuds come with a small in-line microphone and 3-button remote for convenient control of your iPhone and iPod models. To control the volume, press and hold the +/– button. To answer or End call and play or pause a song or video, press and release the Answer/End button.
Note: Full controls may not be available for some Apple products.
Note: For information on using your earbuds with non-Apple devices, refer to www.bose.com

Using the earbuds with your Apple device
The Bose® FreeStyle™ earbuds come with a small in-line microphone and 3-button remote for convenient control of your iPhone and iPod models. To control the volume, press and hold the +/– button. To answer or End call and play or pause a song or video, press and release the Answer/End button.
Note: Full controls may not be available for some Apple products.
Note: For information on using your earbuds with non-Apple devices, refer to www.bose.com

Importance of Proper Fit
When you wear the earbuds properly, they provide the comfort and clarity you expect from Bose.

2 Each tip is marked with either an L or an R to indicate which earbud it is for. Be sure to attach the left Stay/Hear™ tip to the left earbud and the right Stay/Hear™ tip to the right earbud.
3 Fitting the earbud to your ear
The earbuds have a soft Stay/Hear™ tip attached, allowing it to rest comfortably in the bowl of your ear. The wing part of the tip fits just under your ear ridge.

To determine if a tip is the right size:
1. Insert the earbud into the ear canal just enough so the earbud is snug but not tight.
2. Tilt the earbud back and press the tip wing under the ear ridge until it is secure. The tips should fit comfortably yet securely in the bowl of the ear.

4 Changing ear tips
Select the type and size of ear tip that provides you with the best comfort and fit.

1. Gently peel the edges of the attached tip away from the earbud, using care not to tear the tip.
CAUTION: To prevent damage, do not pull on the Stay/Hear™ wing.
2. Position the new edge of the new tip over the nozzle with the small slot over the nozzle hook.
3. Ease the base of the tip down around the base of the earbud until the tip feels secure.

Troubleshooting
Poor Sound Quality of Missing Audio Channels)
• Make sure the earbuds are securely plugged into the headphone jack of the Apple device.
• Adjust the bass and treble settings in the audio device.
• Try another audio device.

Microphone not working
• Ensure