

Use your new Kenwood Citrus Juicer to squeeze the juice from citrus fruit eg oranges, lemons, limes and grapefruits.

before using your Kenwood appliance

- Read these instructions carefully and retain for future reference.
- Remove all packaging and any labels.

safety

- Switch off and unplug:
 - before fitting or removing parts
 - after use
 - before cleaning.
- Never let the power unit, cord or plug get wet.
- Never use a damaged appliance. Get it checked or repaired: see 'service'.
- Don't let the cord touch hot surfaces or hang down where a child could grab it.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use the appliance for its intended domestic use. Kenwood will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.

important

- **Don't press too hard on the cone or run for longer than 10 minutes - you may damage your juicer.**

before plugging in

Make sure your electricity supply is the same as the one shown on the underside of the appliance.

Important - UK only

- The wires in the cord are coloured as follows:
Blue = Neutral, Brown = Live.
- The appliance must be protected by a 3A approved (BS1362) fuse.

Note:

- For non-rewireable plugs the fuse cover **MUST** be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover is identified by colour and a replacement may be obtained from your Kenwood Authorised Repairer (see Service).
- If a non-rewireable plug is cut off it must be DESTROYED IMMEDIATELY. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.
- This appliance conforms to EC directive 2004/108/EC on Electromagnetic Compatibility and EC regulation no. 1935/2004 of 27/10/2004 on materials intended for contact with food.

before using for the first time

- 1 Wash the parts: see 'cleaning'.
- 2 Wrap any excess cord around the bracket on the underside of the power unit ①.

key

- ① dust cover
- ② cone
- ③ strainer
- ④ juice collector with pouring lip
- ⑤ power unit
- ⑥ cord wrap

to use your citrus juicer

- 1 Place the juice collector onto the power unit, hold the handle and turn clockwise until it locks ②.
- 2 Put the strainer inside the juice collector ③, then add the cone ④.
- 3 Cut the fruit in half. Then press each half down on to the cone and the juicer will operate automatically.
 - During use the cone may change the direction it rotates. This is normal and ensures that the maximum amount of juice is squeezed out of the fruit.
 - For best results hand roll the fruit on a worktop before juicing.
 - To help with juice extraction move the fruit from side to side.
- 4 To stop the juicer lift the fruit from the cone.
- 5 To pour the juice, remove the cone and strainer from the juice collector and pour using the pouring lip.
 - When juicing large quantities, empty the strainer regularly to prevent the build up of pulp and seeds. Empty the juice collector as required.

cleaning

- Always switch off, unplug and dismantle before cleaning.
- Replace the dust cover after use.

power unit

- Wipe with a damp cloth, then dry.

other parts

- Wash in hot soapy water, then dry.
- Alternatively they can be washed on the top rack of your dishwasher.

service and customer care

- If the cord is damaged it must, for safety reasons, be replaced by Kenwood or an authorised Kenwood repairer.

UK

If you need help with:

- using your appliance or
- servicing or repairs (in or out of guarantee)
- ☎ call Kenwood on **023 92392333** and ask for Customer Care. **Have your model number ready** – it's on the underside of the power unit.
- **spares and attachments**
☎ call 0870 2413653.
- **other countries**
Contact the shop where you bought your machine.
- Designed and engineered by Kenwood in the UK.
- Made in China.



**IMPORTANT INFORMATION
FOR CORRECT DISPOSAL OF
THE PRODUCT IN
ACCORDANCE WITH EC
DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.


guarantee (uk only)

If your machine goes wrong within one year from the date you bought it, we will repair it (or replace it if necessary) free of charge provided:

- you have not misused, neglected or damaged it;
- it has not been modified (unless by Kenwood);
- it is not second-hand;
- it has not been used commercially;
- you have not fitted a plug incorrectly; and
- **you supply your receipt to show when you bought it.**

This guarantee does not affect your statutory rights.

KENWOOD

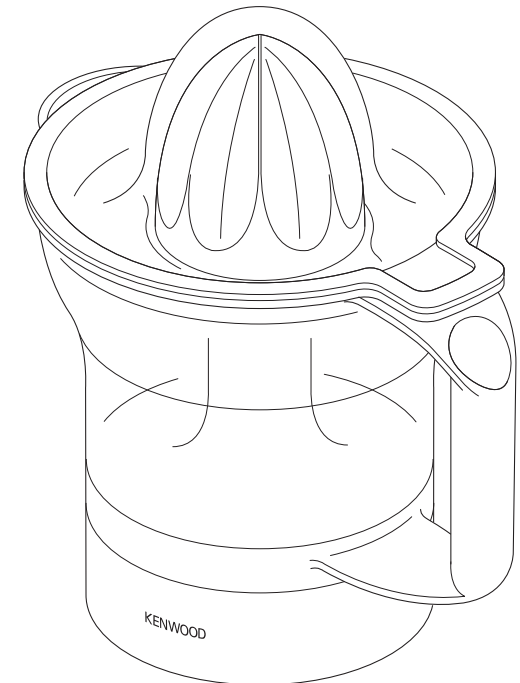

Head Office Address:
Kenwood Limited, New Lane, Havant, Hampshire PO9 2NH, UK
www.kenwoodworld.com

Designed and engineered by Kenwood in the UK

Made in China

19663/2

JE280

JE290