 


TW5

SYSTEME 2.1

USB / RADIO FM / LINE IN

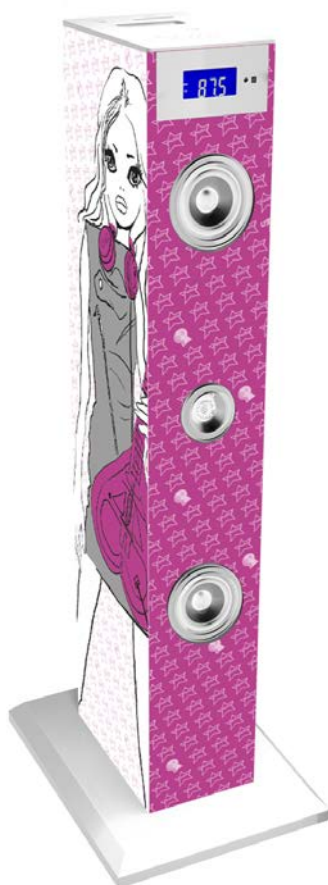

Please read carefully this manual and then keep it for future reference.

Contents

Getting Started	3
In the Box	3
Safety Instructions	3
Battery Safety	4
Description of Parts	4
Remote control	5
Setting Up your Tower	6
Powering Up	6
Setting Up clock	6

Contents

Sleep mode
Listening to the radio
Line in
Using USB input
Sing the songs
Do's and Don't
Care and Maintenance

Page

Getting Started

Remove the appliance from the box. Remove any packaging from the product. Place the packaging inside the box and either or dispose of safely.

In the Box

Tower speaker unit

Tower stand and screws 3sets

Remote control 1pc

Instruction manual 1pc

Microphone 1pc

3.5mm cable 1pc

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge. They should be given supervision and instruction in the use of the appliance by a person responsible for their safety. Ensure the appliance is not too close to heat emitting appliances or placed in direct sunlight. Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliances to the mains power supply. Do not leave the appliance unattended whilst connected to the mains power supply. Do not immerse the appliance in water or any other liquids. It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired. Close supervision is required when using this appliance near children.

Never leave the appliance within reach of children. Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place the user at serious risk.

This appliance is intended for household use only and should not be used for industrial or commercial purposes.

Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way. Do not use this appliance for anything other than its intended use. This appliance must be placed on a stable, heat resistant surface. Do not push objects into any openings as damage to the appliance

and/or electric shock may occur. Do not use this product in wet or bad weather conditions. This product is not a toy. Do not play music at excessive levels especially near children.

Battery Safety Always...


Ensure the battery compartments are secure. Only use the batteries recommended. Ensure correct fit of batteries, observing the plus and minus marks on both the battery and compartment. Replace a full set of batteries at one time. Store unused batteries in their packaging and keep away from metal objects that may cause a short circuit. Remove dead batteries from appliances that will not be used again for a long time. Supervise children with batteries at all times. Remember to keep button cell and AAA batteries away from small children as they can easily be swallowed. Seek medical attention if batteries are swallowed.

Never...

Dispose of batteries in a fire. Attempt to recharge ordinary batteries.


Description of Parts

1. Remote Place
2. Mobile Stand
3. Line in
4. Earphone
5. USB slot
6. MIC Volume
7. Skip backward
8. Standby
9. Function
10. Volume+
11. Volume-
12. Skip forward
13. Play/Pause
14. Microphone stand

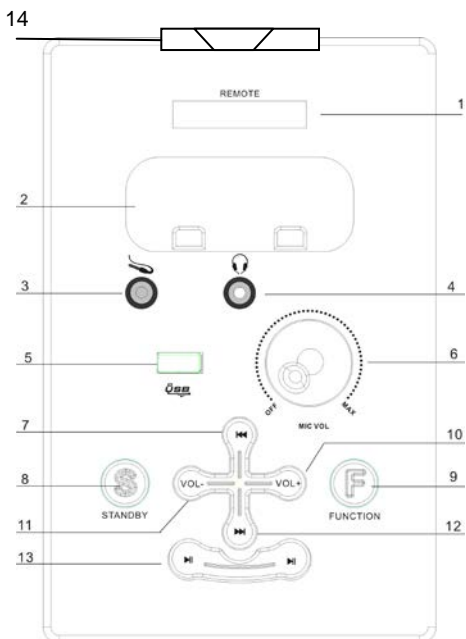


Back Panel

 1. POWER ON/OFF
2. AC cable
3. Microphone port

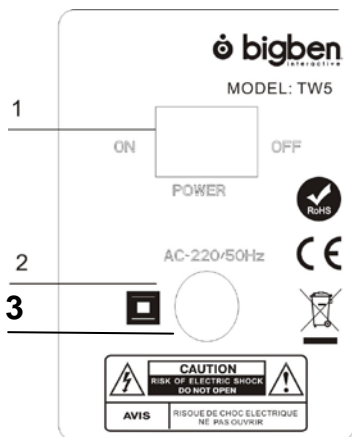

Remote Control

 
1. Power
2. Mute
3. USB
4. Line in
5. FM
6. Previous
7. Play/pause
8. Next
9. Memory
10. Menu up
11. Menu down
12. Treble+
13. Bass+
14. Volume+
15. Treble-
16. Bass-
17. Volume-

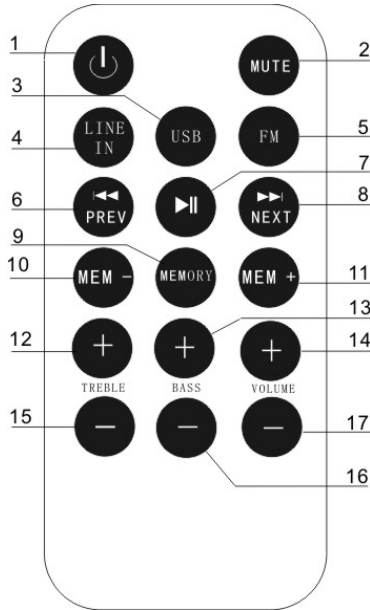

Using the Remote Control the Battery

Pull the clear tab from the battery compartment at the base (straight) end of the remote.

 If your remote becomes intermittent or you find you have to move nearer the unit to operate, the battery probably needs to be replaced. To replace the battery, slide the battery holder from the base of the remote control. Remove the battery and replace with a 3Volt Lithium Cr2015 battery ensuring the +side is on the underside of the holder as you slide it back into the compartment.

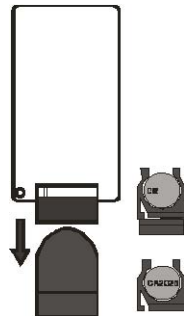


Attaching the Base

Setting up Your Tower

Carefully take the tower body and base out of the packaging.

 1. Take the screws and washers out.
2. Attach the base to the body aligning the three holes in the base with three holes in the tower.
3. Screw the base into the body.
4. Stand the tower upright on the floor. The appliance is now ready for use.

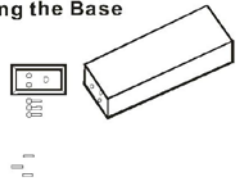


Power

Place the unit in the desired position and unravel the mains cable. Insert the cable into the supply socket and switch on if applicable.

Setting Clock

 After the unit is plugged into a mains supply or mains power failure, the display will show the "0:00" on the LCD display. The unit should be in standby mode to set the current clock.



1. Press MEM/TIME button, the digits for the display will blink.
2. Press the PREVIOUS/NEXT button repeatedly until correct hour is set. Press the MEM/TIME to confirm.

The hour setting; the minute digits on the display will blink.

3. Press the PREVIOUS/NEXT button repeatedly until correct minute is set. Press the MEM/TIME to confirm the minute setting.

Setting Alarm

Press and hold MEM/TIME button in shutdown state, the display will flash ON/OFF to select setting alarm or canceling alarm.

Press PREVIOUS/NEXT to select ON, and the display will blink.

Press PREVIOUS/NEXT button repeatedly to set hour. Press MEM/TIME to confirm, then press PREVIOUS/NEXT to set minute.

Press MEM/TIME to confirm.

The volume would turn up from 0 to 25 gradually.

Listening to the radio

1. Press the button on the unit or the remote control to select RADIO mode. The unit will be in FM radio mode.
2. Select the desired radio station by pressing the PREVIOUS/NEXT button.
3. Press and hold PREVIOUS/NEXT button for 2 seconds, The unit will automatically start and search the frequencies for the previous or next strong station and stop on that station.
4. Once you find a station you want to save, press the MEM button on the remote control, "P01" will be shown on the display, press M-up or M-dn until the desired memory position number appears on the display. Press the MEM again to confirm and save the current station.



Using the Line in

Analogue sound signals from other sources can input to the speaker. To select the LINE function button on the tower or repeatedly press the source button on the remote control until the display shows LINE. If you connect with the smartphone. Please put on the mobile stand on the tower top panel.

Line in Jack

Requires a 3.5mm cable .



1. Connect a 3.5mm cable to the jack. Connect the other end of the 3.5mm cable to an Mp3 player or other audio source.
2. Press the power button to turn the unit on.
3. Press the function button or source button on the remote to switch to Line In mode.
4. Use the controls on the connected device to begin playing audio routed through the unit.



Listen by earphone

If need listen the music by earphone, please put the earphone cable to the the Volume.



jack. Please turn down

Using the USB input



1. Plug your USB flash drive to the slot

2. Press FUNCTION once into the USB mode, the unit can play automatically.

3. Press MENU + /MENU - to select which folder you want to open. The display will shows the number of folder first, owns the number of track.

5. Press PREVIOUS/NEXT to select track.

Sing by Microphone

1. Connect the microphone cable to the microphone jack.(on the back)
2. Loading the USB device or connect your smartphone via the 3.5mm cable into the Line in jack.
3. Put the mobile stand on the tower top panel. Put the smartphone on the mobile stand.
4. Turn up the MIC VOL
5. Can begin to sing.

Notes

Always unplug the appliance when not in use and before cleaning.

Do not play music at excessive volume levels as damage to hearing and or the equipment may occur. Do not use this unit in wet or damp conditions.

Care and Maintenance

Always disconnect the unit from the mains power supply before cleaning. Clean the appliance with a soft, damp, lint free cloth. Do not use abrasives or harsh cleaners.

- Don't throw the electrical and electronic appliances into the usual dustbin.
- Bring them to a collecting point.
- Some parts contained in these appliances may be dangerous for health and environment.



Imported by BIGBEN INTERACTIVE S.A.

CRT2 RUE DE LA VOYETTE

59818 LESQUIN CEDEX

France

www.bigben.eu

Made in China

