## INSTRUCTION MANUAL












 




Barril CL 35 Bronze (104874) Barril CL 35 Grey (104875) Barril CL 35 Green (104877) Barril CL 35 Antique Gold (104878)

Barril CL 35 Black Gold(104876)

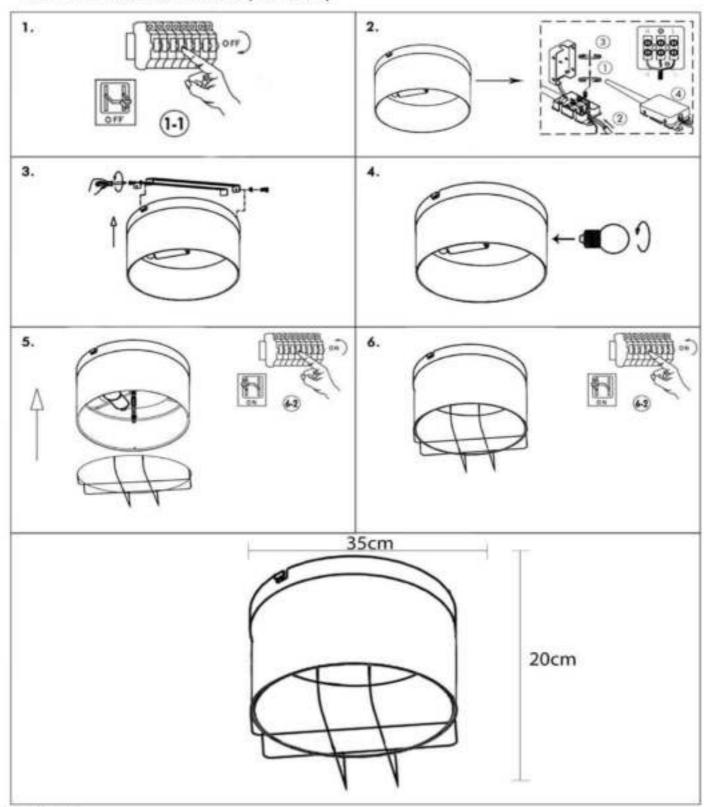






## SAFETY INSTRUCTION

Please study the instruction manual and below information carefully before installing or using this product. Please keep this user manual for further reference

- 1. The luminaires may only be installed by authorized and qualified technicians according the valid regulations for electrical installation.
- Maintenance of the luminaires is limited to their surfaces. During maintenance no moisture can come into contact with any areas of the terminal connections or voltage control parts.
- 3 The electrical supply must be switched off at the outset, preferably by means of a switch in the distribution box, before any installation, maintenance or repair work is undertaken.
- Exterior lighting must not be installed during rain.
- Take account of the minimal separation distance from other objects and the room required around the fitting.
- If in any doubt, consult a professional, taking local installation requirements into account. Some countries stipulate that lighting may be installed only by registered installers.
- Clamping screws in electrical connections must be adequately tightened. This is particularly the case with 12V law voltage conductors.
- 8. When replacing a halogen lamp, wait for it to cool, for a minimum of 5 minutes.
- 9. Clean with a clean, dry cloth or brush, use no solvents or abrasives. Avoid dampness on all electrical components
- 10. Take account of all available technical information.
- 11. Take note of the symbols when connecting wires:
  - N = Neutral
- L =Live
- -Earth
- 12. Meaning of symbols:

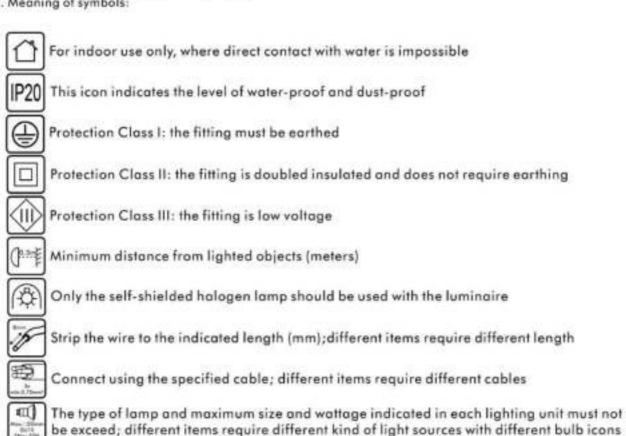



The luminaire can be used in combination with a dimmer



The reference light angle and light space of the luminaire



This luminaire cannot be disposed together with normal domestic waste in standard rubbish can, but you have to bring it to a staging area for electrical waste

The armature is designed to work only with the indicated voltage. Different items require



different working voltage.