

# MELROSE GAMING KEYBOARD

## FUNCTION DESCRIPTION OF FN + COMBINATION KEYS

FN+F1	Open media player	FN+F11	Lock all keys
FN+F2	Decrease volume	FN+F12	Calculator
FN+F3	Increase volume	FN+ESC	Light restoration
FN+F4	Mute/unmute sound	FN+W	A/SD/W:D-key conversion
FN+F5	Stop	FN+WIN	Lock/unlock WIN
FN+F6	Previous	FN+SCRLK	Turn off the light
FN+F7	Play/pause	FN+ UP	Brightness+
FN+F8	Next	FN+ DOWN	Brightness-
FN+F9	Open e-mail program	FN+ RIGHT	Speed+
FN+F10	HOME	FN+ LEFT	Speed-



## 25 ANTI GHOSTING KEYS

Some keyboard keys do not work when pressing multiple keys at the same time. Keystrokes that don't appear on the computer or appear to have disappeared are called "ghosting." Imagine you're playing your favorite video game, but you can't run and shoot (like pressing a, w, and g at the same time). Anti-ghosting ensures that your keys are sent in the exact order they were pressed.



MECHANICAL  
KEY SWITCHES



QWERTY



1.5M  
USB CABLE



RGB



# MELROSE GAMING KEYBOARD

## FUNCTIE OMSCHRIJVING VAN FN + COMBINATIE TOETSEN

FN+F1	Open media player	FN+F11	Alle toetsen op slot
FN+F2	Volume -	FN+F12	Calculator
FN+F3	Volume +	FN+ESC	Licht herstel
FN+F4	Mute/unmute geluid	FN+W	A/SD/W:D-toets conversie
FN+F5	Afspelen stop	FN+WIN	Lock/unlock WIN
FN+F6	Afspelen vorige	FN+SCRLK	Licht uitzetten
FN+F7	Afspelen/pauze	FN+ UP	Helderheid +
FN+F8	Afspelen volgende	FN+ DOWN	Helderheid -
FN+F9	E-mailprogramma openen	FN+ RIGHT	Snelheid +
FN+F10	HOME	FN+ LEFT	Snelheid-



## 25 ANTI GHOSTING KEYS

Sommige toetsen op het toetsenbord werken niet wanneer u meerdere toetsen tegelijk indrukt. Toetsaanslagen die niet verschijnen op de computer of lijken te zijn verdwenen worden "ghosting" genoemd. Stel je voor dat je je favoriete videospel speelt, maar je kunt niet rennen en schieten (zoals op a, w, en g op hetzelfde moment). Anti-ghosting zorgt ervoor dat je toetsen worden verzonden in de exacte volgorde als ze werden ingedrukt.



MECHANICAL  
KEY SWITCHES



QWERTY



1.5M  
USB CABLE



RGB

