


## Safety Cautions

Before using, please carefully read the safety checkpoints.

### Caution

- 1 - Not be washed with water because the electric and electronic components in the product. Can be cleaned by wet wipers on its surface.
- 2 - Avoid direct casting of sunshine on the induction receiver window.
- 3 - During the open-up process of the cover, don't press the cover with force.
- 4 - Dismantling, repair and alteration of the product are absolutely banned.
- 5 - When battery is going to be replaced, please change with 6 new one in same time.
- 6 - Don't put anything on the dustbin cover.

## Bin composition

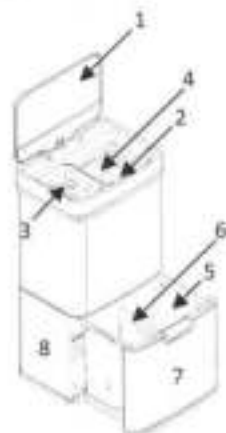

N°	Designation	Commentary
1	Cover	Automatic or semi-automatic induction opening
2	Induction window and lid opening/closing buttons	Automatic or manual open / close function
3	Removable inner bin 4 liters(Optional)	Provided with a lid + bag attachment ring, fits in the visible opening support of the lid, used for household wastes, inside as outside from the bin
4	Removable inner top bin 40 liters	Cover access
5	Removable inner bottom bin 25 liters	Manual access, with handle
6	Removable tray separator	Choice to fix it into the top or the bottom 30 liters inner bin.
7	Bin body	
8	Sliding drawer on wheels	



01



02

	Dimensions L x W x H (cm, +/-1cm)	Capacity (L)	Power
01	42 x 31,5 x 74.5	62	6 LR6 size AA batteries
01	42 x 31,5 x 82.5	72	6 LR6 size AA batteries
02	42 x 32,5 x 74.5	62	6 LR6 size AA batteries
02	42 x 32,5 x 82.5	72	6 LR6 size AA batteries

## Use instructions

- 1 - Open the battery cover at the bottom of the lid and insert 6 size AA batteries according to the correct polarities, then close the battery cover.
- 2 - Turn on the power switch on the rear cover.
- 3 - When you need to throw the garbage out, simply hover your hand above the lid within 15 cm and it will open. The lid will soft-close after 5 seconds of inactivity. The cover will keep open, if your hand or object stays in the induction area.
- 4 - To deal with the frequent switch of the dustbin, press the « open » button at the induction window to keep the lid open. Press the « close » button to close the lid and then the circuit resumes its automatic induction function.
- 5 - Pull the inner bottom bin to deposit the recycled waste there. The inner top bin is used for non-recycled households wastes.
- 6 - We advise the use of 50 liters bin liners regarding health issue and bad smell.