


Thank you for choosing RK products. In order to enable you to quickly understand and count the products, please be sure to read this operation guide carefully. If you have any questions, please visit <http://www.rkgaming.com> for more help.


To ensure proper use, please recharge the product before using it for the first time.

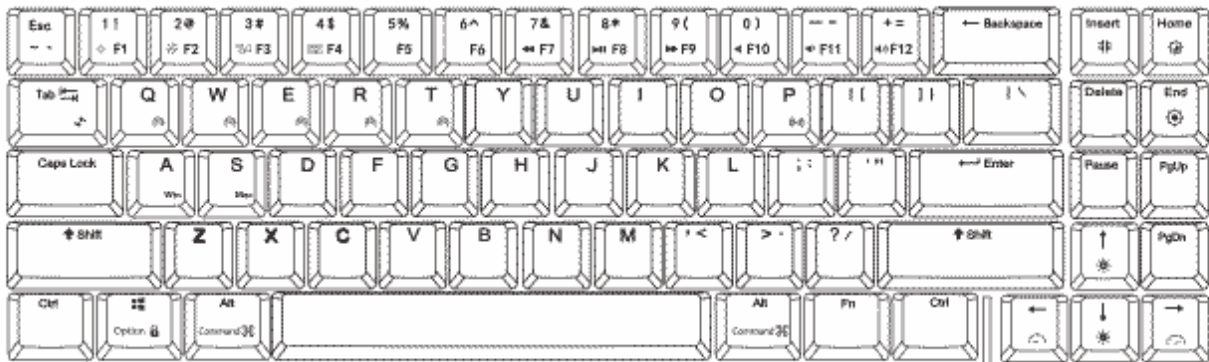

| | |
|-----------|---|
| SIZE | 330(L)*102(W)*37(H)±2mm |
| LAYOUT | 71 KEY |
| BACKLIGHT | LED |
| MATERIAL | ABS |
| AXIAL | BLUE/RED/BROWN/BLACK |
| MODE | BT 3.0/ USB |
| WARRANTY | 12-MONTH WARRANTY (NON HUMAN DAMAGE) |

| |
|-----------------------------|
| PACKAGING CONTENT |
| 1x KEYBOARD 1xUSB-Cable |
| 1x QUALITY INSPECTION LABEL |
| 1x USER'S MANUAL |

| |
|--|
| SYSTEM SUPPORT |
| WINDOWS XP/VISTA/7/8/10, IOS, MACOS, LINUX, ANDROID |

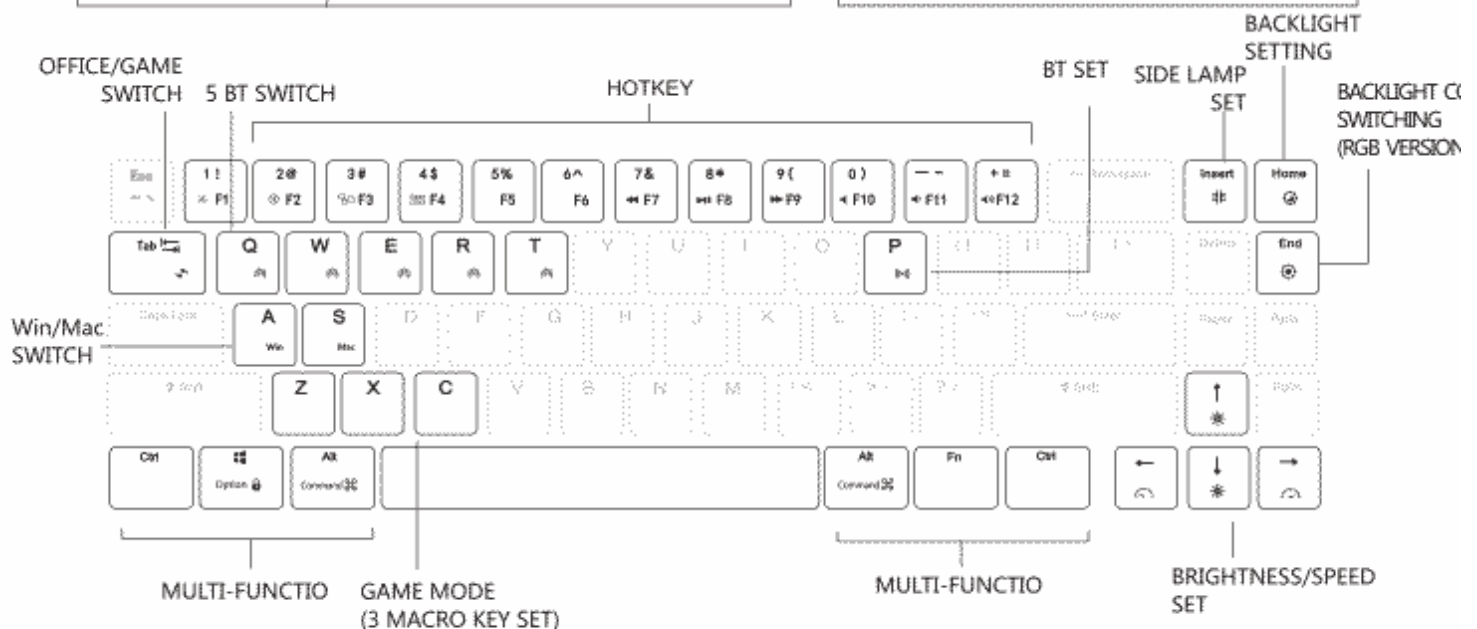

Dual System Support

Fn+A Switching to Windows OS Mode.(Please refer to the table below for functions)

Fn+S Switching to Mac OS Mode.(Please refer to the table below for functions)

| | Win OS | Mac OS | | Win OS | Mac OS |
|------|--------|--------|-------|--------|--------|
| Fn+1 | F1 | ☀ | Fn+7 | F7 | ⏪ |
| Fn+2 | F2 | ☀ | Fn+8 | F8 | ⏩ |
| Fn+3 | F3 | 🗨 | Fn+9 | F9 | ➡ |
| Fn+4 | F4 | 🗨 | Fn+10 | F10 | ⏪ |
| Fn+5 | F5 | — | Fn+11 | F11 | ⏪ |
| Fn+6 | F6 | — | Fn+12 | F12 | 🔊 |

| | |
|---------------|------------------------|
| Fn+Ctrl(left) | F1-F12 & number switch |
| Fn+A | Win mode |
| Fn+S | Mac mode |
| Fn+P | BT set |
| Fn+Win | Lock win key |
| Fn+Home | Backlight set. |
| Fn+ Insert | Sidelights set. |
| Fn+z/x/c | 3 macro key set |
| Fn+Tab | Office/Game switch |

FN+Ctrl(Left) : F1-12 & Nuber function switching

Backlight Setting

FN+HOME Cyclic switching of 17 backlighting effects

FN+INS Sidelight effect cycle switching, support off

FN+END Backlight color switching (**Tips** : RGB-light version only, if you buy single-light Version, this feature is not supported)

Fn+↑ Add backlight brightness

Fn+← Decrease Backlight speed

Fn+↓ Decrease Backlight brightness

Fn+→ Add Backlight speed

BT/USB Set

Fn+P (Click) BT/USB mode switch,Keyboard backlight flickers several times when switching, that is to say, the switch is successful.

Fn+P (Press 3 sec) , BT connection mode,The P button flashes when connected, and the P button stops flashing after the connection is successful.

Fn+Q/W/E/R/T Support 5 BT connections, you can switch at any time.

BT connection method

- 1.Open the back power switch;
- 2.Fn + P (Clicks) Switch to BT mode, the keyboard backlight flashes multiple times when switching.
- 3.Fn+Q/W/E/R/T , Choose any BT,such as Fn+Q. When the selection is successful, the keyboard backlight flashes multiple times. (If there is no response, it means

4. **Fn+P (Press 3 sec)**, then the P key will continue to flash, indicating that BT pairing mode has been entered;
5. Computer/Mobile Search and connect to the device named "RK BT Keyboard". After successful connection, P key Stop flashing and finish.

Tips: If you are using a BT connection, switch the keyboard to BT mode; if you are using a data cable connection, switch the keyboard to USB cable mode. Otherwise, the keyboard will not work properly.

GAME MODE SET(MACRO KEY SET)

Fn+Tab:office/Game switch, The keyboard backlight flashes multiple times during switching, and the key macro recording takes effect only in the game mode.

Fn+Z/X/C (Press 3 sec) : Set key macro

Fn+Z/X/C (Click) : Turn on/off the corresponding macro key

MACRO KEY SET METHOD

1. **Fn+Tab** switch to game mode, the keyboard backlight blinks multiple times during switching.
2. **Fn+Z/X/C(press 3 sec)**Select a group of macro key (such as Fn+Z). At this time, the Caps and Win keys will continue to flash, indicating that macro recording has been entered. (If there is no response, it means that the game mode is not entered correctly, please repeat step 1)
3. Set the sequence of keys to be triggered, click on the sequence of keys to be triggered, and support up to 32 combos.
4. **Fn+Z (press 3 sec)**, Save. At this time, the Caps and Win keys will stop flashing and finish.

MACRO BUTTON USAGE

1. **Fn+Tab** Switch to game mode , the keyboard backlight flashes multiple times during switching.
2. **Z/X/C:**Click the corresponding macro button, and click to trigger the corresponding macro key function. (If there is no response, it means that the game mode is not entered correctly, please repeat step 1)

Tips: Before using the macro key, please set the macro key first.

Other settings

Fn+Space(press 3 sec):Reset

Fn+Win:Lock/unlock windows key

About charging

1. When charging, the space bar red backlight will light up.
2. When full, the space bar red backlight goes out.
3. If there is no operation for 1 minute, the keyboard backlight automatically turns off and goes to sleep (saving power). At this point, press any key to wake up and continue to use.