



**PureVibe Type Pulsing Rabbit Clitoris & G-Spot Vibrator**

# FEATURES

- Material: silicone outside and ABS inside.
- Diameter: 1.37"/3.5cm(max).
- Total Length: 8.66"/22cm.
- Charging Time: about 2hrs.
- Working Time: about 80mins.
- Max Noise Level: <50dB.
- Vibration Patterns: 10 Impulse Modes(head)+10 Modes(rabbit ears).

# FUNCTIONS

- ◆On/Off button (4): long press 3s to turn on or off the toy.
- ◆Button (3): after turning the toy on, short press to change the motor's vibration modes in head of the rabbit ears(2), 10 vibration modes.
- ◆Button (5): after turning the toy on, short press to change the impulse modes(1), 10 impulse modes.
- ◆Two functions work individually.
- ◆Recharging hole(6): when charging, the light is flashing, when full of charging, the blue light stops flashing.

# Maintenance

1. Wash the product with normal temperature water and shower gel after use.
2. Wipe dry with a towel after washing, and then store in a ventilated, cool and dry place.
3. Full charge storage at the normal temperature, avoid high temperature and dirt. Do not place direct sunlight.
4. Please charge once every three months to avoid ageing of battery if not used for long time.

# Warning:

- (1) Please charge the toy before use.
- (2) Please only use the water-soluble lubricants if need during use. Hand cream or silicone soluble lubricant may damage vibrator surface permanently. Please clean vibrators thoroughly after using, especially using lubricants.
- (3) Before using, please do read the instruction first.
- (4) Keep away from children, keep out reach of children.
- (5) Pregnant woman need to consult doctor before use.
- (6) Do not use if the silicone layer broken.

Attention: Do not share a same toy with others, since toy is belong to the personal hygiene product.

# FAQ

- (1) toy's vibrator can not work when long press the button but the toy can not turn on?

Normally, it is power shortage, please recharge.

(2) The blue LED light can not turn on when vibrator is charging?

Make sure to connect vibrator and charging device correctly, check, reconnect power supply and DC plug, or make sure if vibrator is fully charged.

(3) Please shut down and restart when the program error occurs.

## **Cleaning, Storage, Safety**

(1) Please thoroughly clean vibrator every time before and after use. Using massager special cleaner to clean is the best choice, also you can use warm water and antibacterial soap.

(do not use the hot water, its temperature is over 80°C), then rinse residues using clear water, finally gently pat it with a dry towel or non-woven paper until vibrator totally dry.

(2) Please do not use cleaner including alcohol, gasoline, acetone.

(3) To avoid vibrator directly exposed to high temperature or sunshine.

(4) Please keep vibrator in clean, dry place, and separate it from other vibrators.

## **Warranty**

(1) One year warranty from the date of purchase, including product quality issues caused by product material, manufacturing process and product function. Please contact merchant (who you purchase the toy from), the merchant is responsible for the free replacement of new products for you.

(2) Warranty is not including incorrect operation, accidental fall, long-term worn or issues caused by dismounting products.

## **Remarks:**

Please read all the following safety information before using, or it may result in fire, electric shock, injury, or damage to products or other property.

1. This product is only suitable for adults and it is prohibited of minors to use it.

2. Please stop using the product if there is any discomfort.

3. Regular inspection is necessary. Please stop using it if there is any damage.

4. This product contains sensitive electronic components. If the battery is dropped, burned, pierced or squeezed, it may be damaged. If you suspect that the product or battery is damaged, please stop using it. Because it can cause overheating or injury.

5. Do not attempt to replace the battery by yourself. The lithium battery of the product should be replaced by manufacturer or an authorized service provider. Improper replacement or repair may damage the battery, causing overheating or injury. The battery needs to be removed before the product is discarded. The battery should be powered off before removing, and the battery needs to be disposed of safely, and please recycling it or disposed of separately from household waste. Do not incinerate the battery.

6. To charge the product, using the included cable in a power adapter that complies with applicable national regulations or one or more of the following: EN 301489-34, IEC 62684, YD/T 1591-2009, CNS 15285, ITU L.1000 Or other applicable mobile phone power adapter inter operability standards. Charge only with adapters that comply with applicable international and regional safety standards (including IEC 60950), use damage cables, chargers, or charging in a humid environment can result in fire, electric shock, injury person or something others. Please be sure fully plugged into adapter when using USB charging.

7. The product meets applicable surface heat standards and limits. Even if these standards are met, prolonged exposure to hot surfaces can also cause discomfort or injury. Be especially careful if your body has conditions that affect your body's ability to sense heat. Must be careful when using it for people who are not sensitive to heat.

## Packaging Details:

Gift box, User Manual, Device, USB Data Cable.

