 



Eggy Children Camera

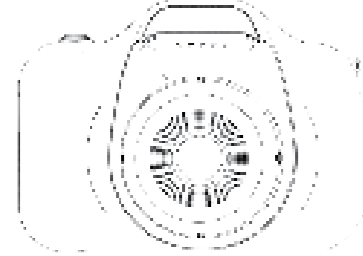

User Manual

For any inquiries or comments concerning our products, please send an email to sinohrd@yeah.net, and we will respond to you as soon as possible.

 Product Structure

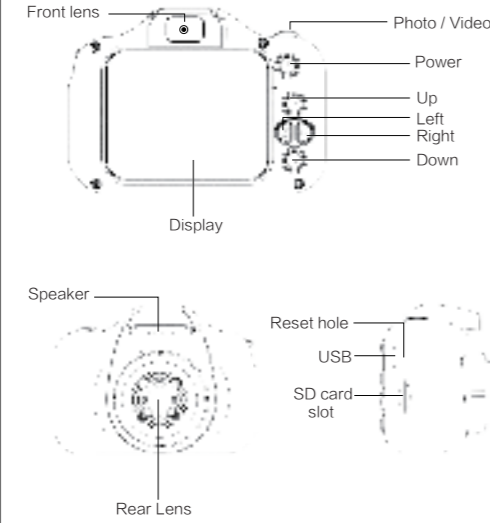

- 1 -

Button Function

1. Photo / Video

① In video mode, short press to start video recording, short press again to stop recording; ② In photo mode, short press to take a photo. ③ Confirm button in menu mode.

2. Power

① Power on / off; ② Exit button in menu mode.

3. Up

① Press to select the option upwards in the menu mode;
② Photo frame selection button in photo shooting mode;
③ Delete a single file in file browsing mode

4. Left

Press to select the option leftwards in the menu mode.

5. Right

① Press to select the option rightwards in the menu mode;
② Lens switching button in photo shooting mode and Video Recording Mode.

6. Down

① Press to select the option downwards in the menu mode;
② Photo frame selection button in photo shooting mode;
③ Delete all files in file browsing mode

7. Display

2 inches color display;

- 2 -

8. Speaker

Play the sound of videos or audio files.

9. Lens

Viewfinder

10.USB

USB interface:

① for data transmission when connecting PC;
② for providing power or battery charging when connecting external power supply.

11.SD card slot

Slot for installing the SD card

12.Reset hole

If there is a white screen or a crash, take the fine needle into the reset hole can resume normal.

Basic Operation Instructions of Photo Shooting / Video Recording

1. Power On / Off

Long press the power button to turn it on. The blue indicator will light up when turned on;

Long press the power button again to turn it off. The blue indicator will be off.

2. Mode Setting

Short press "Up", "Down", "Left", "Right" to select the corresponding mode. Then short press the "Photo / Video" button to enter. Short press the "Power" button to exit.

- 3 -

3. Video Recording Mode

Short press the "Photo / Video" button to start video recording. The indicator starts to flash, indicating that the recording is in progress.

4. Photo Shooting Mode

Short press the "Photo / Video" button to start taking a picture. The indicator flashes once when taking a picture, indicating that the photo is completed.

5. Storage mode

Connecting the camera to your computer via the USB cable will enter the storage mode, then you can view the photos or videos you have taken on your computer.

Battery Usage

1. Please refer to the following illustrations for battery status:



1. Power On / Off

Long press the power button to turn it on. The blue indicator will light up when turned on;

Long press the power button again to turn it off. The blue indicator will be off.

 
2. Mode Setting

Short press "Up", "Down", "Left", "Right" to select the corresponding mode. Then short press the "Photo / Video" button to enter. Short press the "Power" button to exit.

- 4 -

NOTE: If the device goes down due to improper operation, or have a white screen, flower screen, crash, etc problems.

Take the fine needle into the reset hole of the camera (as the picture shows) or select "Sys. Reset" in the function settings, and then turn it on again. In this way, the problem can be solved.

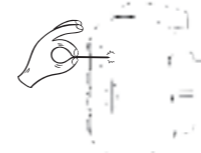

Specification

Display	2 inches color display
Lens	Fixed lens with 100° angle
Storage	Mini SD Card , Max 32G
Language	Russian, English, Chinese (Simplified), Chinese (Traditional), Korean, Japanese, etc.

- 5 -

Resolution	1080P, 720P, VGA
Time mark	On / Off
Capture timer	Off, 2s, 5s, 10s
Photo frame	Normal, Background
Delete	Delete one photo, Delete all
Formatting	Cancel / Confirm
Charging voltage	DC-5V
Battery capacity	600mAh
Working time	2-3H (about 2000 photographs)
Charging time	2H
Supporting system	Windows me/2000/2003/XP/vista/Win7; Mac OS; Linux
Frequency	50HZ, 60HZ
System reset	Cancel / Confirm
Game	Snake, Tetris, Sokoban

- 6 -

Troubleshooting

1. The display does not respond to boot

Charge the camera for more than 1 hour before using

2. Device crash

Insert the fine needle into the reset hole of the camera to restore normal

3. The camera can not read the TF card when connected to the PC

A. Reconnect the camera and PC

B. Replace the data cable

Package Contents

1 x Kids Cameras

1 x Lanyard

1 x Cartoon Case

1 x USB Charging Cable

1 x 16GB Memory Card

1 x User Manual

Contact Us

For any inquiries or comments concerning our products, please send an email to sinohrd@yeah.net, and we will respond to you as soon as possible.

- 7 -