

Sina

Nail Drill DR-298 grey

SI-MA-028-G



Follow all safety precautions in this manual to ensure safe use.



Thank you for your trusting in Sina

List of contents

1. Safety instructions.....	3
1.1 Symbols	3
1.2 General safety instructions	4
2. Device description	5
3. Usage	5
4. Technical details	6
5. Transport/storage/operating conditions ..	6
6. Maintenance and care	6
6.1 Cleaning the device	6
6.2 Cleaning the grinding wheels	7
7. Disposal instruction	7
7.1 Disposal of the packaging.....	7
7.2 Disposal of waste equipment.....	7
7.3 Meaning of the "trash bin" symbol	7
7.4 Accumulators and batteries	7

Thank you for choosing one of our products. Please read the operating instructions carefully before using the product for the first time. If you pass the product on to someone else, you must include these operating instructions.

1. Safety instructions

1.1 Symbols



This product **must not be** disposed of with household waste!



Warning! Read the safety instructions carefully. The Failure to comply with safety precautions may result in serious injury or damage. Keep the operating instructions in a safe place.




CE marking indicates that a product complies with the legal requirements of European legal standards and may therefore be traded within the European Community.




Totally insulated housing (protection class II).

RoHS

Restriction of the use of certain hazardous substances in the heavy metals, brominated flame retardants and plasticisers sectors to protect human health and the environment.

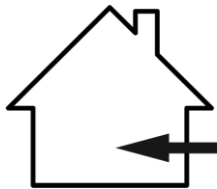

Articles may only be used within enclosed buildings.

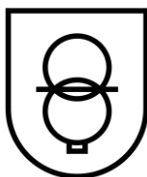

Safety transformer - short-circuit proof. Output voltage not exceeding 50 volts

1.2 General safety instructions


- When using a device near children, conscientious supervision is necessary.
- This appliance is intended for domestic use.
- Never place or use the appliance in a wet or humid environment.
- Do not use the appliance under water, e.g. in the shower.
- Never bring the appliance into direct contact with fire, gas, oxygen or hot objects such as hot plates.
- Switch off the unit before changing the grinding wheel.
- Handle the unit with care so that it cannot fall or be damaged in any way.
- If any problems occur with the unit, have it repaired immediately. Do not attempt to repair it yourself.
- Do not lubricate or wash the unit.
- Unplug the AC adapter from the wall outlet when not in use.
- Never leave the unit unattended when children or untrained persons are handling the unit.
- Use the device only for applications as described in this manual.
- Only use attachments and accessories approved by the manufacturer.
- Never use the appliance after the power cord has been damaged, the appliance has fallen or come into contact with water.
- This device is not intended for use by persons (including children) with limited physical, sensory or mental capabilities, experience and/or knowledge unless they are supervised by a person responsible for their safety and have received instructions on how to use this device.
- Do not use the unit under blankets or pillows as excessive heat may cause fire, injury, or electric shock.
- Do not carry the product by the cord or use the cord as a handle.
- When you exit the application, set all switches to Off/Off/0 and unplug the power cord.
- Only use extension cords if you are satisfied that they are in good condition.
- If the power cord of the device is damaged, it may only be replaced by an authorized service center.
- Never let children play with the packaging material. There is a danger of suffocation.

Warning!

- Conscientious supervision is required when the device is being used around children.
- Never place or use the device in a wet or moist environment.
- Do not use the device under water, e.g., in the shower.
- Never allow the device to come into direct contact with fire, gas or oxygen, or with hot objects such as hotplates.
- Switch the device off before changing the grinding head.
- Take all possible precautions to prevent the device falling or being otherwise damaged.
- If problems arise with the device, submit it for repair immediately. Never attempt to repair it yourself.
- Do not lubricate or wash the device.
- If the device has fallen into the water, do not reach for it! First disconnect the mains plug from the socket.
- Do not store the appliance near a sink or bathtub as there is a risk of it falling into a sink or bathtub.

2. Device description

- The Arebos DR-298 is an ideal device for caring for your hands, feet and nails. Replaceable, low-wear filing attachments provide perfect care every time. Please read the instructions carefully before using the product. We cannot, as the manufacturer, be held liable in any way for damage to persons or property arising as a result of not following these instructions and the resulting improper use of the device.

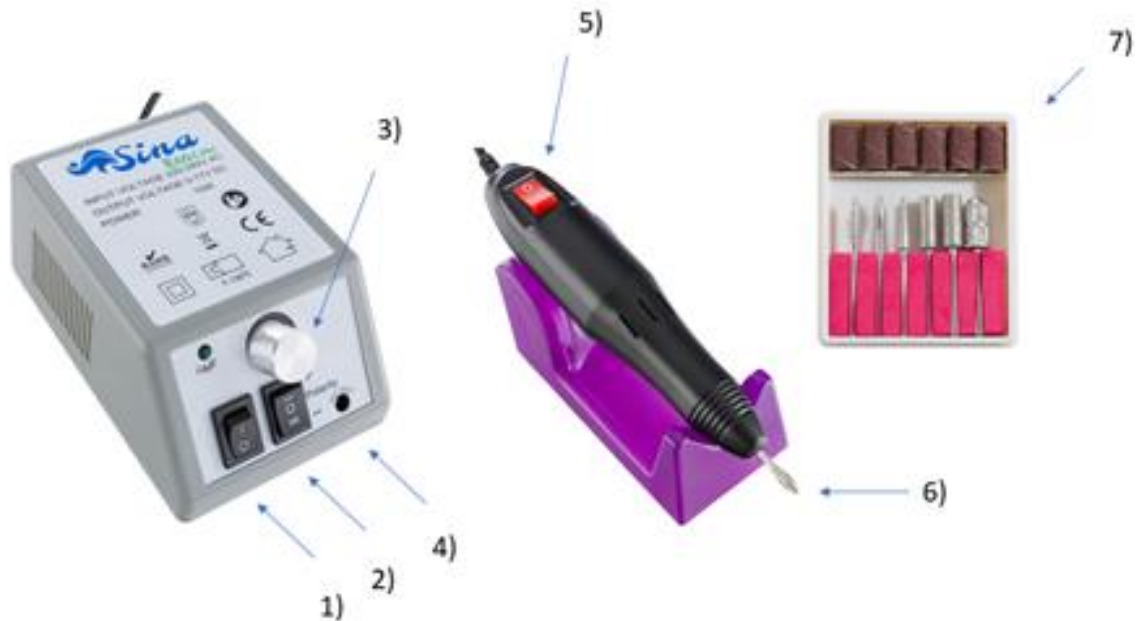

- 1) ON / OFF - Switch
- 2) Forward / reverse – Switch
- 3) Controls for adjusting the speed
- 4) Jack for hand piece
- 5) ON / OFF – Switch for hand piece
- 6) Slot for bits
- 7) Bits with mandrel

3. Usage

- Start by shortening and shaping the nails. To avoid developing painful ingrown nails, file your nails straight. Our fine files prevent this ingrowth.
- To combat calluses, treat the affected areas with the cone attachment. Repeat the procedure regularly, working gently.
- Ingrown nails can be gently removed using the cutting attachment. Thick, hardened nails are slowly ground down from the top and filed thinner at the sides.
- The grinding heads are available in various shapes and hardnesses and can be reordered at any time.
- Before you start using the device, check whether the power-supply voltage shown on the rating matches the available power-supply voltage.

1. Plug the connection cables for the hand-held part into the socket on the control unit.
2. Plug the power cable into the mains socket.
3. Insert the desired cutter into the cut head.
4. Using the ON/OFF switch on the control unit, switch the device on; the power status indicator (a green LED) will light.
5. The desired speed can be set using the rotary switch.
6. Using the ON/OFF switch on the control unit, switch on the hand-held device.
7. The optimum speed depends on the hardness of the nails/tips you are working on and the cutter you are using.

Important:

- To set your desired direction of rotation for the cutter, adjust the direction of rotation switch accordingly – depending on whether you are working left- or right-handed.
- Never change the direction of rotation while the hand-held cutter is turning. First turn the speed down to 0. Then change the direction of rotation. Then turn the device back up to the desired speed. This will extend the device's service life.

4. Technical details

Type of device	Personal-care device for manicure and pedicure
Speed	20 000 revolutions per minute
Power supply	220-240V / 50Hz
Rated output voltage	DC 0-17 V
Rated power	10 Watt
Output current	0,8A
Loudness	ca. 39 dB
Weight	3 lbs (1.4) kg

5. Transport/storage/operating conditions

Transport	Only transport in original packaging
Transport and storage temperature:	+5° C to +50° C
Operating temperature	+10° C to +40° C
Atmospheric pressure	700-1060 hPa

- Abrupt temperature changes should be avoided because of the risk of condensation forming in the device. Do not use the device until the temperature has equalized.

6. Maintenance and care

6.1 Cleaning the device

- Regular maintenance and cleaning ensure optimum results and lengthen the device's service life.
- Keep the Arebos DR298 Mercedes 2000 in a safe, cool and dry location when not in use.
- Any extensions, readjustments, modifications or repairs must only be carried out by persons

authorized by Canbolat Vertriebs GmbH in order to ensure the device's continued safety, reliability and performance.

- Before cleaning the device, ensure that it is switched off and disconnected from the mains.
- Clean the device with a soft, slightly moistened cloth.
- Do not use aggressive substances such as cream cleaner or other cleaning agents, as these can cause damage to the device's surface.
- Do not attempt to repair the device. It contains no user-serviceable parts.

6.2 Cleaning the grinding wheels

- The grinding wheels can be cleaned of dust and skin residues with the aid of a brush. It is also recommended to disinfect the grinding wheels with commercially available disinfectant spray or 90% alcohol (from the pharmacy) in order to prevent the transmission of infections. Please make sure to keep the pins of the grinding wheels free of grease and clean them from time to time.

7. Disposal instruction

7.1 Disposal of the packaging

- Please make reference to the guidelines and standards for appropriate disposal of the packaging valid in your region. In part, the package may consist of plastic bags - watch this respect, with special care to ensure that this is not out of the reach of children. There is a risk of suffocation!

7.2 Disposal of waste equipment

- Equipment must be disposed of in accordance with the rules and regulations of the local waste disposal.

7.3 Meaning of the "trash bin" symbol



Protect our environment, electrical appliances do not belong in the household waste. Use the collection points provided for the disposal of electrical appliances and hand in your electrical appliances that you will no longer be using. This will help to avoid the potential effects of incorrect disposal on the environment and human health. You thereby contribute to recycling, recovery, and other forms of recovery of waste electrical and electronic equipment. Information on where to dispose of your equipment can be obtained from your local authorities.

7.4 Accumulators and batteries

- Never put accumulators/batteries into household waste, water or fire. Accumulators/batteries should be collected, recycled or disposed of in an environmentally friendly manner.
- The device is delivered without spare parts. If required, please contact our customer service.

Our customer service number: +49 (0) 931-45232700

EU Declaration of Conformity

We,

the Canbolat Vertriebs GmbH, Gneisenaustraße 10-11, 97074 Würzburg, Germany

hereby declare that the devices described in the following comply with the relevant, fundamental safety and health requirements of the EU directives due to their design and construction as well as in the versions marketed by us.

Product name: Arebos Electric Nail Drill DR-298

Article number: 4260199750445

Model number: SI-MA-028-G

If the device is modified without our consent, this declaration of conformity loses its validity.

Tested according to:

EU Standard: EN 55014-1 :2006+A1 :2009, EN 61000-3-2 :2006+A1 :2009+A2 :2009, EN 61000-3-3 :2008, EN 55014-2 : 1997 + A1 :2001+ A2 :2008, EN 60335-1 :2002 + A1 :2004 + A11 :2004 + A2 :2006 + A12:2006+A13 :2008+A14 :2010+A15 :2011, EN 60335-2-8 :2003+A1 :2005+A2 :2008, EN62233 :2008

Date/Manufacturer Signature/Location:

Würzburg, 08.01.20120



Identification of the signatory:

Dipl.-Inform. (Univ.) Korhan Canbolat, CEO

Authorised representative for the technical documentation:

Dipl.-Inform. (Univ.) Korhan Canbolat, CEO

Office address:

Canbolat Vertriebs GmbH

Gneisenaustraße 10-11

D-97074 Würzburg

Return address can be found in the imprint: <https://www.arebos.de/impressum/>

VAT identification number: DE 263752326

Court of the Commercial Register is Würzburg, HRB 10082

WEEE Reg.-No. DE 61617071