 
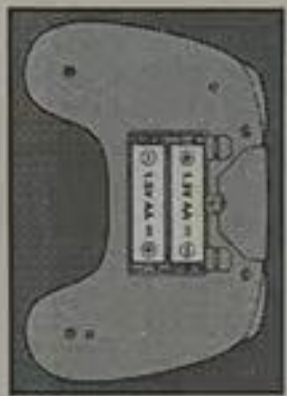 


BATTERY SAFETY INFORMATION:

 
1. Car use 1x7.4V rechargeable batteries, remote control with 2x1.5V "AA" non-rechargeable battery.
2. Non-rechargeable batteries are not to be recharged.
3. Rechargeable batteries are to be removed from the toy before being charged (if removable).
4. Rechargeable batteries are only to be charged under adult supervision (if removable).
5. Different types of batteries or new and used batteries are not to be mixed.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Batteries are to be inserted with the correct polarity.
8. Exhausted batteries are to be removed from the toy.
9. The supply terminals are not to be short-circuited. Toy appliances in use successfully check the process, you should periodically check the wires, plugs. Shell and other parts for damage, found damage should discontinue use until the repair is intact.

R/C BATTERY DESCRIPTION

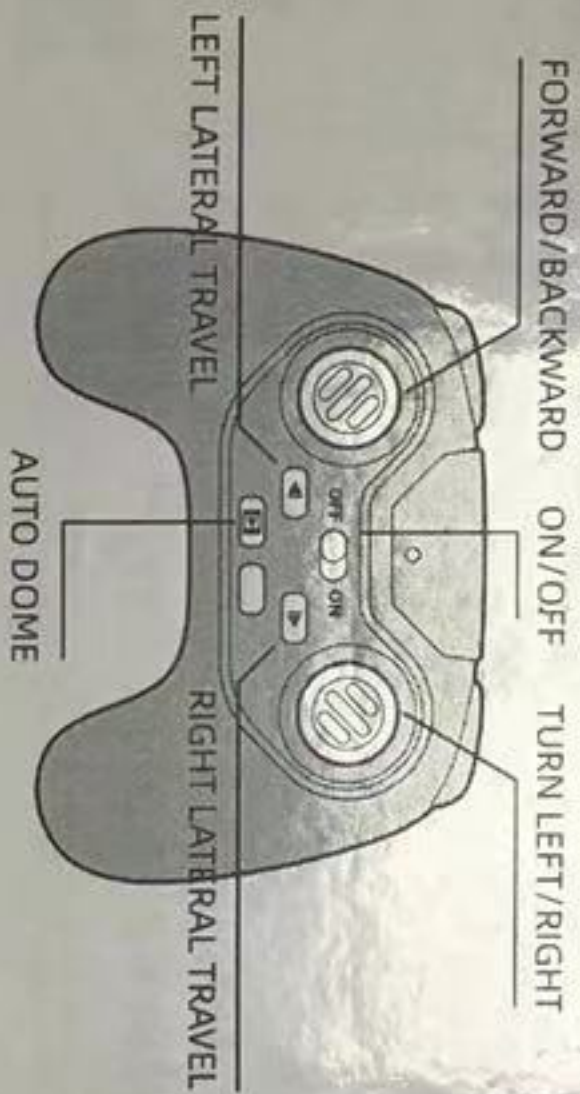


Open the battery cover on the remote control, use 2x1.5V "AA" batteries (not included), mount the remote control button correctly into the battery, and avoid danger!

DIRT BIKE BATTERY DESCRIPTION

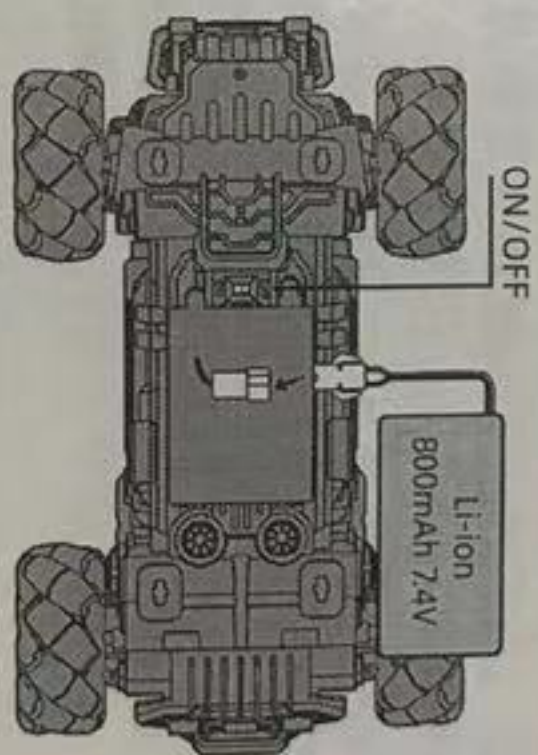

 USE 1x7.4V BATTERY PACK (INCLUDED)
OPEN THE BATTERY COVER, REMOVE THE BATTERY PACK CONNECT CHARGE LINE.

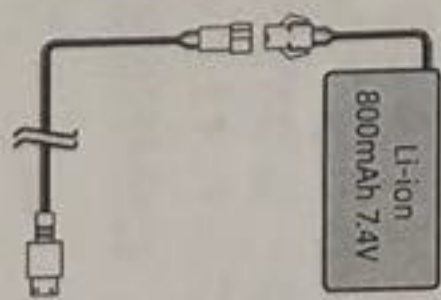

USB charging cable USB charging cable, please connect computer USB port or other 5V output port.

WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years.

PRECAUCION
PELIGRO DE ASFIXIA
-CONTIENE PARTES PEQUEÑAS
NO RECOMENDADO PARA NIÑOS
MENORES DE 3 AÑOS

منفذ ولا السلامة والخطير لطيفة
Tested according to international standards

NOT SUITABLE FOR CHILDREN UNDER 3 YEARS DUE TO SMALL PARTS
منفذ ولا السلامة والخطير لطيفة
COUNTRY OF ORIGIN: CHINA

- WHITE
 - BLACK
 - SILVERY
 - GREEN
- No.36801
No.36802



SPECIFICATION & COLOURS OF CONTENTS MAY VARY ILLUSTRATIONS.

MADE IN CHINA