

# CLOCKY

clocky.com

## WARRANTY:

<https://clocky.com/pages/support>

## MANUAL:

<https://clocky.com/pages/manual>

## HELP?

team@clocky.com

## FOLLOW US:

@clockythealarm

### PATENT 7355928

2018 © Clocky, LLC. Previously Nanda Home, Inc. All Rights Reserved. This product is produced from original artwork. All copyright and trademark rights in the distinctive appearance and function of this article are owned by Clocky, LLC. Clocky® is a trademark of Clocky, LLC. Distributed by Clocky, LLC. 340 S Lemon Ave #7919, Walnut, CA 91789 USA. Designed in the USA. Printed in China.

### FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

a

English  
Alarm  
Time

Deutsche  
Geplante  
Alarmzeit

Français  
Heure de  
L'alarme

Español  
Hora de  
Alarma

Nederlands  
Alarm  
Instellen

Italiano  
Impostazione  
Sveglia

t

English  
Current  
Time

Deutsche  
Aktuelle  
Uhrzeit

Français  
Heure  
Actuelle

Español  
Hora  
Actual

Nederlands  
Tijd  
Instellen

Italiano  
Impostazione  
Ora

h

English  
Hour

Deutsche  
Stunde

Français  
Heure

Español  
Hora

Nederlands  
Uur

Italiano  
Ora

m

English  
Minute

Deutsche  
Minute


Français  
Minute

Español  
Minuto

Nederlands  
Minuten

Italiano  
Minuto

### CLOCKY'S BUTTONS

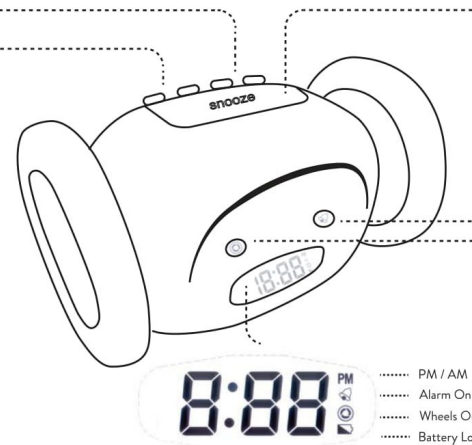

- ..... PM / AM
- ..... Alarm On
- ..... Wheels On
- ..... Battery Low

snooze

English  
Alarm  
On/Off

Deutsche  
Alarm  
Aktiviert

Français  
Activation  
De l'alarme

Español  
Alarma  
Encendida

English  
Wheels  
On/Off

Deutsche  
Rollfunktion  
Aktiviert

Français  
Activation  
des Roues

English  
Snooze

Deutsche  
Schlum-  
mertaste


Français  
Rouppilon

Español  
Repetición

Nederlands  
Dutten

Italiano  
Ripetizione  
della Sveglia

### IMPORTANT

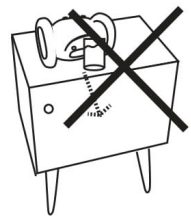

### WARNING!

- Clocky is not a toy. Children should be supervised when he is in use.
- Clocky should sit on a nightstand no higher than 3 feet.
- Place barriers so that Clocky does not fall down stairs or balconies.
- Clocky should not be thrown. Let him roll off the table by himself.
- Clocky's wheels can be stopped any time by pressing the alarm bell button.
- Clocky should not be placed in such a way that he can knock down liquids.

### ACHTUNG!

- Clocky ist kein Spielzeug. Kinder sollten bei der Verwendung dieses Produkts beaufsichtigt werden.
- Clocky sollte auf einem Nachttisch nicht höher als 90 cm sitzen. Stellen Sie sicher, dass alle Stufen oder Balkone für Clocky nicht zugänglich sind, um Sturzschäden zu vermeiden.
- Clocky sollte nicht geworfen werden. Lass es den Tisch selbst rollen.
- Um Clockys Räder jederzeit zu stoppen, drücken Sie bitte die Alarmglocke.
- Clocky sollte nicht so platziert werden, dass es Flüssigkeiten umwerfen kann.

### ATTENTION!

- Clocky n'est pas un jouet. Les enfants devraient être surveillés quand il est utilisé.
- Clocky devrait s'asseoir sur une table de nuit pas plus de 3 pieds (90 cm).
- Assurez-vous qu'il y a des barrières en place afin que Clocky ne tombe pas dans les escaliers ou les balcons.
- Clocky ne devrait pas être jeté. Laissez-le rouler de la table tout seul.
- Les roues de Clocky peuvent être arrêtées à tout moment en appuyant sur le bouton de sonnerie d'alarme.
- Clocky ne doit pas être placé de telle façon qu'il puisse renverser des liquides.

### ADVERTENCIAS!

- Clocky no es un juguete. Los niños deben ser supervisados cuando lo estén usando.
- Clocky debe reposar en una mesita de noche a no más de 90 cms de altura.
- Asegúrese de que haya parapetos para que el Clocky no se caiga de escaleras o balcones.
- Clocky no debe ser lanzado. Deje que ruede de la mesa solo.
- Las ruedas se pueden detener en cualquier momento presionando el botón de campana de alarma.
- Clocky no debe colocarse de forma a poder derribar líquidos.

### WAARSCHUWINGEN!

- Clocky is geen speelgoed. Houd toezicht op kinderen onder 6 jaar wanneer Clocky in gebruik is gesteld.
- Zet Clocky alleen op nachtkastjes met een maximale hoogte van 90 cm.
- Probeer de wielen ook niet handmatig te bewegen.
- Laat Clocky niet vallen en gooi hem niet zelf van de tafel. Laat hem zelf van de tafel rollen.
- Indien u direct de wielen wilt c.q. moet laten stoppen, druk dan op 'Alarmbel'
- Zet Clocky niet in de buurt van vloeistoffen of een glas water, welke Clocky om zou kunnen gooien.

### ATTENZIONE!

- Clocky non è un giocattolo. I bambini al di sotto dei 6 anni possono usare il prodotto solo con la supervisione di un adulto.
- Clocky non deve essere collocata a più di metri da pavimento.
- Posiziona una barriera per impedire a Clocky di cadere dalle scale o dal balcone.
- Non lanciare e non far cadere Clocky lascia che rotoli da sola per terra.
- Se avete la necessità di fermare le ruote immediatamente, premere il tasto sveglia.
- Non appoggiare accanto a Clocky un contenitore con acqua o altri liquidi che potrebbero rovesciarsi.

