PHILIPS

Service Manual



General information

Technical specifications

Voltage: 220 V

• Cord length: 0.8 m

• Power: 1700 W

· Capacity: 5.6 liter

• Temperature control: 80 - 200 $^\circ\,$ C

• Technology: Rapid air technology

• Time control: Up to 60 minutes

Weight and dimensions

• Weight appliance: 5.05 kg

Dimension of product (LxWxH): 392mm*284mm*299mm

· Weight (incl. packaging): 6.1 kg

General specifications

- · 8 intelligent pre-setting recipes
- · Observe cooking progress
- · Check food through the window
- · Double pots
- Starfish button
- Fry with up to 90% less fat
- Crispy outside, juicy inside
- · Dishwasher-safe
- Well-quality inner pot
- 5.6L family size
- Digital display with 8 presets

Country of origin

· Made in: China

Design and finishing

Color(s): Silk White, Deep Black, Misty Dawn

Accessories


Inner pot, Out pot, Foot pad

Service

· 2-year guarantee



General information

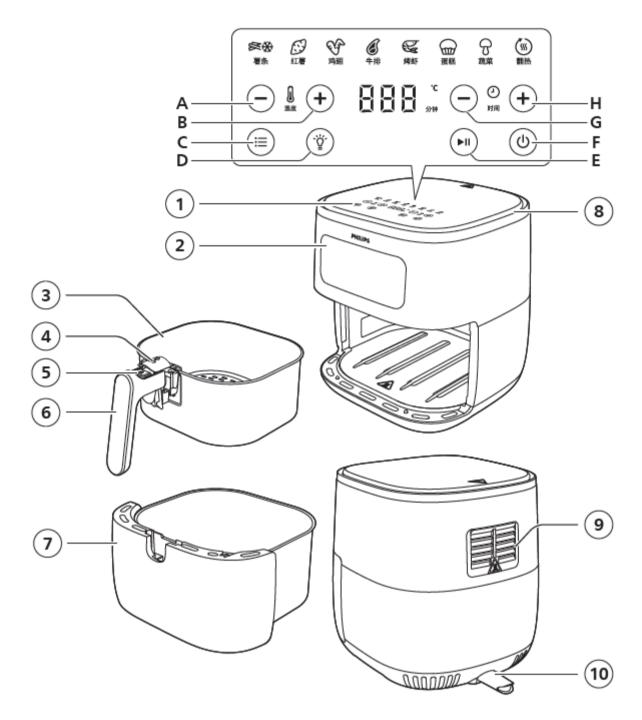

- ① 控制面板
- A 温度降低按钮
- B 温度增加按钮
- C 预设程序选择按钮
- D 灯光按钮
- E 开始/暂停按钮
- F 待机按钮
- G 时间减少按钮
- H 时间增加按钮

- ② 透明视窗
- ③ 炸篮
- ④ 炸篮拆卸按钮滑盖
- ⑤ 炸篮拆卸按钮
- ⑥ 炸篮手柄
- ⑦ 炸锅
- ⑧ 进风口
- ⑨ 出风口
- ⑩ 电源线



Disassembly and Reassembly advice

During assembly

- Make sure that the wiring is properly dressed as in the original situation. When replacing crimp connections or tie wraps, perform a pull test.
 Prevent entrapment of wiring between housing or internal parts.
- Make sure that all parts are re-assembled, and that no parts are forgotten.

E.g.: sleeves, internal protection caps, screws.

 Make sure that the housing parts are properly assembled. No gaps should be present, yet make sure screws are not overturned.

After assembly:

- Check all relevant functions of the appliance.
- Check if the consumer complaint has been resolved.
- Check for abnormalities.

E.g.: leaking liquids, smoke, smell, abnormal noise.

• Check the use safety functions.

E.g.: lid-open, detection switch, motor disable switches.

- · Check the electrical safety functions:
- leakage current
- high voltage (servicer to perform a test)
- earth continuity (servicer to perform a test)

Important repair instructions

- Only skilled personnel should carry out the repair.
- After repair the appliance should function properly.
- After repair the appliance has to meet the regulatory and safety requirements that were applicable at the time of release of the model.
- After repair the appliance always has to be tested for electrical safety according VDE 0701-0702 and for medical products IEC 62353.



Crimp instructions

Crimped cable connection are more and more used in the assembly process.

Actually used at Garment Care, Kitchen appliance, Air product and few more




Reference Document

- IEC 61210:1993 "Flat quick-connect terminations for electrical copper conductors – Safety requirements"
- IEC 60352-2:1990 (amd. 1:1996 + amd. 2:2002)
 "Solderless crimped connections –
 General requirements, test methods and practical guidance"

What does that mean for Service ?

When ever we replace an electrical component we need to open such connection.

The easiest way is to reopen the pressed crimp housing by attacking from the side with pliers

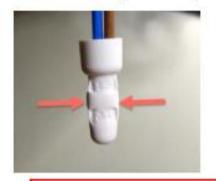



Note:

Do not cut the old crimp as this cause shortage of the cable and might be an issue afterwards. Always connect the wires with a new 2 or 3 wire crimp housing

Required tools:






Specification:

Ratchet Crimping Tool

- Tool for insulated cable connectors
- 0.5mm²
- 6mm²
- Oval crimp

Crimp instruction

Prepare the cable:

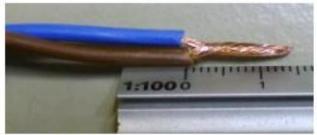





Twist the wires together along the entire lengths of the scrip.

16mm (0,63 in) Max 13mm (0,51 in) Min

Insert the cable into crimp housing

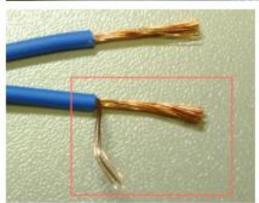

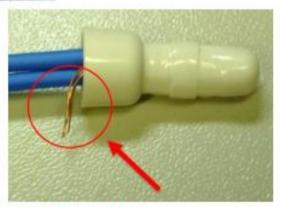


Don't miss any single "hair" !!!



The result of this can have serious safety impact, as wires can touch any metal part and cause electrical shock !!!!!

Center the crimp tool on the sleeve, Crimp the housing with 6 kg/cm²

!!! Please do pull test that wires are strongly fixed !!!

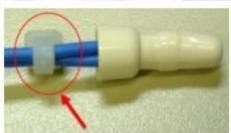

Tie wraps are used as strain relief for these connector types as they do not inherently have that. Essential part. In case the original cable was equipped with tie wrap you need to add new one.

WARNING:

Take care that you tight the crimp fully.

If it is not done properly it can cause inner sparkling and cause overheating and in worst case a fire!

- Please aligned the crimp in such a way that higher humidity can not captured water like swimming pool.
- The open side should always look down

1. 将炸篮取出




2. 使用一字螺丝刀沿着边缝将上盖撬开,取出上盖。



3. 使用十字螺丝刀将上壳的螺丝拆下,取出上壳件。



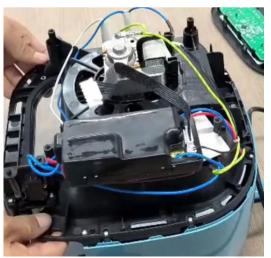

4. 使用合适的螺丝刀拆卸机器底部的电源线固定板。





5. 使用尖嘴钳将连接线端子拆开,取出电源线。





6. 撬开脚垫,取出底座上的螺丝,即可取出底座。





7. 拔下接线端子,并拆卸下壳的螺丝,取出下壳件。



8. 拆卸隔热层边上的螺丝,取出炸篮外罩。






9. 拆卸底部螺丝,将五金内衬和隔热层组件分离。






10. 拆卸内衬边缘处的螺丝,将五金内衬和底座分离。

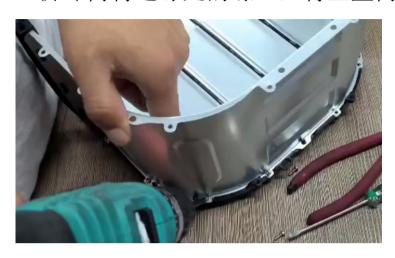


11. 打开电源板保护盒,拆卸所有端子和螺丝,取下电源板。



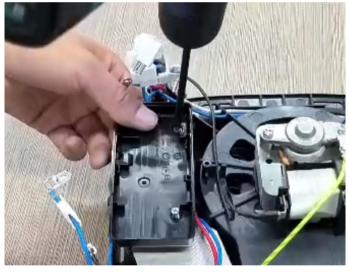

12. 拆卸挡光板。

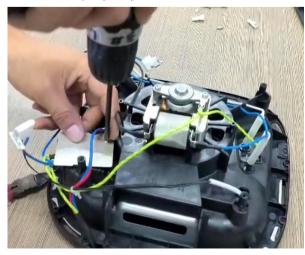

13. 用尖嘴钳将所有内部线束拆除,操作方法见第5页。




14. 拆卸微动开关



15. 使用钻头将电热管两端的铆钉松开,取出电热管



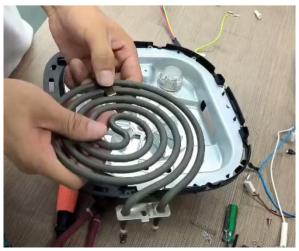

16. 用尖嘴钳或活动扳手固定螺母, 逆时针转动风扇叶即可将其旋出



17. 分离隔热层和五金内衬



18. 同时压住3块照明灯的突起片,即可拆出照明灯



19. 拆卸4颗螺丝,即可取出罩极马达



Spare Parts







HD9257/20 HD9257/70 HD9257/80



















Spare Parts





HD9257/20 HD9257/70 HD9257/80





















Spare Part List

Pos	12NC	Description	CTN	CRP
1	300009648391	COVER	ALL	
2	300009650131	PCBA	ALL	
3	300009650151	SILK SHELL DECORATION CIRCLE	HD9257/20 HD9257/80	
	300009652291	GOLDEN SHELL DECORATION CIRCLE	HD9257/70	
4	300009652311	SILK WHITE SHELL	HD9257/20	
	300009652331	MISTY DAWN SHELL	HD9257/70	
	300009652351	DEEP BLACK SHELL	HD9257/80	
5	300009652361	WINDOW COVER	ALL	
6	300009652381	AIR OUTLET	ALL	
7	300009652401	MICROSWITCH	ALL	
8	300009652551	PCBA POWER	ALL	
9	300009649591	SILK WHITE INNER POT	HD9257/20	YES
	300010236481	MISTY DAWN INNER POT	HD9257/70	YES
	300010236491	DEEP BLACK INNER POT	HD9257/80	YES
10	300009652591	SILK WHITE OUT POT	HD9257/20	YES
	300010236501	MISTY DAWN OUT POT	HD9257/70	YES
	300010236511	DEEP BLACK OUT POT	HD9257/80	YES
11	300009652621	SILK WHITE FIRED BASKET COVER	HD9257/20	
	300009652631	MISTY DAWN FIRED BASKET COVER	HD9257/70	
	300009652651	DEEP BLACK FIRED BASKET COVER	HD9257/80	
12	300009652711	BASE LINER AND TRAY	ALL	
13	300009652741	SILK WHITE BASE	HD9257/20	
	300009652781	MISTY DAWN BASE	HD9257/70	
	300009652811	DEEP BLACK BASE	HD9257/80	
14	300009653091	SILK WHITE POWER CORD COVER PLATE	HD9257/20	
	300009653121	MISTY DAWN POWER CORD COVER PLATE	HD9257/70	
	300009653191	DEEP BLACK POWER CORD COVER PLATE	HD9257/80	
15	300009653211	POWER CORD	ALL	
16	300009653381	SILK WHITE POWER CORD EXIT	HD9257/20	
	300009653391	MISTY DAWN POWER CORD EXIT	HD9257/70	
	300009653441	DEEP BLACK POWER CORD EXIT	HD9257/80	
17	300009653471	HARDWARE LINING	ALL	
18	300009653481	MOTOR HEATING UNIT	ALL	
19	300009653491	LAMP	ALL	
20	300009653511	FOOT PAD	ALL	YES
21	300009653521	LOCATION PIN AND SPRING	ALL	

Exploded Drawing

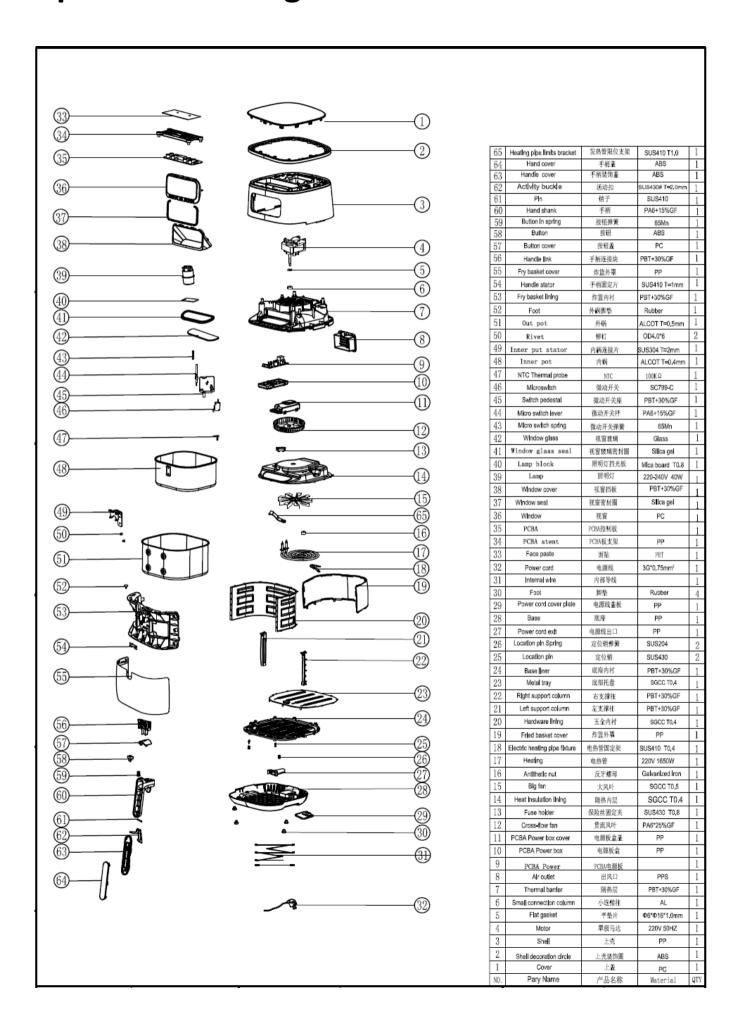

Circuit diagram

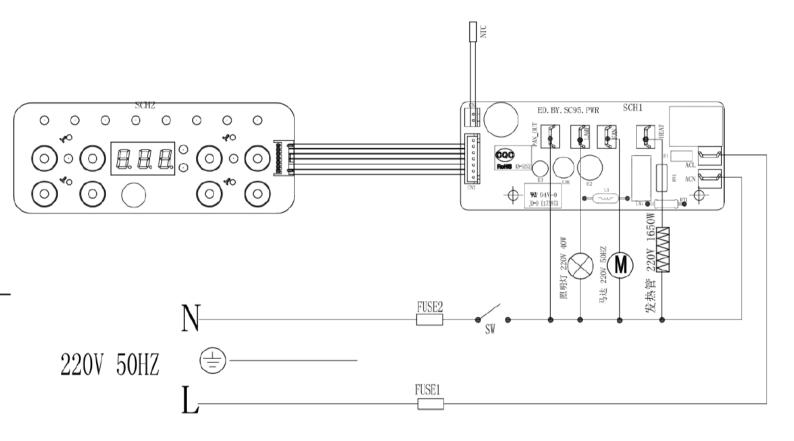

Version History

•Version A: Initial release ----wk2227

•Version B: Updated new spare part ----WK2246



www.philips.com