

Manual:

1. Place battery 1 x AA (by unscrewing bottom vibration lipstick vibrator)
2. Switch lipstick to *on* to turn *off* and to *off* to turn off.

Cleaning:

Always clean your device thoroughly before and after each use.

Clean your device with an antibacterial toy cleaner.

Hard detergents, disinfectants, acetone or 75% alcohol are not recommended to clean your device.

Avoid direct sunlight and air drying your device.

Store your device in a clean and dry space, and avoid leaving it in contact with other silicone or TPR devices, as this could affect the properties of the high grade ABS of your device.