

SHORT INSTRUCTION MANUAL

TS0130S - Cash box

TS0130S - Geldkist

TS0130S – Caisse boîte

1 Open the box**NL** Open de doos**FR** Ouvrez la boîte**2 Remove the coin tray****NL** Verwijder de muntenbak**FR** Retirez le plateau à monnaie

3

Place banknotes under the compartment



NL Leg bankbiljetten onder het compartiment

FR Placez les billets sous le compartiment

4

Close the box



NL Sluit de doos

FR Fermer la boîte

5

Use the key for security



NL Gebruik de sleutel voor beveiliging

FR Utilisez la clé pour la sécurité