

4. Connecting a USB pen or SD card



1. Slide the SD card into the SD slot on top/back of the device.

The SD card will show in the WPD app.
To remove it push on the end of the card.

2. Connect the USB drive to the USB port "USB drive" at the front of the device.

The USB drive will show in the WPD app.

The connected storage source will appear in the app as shown above.

It is possible to connect both (a USB drive + SD card). They will both appear in the app as shown above.

EN: Warnings

Don't drop, disassemble or attempt to repair the device by yourself.
Avoid exposure to water or high humidity.
Don't expose to any heat source.
Keep out of reach of children.
Don't use in the presence of flammable gas.

NL: Waarschuwing

Probeer het apparaat niet zelf te repareren of te demonteren.
Vermijd blootstelling aan water of een hoge luchtvochtigheid.
Niet blootstellen aan een warmtebron.
Buiten bereik van kinderen houden.
Niet gebruiken in de aanwezigheid van brandbaar gas.

DE: Achtung

Versuchen Sie nicht, den das Gerät selbst zu reparieren. (Garantieverlust)
Vermeiden Sie hohe Luftfeuchtigkeit oder Kontakt mit Wasser
Verwenden Sie das Gerät nicht in der Nähe von brennbaren Gasen oder Flüssigkeiten
Halten Sie das Gerät fern von Hitzequellen.
Ausser Reichweite von Kindern halten.

FR: Attention

Ne pas faire tomber ou démonter ou tenter de réparer le produit soi-même.
Ne pas exposer le produit à l'eau ou dans un endroit trop humide.
Ne pas poser le chargeur solaire près d'une source de chaleur.
Tenir hors de portée des enfants
Ne pas utiliser en présence de gaz inflammables

IT: ATTENZIONE

Non usare vicino ad una fiamma.
Non esporre vicino a fonti di calore elevato
Non modificare la struttura o disassemblare
Smettere di utilizzare immediatamente nel caso si sentano odori strani, calore, o strani rumori provenire dallo stesso.
Non lasciar giocare i bambini.
Usare solo in luoghi asciutti.
Riciclare l'apparato secondo le norme vigenti nella nazione di utilizzo.

CZ: UPOZORNENI

Neupustte, nerozberajte, ani se nepokoušejte spravit nabíječku sami.
Vyvarujte se působení vody nebo vysoké vlhkosti.
Nevystavujte tepelným zdrojem.
Uchovávejte mimo dosah dětí.
Nepoužívejte v blízkosti hořlavých plynů.

SK: Upozornenia

Neupustite, nerozberajte, ani sa nepokúšajte opraviť nabíjačku sami.
Vyvarujte sa pôsobeniu vody alebo vysokej vlhkosti.
Nevystavujte tepelným zdrojom.
Uchovávajte mimo dosahu detí.
Nepoužívajte v blízkosti hoľavých plynov

SE: varning

Tappa inte, ta inte isär eller försök reparera laddaren själv
Utsätt inte för vatten eller hög fuktighet
Utsätt inte för värme.
Förvaras utom räckhåll för barn.
Använd ej i närheten av lättantändlig gas.

ES: Atención

No dejar caer el producto.
No desmontarlo ni intentar repararlo, por sus propios medios.
Evitar el contacto con el agua o fuente de humedad.
No exponer la alimentación a una fuente de calor.
Mantenga fuera del alcance de los niños.
No utilizar en presencia de fuentes o gas infli amables

* THIS MANUAL IS AVAILABLE IN DIFFERENT LANGUAGES ON OUR WEBSITE

Hoofdveste 19
3992 DH Houten
The Netherlands
T: + 31 (0) 30 635 4800
F: + 31 (0) 30 635 4801
www.xtorm.eu



WIRELESS BACK-UP & POWER STATION XPD06 Smart Hub



- Thank you for purchasing our product
- Dank u voor de aankoop van ons product
- Vielen Dank, dass Sie sich für unser Produkt entschieden haben
- Merci d'avoir acheté notre produit
- Grazie per aver acquistato questo prodotto
- Děkujeme vám za zakoupení tohoto výrobku
- Ďakujeme vám za zakúpenie tohto výrobku
- Tack för att du köpt vår produkt

Box contains



 
SPECIFICATIONS:

WiFi: 802.11 b/g/n
Battery: 5200mAh
Battery type: Li-ion
Input: 5V/1A
USB output: 2x 5V (2A+0,5A)
Dimensions: 99x43x27mm
Weight: 140grams
LED battery indication: Yes
Charging time: 5-6 hrs
Charging time Mobile equipment: 1-4 hrs

SUPPORTED MEDIA & OS

Operating systems: iOS & Android (others via web-interface)
Photo: JPG, JPEG, PNG, BMP
Audio: MP3, WAV
Video: MOV, MP4, M4V
Documents: DOC, XLS, PPT, PDF, TXT

1. Product overview

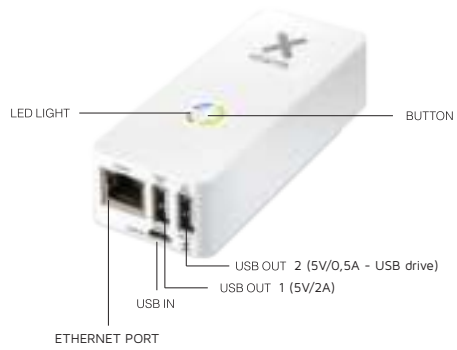

2.1. Charge your mobile device

Did you know?
 1 x short press = Battery status + USB Charging activate
 5 sec. press = Activate wireless functionalities
 3 sec. press = Power off

 
* By ideal conditions.

2.2. Charge the device by USB or A/C

3. Connect to WIFI with mobile device

5. Using the iOS APP

Storage overview

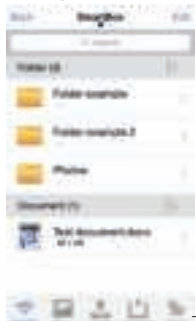

BOTTOM MENU

 
In this overview you can browse and search trough files and folders

Upload files




Tap on [Upload] on the bottom menu. Choose which file you want to upload and choose the destination folder.

Download photo's

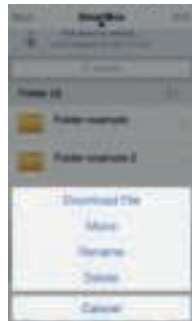

Tap on a file for more than 2 sec. A option menu will appear. Choose "Download file"
The picture will appear in the photo-APP of your device.

 Download documents

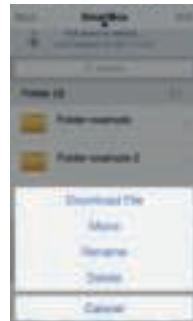


Tap on a file for more than 2 sec. A option menu will appear. Choose "Download file"
The file will appear in the [Download] list (see bottom menu [Downloads])



Tap on the icon "Downloads" in the bottom menu. This is the list of downloaded documents.
These files stay available, even if you Smart Hub is disconnected

 Settings

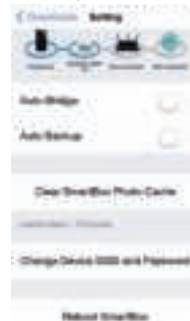

Tap [Settings]. In this menu you can change the Wifi name, set a Wifi password or reboot the device.
Default admin password is "0000"

Settings explanations

[Change SSID and Password] Here you can edit the displayed WiFi access point name (SSID) and/or password

[Change authentication] This changes the Administrator Password

[Restart WPD] This restarts the app & SmartHub

[Default] Restores app & SmartHub to factory defaults

[Upgrade Firmware] This upgrades the SmartHub firmware. Make sure the SmartHub is connected to the internet (Either by Wifi or LAN)

[Wifi Bridge] This lets you connect your SmartHub to an available Wifi Network, while your device is still connected to the SmartHub. Once enabled and connected, you can be connected to your SmartHub and another WiFi Access Point (with Internet Access), to be able to surf & store.

[Auto Wifi bridge] When you turn this option on, the SmartHub automatically connects to open or known WiFi networks

Extra functions

Connect to the Internet using the SmartHub

You have two options for connecting the SmartHub to the Internet:

a. Connect to an existing, internet enabled LAN Network
1. Connect a LAN cable to your existing LAN network and the Ethernet-Port of the SmartHub
2. It will connect automatically. You can check the connection status by clicking the Wireless Bridge Icon

b. Connect the SmartHub to a secondary, internet enabled, WiFi Access Point
1. Check Settings [WiFi Bridge]

Auto Backup

1. The Storage Menu automatically appears from the left when a device is connected. When it does not appear, swipe right from the app home screen.

In this menu you see three options:

[Photo] this captures all images from your android device and backs it up to storage media connected to the SmartHub

[Contacts] this backs up all your contact data in a contacts-file on your storage media connected to the SmartHub

[ON/OFF] This turns automatic backup on or off

 
6. Using the web-interface

Storage overview



For access via browser, connect with wifi (see chapter 3) and type 192.168.1.2 in the URL field of your browser.

Upload files

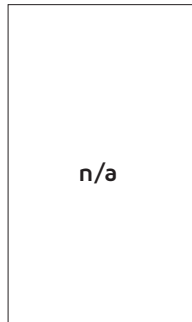

This is a APP only feature.

Download photo's



Click on the arrow and click "Download file"
The picture will open in a new tab/window of your browser. Right-click and choose "Save picture as"
*This can be different in some browsers

Download documents



Click on the arrow and click "Download file"
The file will start downloading in your browser".
*This can be different in some browsers

Settings



Tap "Settings". In this menu you can change the Wifi name, set a Wifi password or reboot the device.
Default admin password is "0000"

7. Using the Android APP

Main screen



Device is connected

- a. Folder options:
- [Open] Opens folder
 - [Move to...] Moves folder to another folder on storage media
 - [Rename] Renames folder
 - [Delete] Deletes folder
 - [Details] Shows folder details
- b. File options:
- [Download] Downloads file to WPD App folder
 - [Download to...] Downloads file to local Android device's storage (See D.)
 - [Move to...] Moves file to another folder on storage media
 - [Rename] Renames file
 - [Delete] Deletes file

Extra functions

Connect to the Internet using the SmartHub

You have two options for connecting the SmartHub to the Internet:

- a. Connect to an existing, internet enabled LAN Network:
1. Connect a LAN cable to your existing LAN network and the Ethernet-Port of the SmartHub
 2. It will connect automatically. You can check the connection status by clicking the Wireless Bridge Icon

- b. Connect the SmartHub to a secondary, internet enabled, WIFI Access Point
1. Check Settings [WIFI Bridge]

Differential* Backup

1. The Storage Menu automatically appears from the left when a device is connected. When it does not appear, swipe right from the app home screen.

In this menu you see three options:

[Photo] this captures all images from your android device and backs it up to storage media connected to the SmartHub
 [Contacts] this backs up all your contact data in a *.VCF file on your storage media connected to the SmartHub
 [ON/OFF] This turns automatic backup on or off

 
*Differential means that only the changes in your Android device are backed up when a second backup is made or automatic backup is switched on.

Storage overview




6. SD card/ USB drive

Files on USB or SD

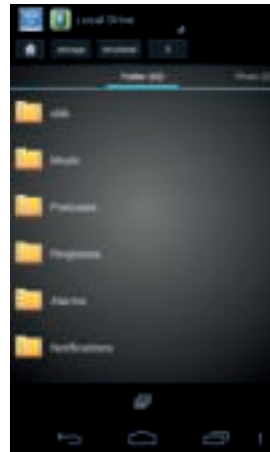

Files Local drive

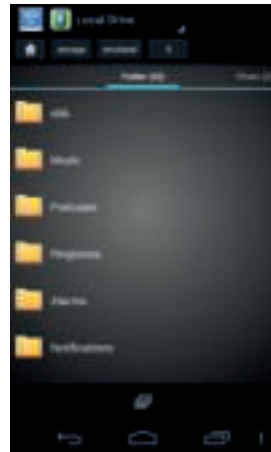 

Files in Downloads



Settings



Settings explanations

[Change SSID and Password] Here you can edit the displayed WIFI access point name (SSID) and/or password

[Change authentication] This changes the Administrator Password

[Restart WPD] This restarts the app & SmartHub

[Default] Restores app & SmartHub to factory defaults

[Upgrade Firmware] This upgrades the SmartHub firmware. Make sure the SmartHub is connected to the internet (Either by Wifi or LAN)

[Wifi Bridge] This lets you connect your SmartHub to an available Wifi Network, while your device is still connected to the SmartHub. Once enabled and connected, you can be connected to your SmartHub and another WIFI Access Point (with Internet Access), to be able to surf & store.

[Auto Wifi bridge] When you turn this option on, the SmartHub automatically connects to open or known WIFI networks

Accessing storage media (SD/USB)

1. Connect a storage device by either
2. Inserting an SD-Card
3. Connecting a USB-Drive to port indicated "USB Drive"
4. Open the WPD App and connect to Smart Hub (See A.)
5. The Storage Menu automatically appears from the left. (when it does not appear, swipe right from the app home screen)
6. Click on Mass-Storage Indicator on the top-left of the screen
7. You can now explore your storage device's folders and files

Manage files on storage media (connected to the Smart Hub)

1. Access your storage media (See first paragraph.)
2. Long press folder/file
3. Files/Folders can now be edited

Manage Android device local files

1. Select [Local Drive] from the drop-down menu
2. You can now explore your local Android device files and folders
3. Edit files/folders by long pressing the file folder

Manage Downloaded files

1. Select [Downloads] from the drop-down menu
2. You can now explore your WPD app download folder on your Android device. Here you can find files downloaded to the Android device with the [Download] command under (D.)
3. Edit files/folders by long pressing the file folder

Settings

1. Select [Settings] from the drop-down menu
2. You will be asked for an Administrator password. By Default this is 0000
3. In settings you can change following options
 [Change SSID and Password]
 [Change authentication]
 [Restart WPD]
 [Upgrade Firmware]
 [Wifi Bridge]
 [Auto Wifi bridge]