



6. WIRED SETUP 2/2

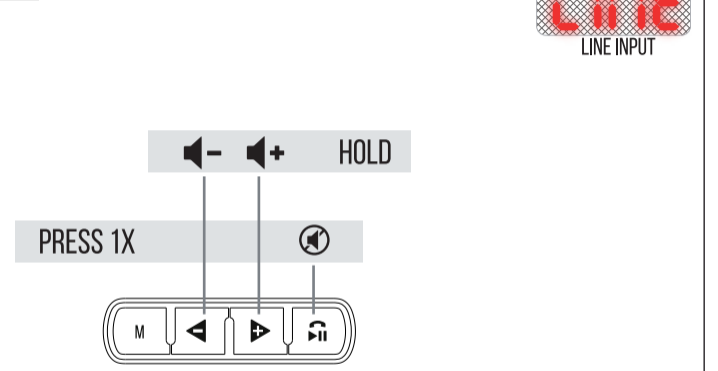


7. PLAY USB OR SD CARD

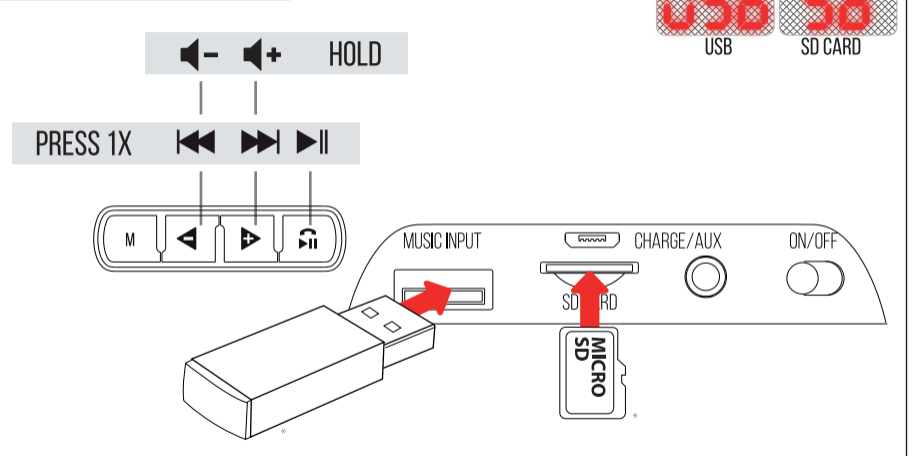


SUPPORTED AUDIO FILES: MP3, WMA. FAT32 FORMATTED CARD. 32GB MAX. * not included

8. PHONE CALL

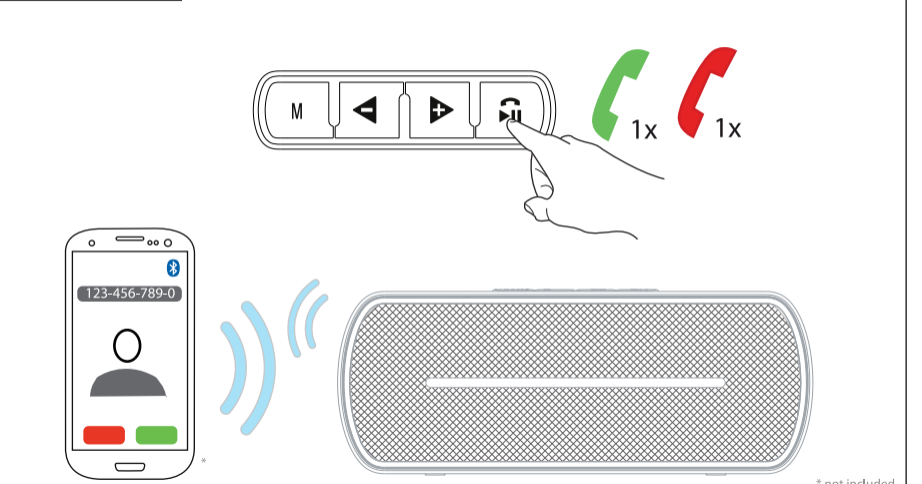

* not included

9. HEADPHONE

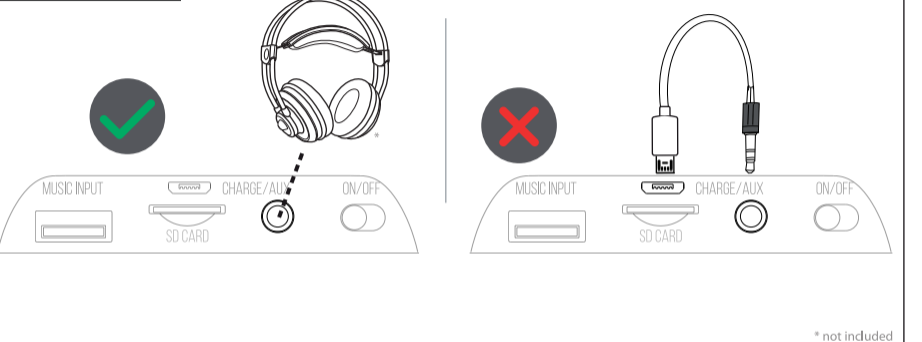

* not included

FAQ
FREQUENTLY ASKED QUESTIONS
[HTTP://WWW.TRUST.COM/21704/FAQ](http://www.trust.com/21704/faq)

Trust International BV - Laan van Barcelona 600 - 3317DD, Dordrecht, NL © 31-08-2016 Trust All rights reserved.



1. CHARGE SPEAKER

USB

MUSIC INPUT

SD CARD

CHARGE/AUX

ON/OFF

4H

* not included

2. WIRELESS SETUP 1/2

bt

BLUETOOTH

bt - bt - bt bt bt bt

BLUETOOTH PAIRING

bt bt bt bt bt

BLUETOOTH PAIRED

MUSIC INPUT

SD CARD

CHARGE/AUX

ON/OFF

* not included

3. WIRELESS SETUP 2/2

Settings

Bluetooth

Trust SPK-16

WIRELESS TROUBLESHOOTING

no devices found

6 SEC

Trust SPK-16

4. PLAY MUSIC WIRELESS

HOLD

PRESS 1X

M

Trust

5. WIRED SETUP 1/2

LINE INPUT

1

2

3

MUSIC INPUT

SD CARD

CHARGE/AUX

ON/OFF

* not included