




# Installation Instructions

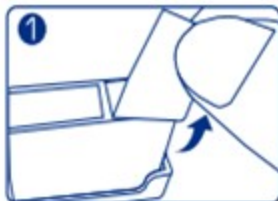


1. Tear off the flexible label.

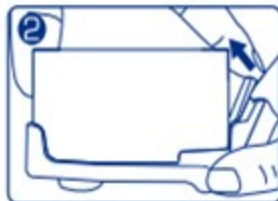

2. Remove the shield.

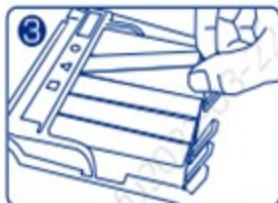

3. Install the cartridge (the colour must be matched).

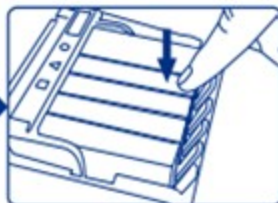

To ensure a good quality print please perform a manual head clean after cartridge installation and prior to printing.



4. When the PC screen displays "Non-HP-Cartridge(s)", please click "OK" or press the "OK" button of the printer to continue. (if printer still can not recognize it, please reinstall.)



5. When the computer for the first time shows "Low on Ink", please click "OK" and go on printing.



6. When computer shows "Low on Ink" the second time and stop printing, please click "OK" as before; Since the cartridge is high volume, So you may keep on printing. Pay attention on the printing, please stop and change cartridge if break line appears or the ink is used out.



7. If it displays "Counterfeit or Used Cartridge Detected", please change the cartridge.

404004000192 C 95X118

■ PANTONE 287 C

70克双胶纸双面单色印刷