SWRB3 Manual AW 2018.indd 1 12/09/2018 11:47



### IMPORTANT INFORMATION:

### **CAUTION**

- After an initial short journey IT IS ESSENTIAL that a check MUST be made to ensure that
  all fittings are tightened and secured. The roof bars should then be inspected at regular
  intervals to ensure load safety at all times.
- When the Roof Bars are in use, the vehicle's stability may be affected. Special care MUST
  be taken when driving in strong winds and when approaching bends or other road hazards.
  Also, please refrain from accelerating and breaking sharply.
- The Roof Bars can be cut down to size to fit the width of your vehicle if necessary.

## ALWAYS REMOVE THE ROOF BARS IF YOU INTEND TO USE A DRIVE THROUGH CAR WASH!

### **WARNING:**

**MAXIMUM LOAD FOR THE ROOF BARS COMBINED IS 60KG, DO NOT EXCEED THIS LIMIT!** It is **ESSENTIAL** that this weight is distributed evenly over both bars. Please refer to the vehicle operation manual for any special requirements for using roof bars. Use an adequate number of quality tie down straps to secure your load (elasticated ropes should be avoided). In case of long loads with non-elastic rope to the vehicles bumpers, do not exceed 55mph.

## PLEASE LOOK AFTER YOUR TWO KEYS AS SPARE KEYS ARE NOT AVAILABLE.

### Streetwize Accessories:

Unit 1, Royce Trading Estate, Ashburton Road West, Trafford Park, Manchester M17 1RY

Sales enquiries: sales@streetwizeaccessories.com

**Technical enquiries:** support@streetwizeaccessories.com


www.streetwizeaccessories.com

SWRB3 Manual AW 2018.indd 2 12/09/2018 11:47



SWRR3


# Anti-Theft Lockable Universal Roof Bars

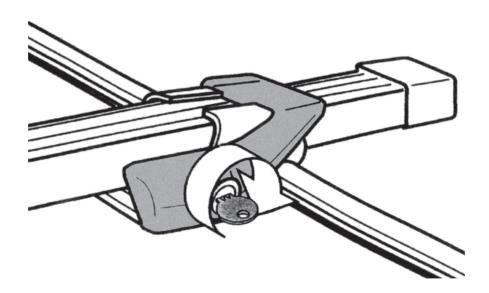



# FITTING INSTRUCTIONS

Read and following the assembly and mounting instructions carefully before using Universal Roof Bars.


SWRB3 Manual AW 2018.indd 3 12/09/2018 11:47

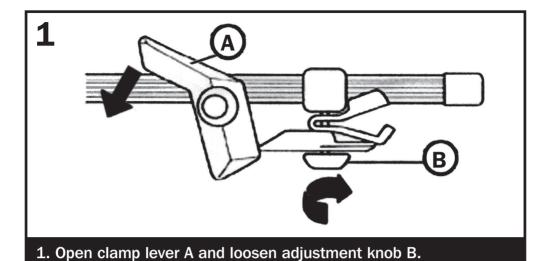

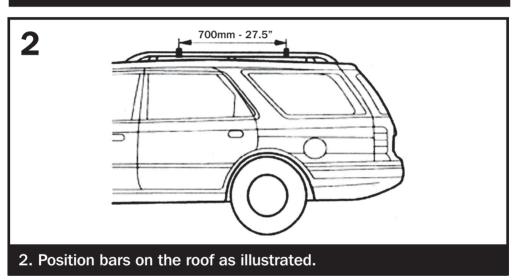


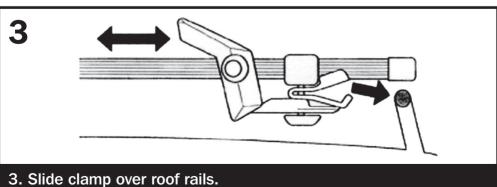


SWRB3 Manual AW 2018.indd 4 12/09/2018 11:47

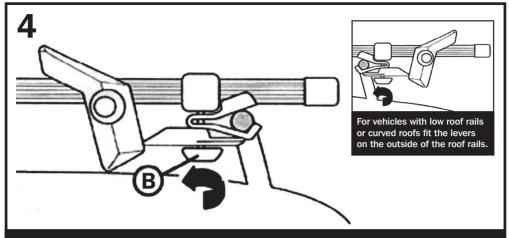

4. Tighten adjustment knob B securely onto roof rail.

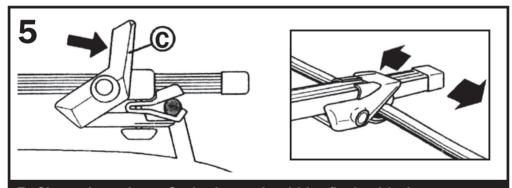

5. Close clamp lever C; the lever should be flush with the top of the load bar when closed. Check roof bar tightness by firmly pushing/pulling on end of roof bar. It should not slip. If necessary repeat step 4 in order to achieve sufficient tightness.

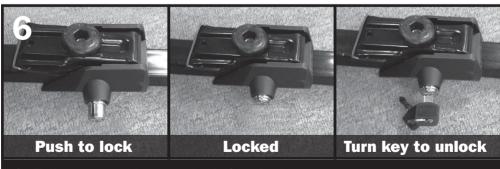

6. Follow steps above to lock & unlock.

SWRB3 Manual AW 2018.indd 5 12/09/2018 11:47