

1

White Noise Sound Machine

Model:A800



User Manual

Please read the user manual carefully before using the device

2

Packing List


- White Noise Sound Machine X 1
- Power Supply Adapter X 1
- User Manual X 1

Specifications

- Model: A800
- Adapter Input: 100-240V-50/60Hz
- Adapter Output: 5V=1A
- Device Working Voltage: DC5V=1A
- Lamp Power: 2W
- Speaker Specifications: 52mm,4Ω3W
- Product Size: 118 X118 X 62.5 mm

3

Touch Button

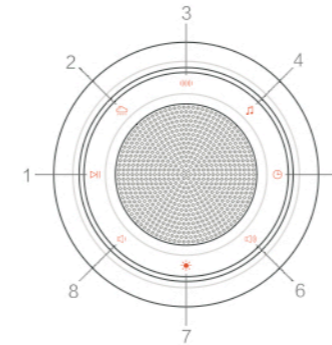


- 1.Sound Playing Button(Long Press: On/Off Sound) (Short Press: Play/Pause)
- 2.Nature Sound Button
- 3.White Noise Sound & Fan Sound Buttons
- 4.Lullaby Sound Button
- 5.Timer
- 6.Volume Up
- 7.Night Light Button
- 8.Volume Down

4

Power On/Off

Note: There is no built-in battery for machine. Please connect the machine to a power source using the power adapter provided before use. Please make sure checking the marked voltage of power adapter is suit for the local supply voltage. When not using for a long time, please unplug the power supply.

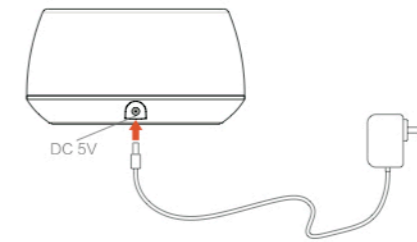

Night Light

The night light can be used after the power is turned on. Touch the night light button* to switch on the night light which is including warm white and colorful light, then in turn to touch warm white low bright, warm white high bright, colorful orange,blue,green,purple,yellow, colorful breath light, long press touch night light button * is the closed night light.

5

Sound Play

Long press button to switch on the voice play it, can short press button play it and pause when playing process. And then long press play button is the switch off sound.

Choose Your Sound

- Nature**
Click on the touch to change the natural sound, then press touch button can choose different sounds in a group.
- 1) Crickets
 - 2) Singing Birds
 - 3) Ocean Wave
 - 4) Thunderstorm
 - 5) Water Stream
 - 6) Water Channel

- White Noise Sound & Fan Sound**
Click on the touch to change the white noise sound, then press touch button can choose different sounds in a group.
- 1) White Noise
 - 2) Pink Noise
 - 3) Brown Noise
 - 4) Fan Noise
 - 5) Fetal Heart Sound
 - 6) Clothes Dryer

- Lullaby Sound**
Click on the touch to change Lullaby Sound, then press touch can choose the different sound in a group.
- 1) Twinkle Twinkle Little Star
 - 2) Hush Little Baby
 - 3) Rock A Bye Baby
 - 4) Moon Night Song

6

Volume Control

- Volume Up:** Long press or short press to turn up the volume and you will hear a "du" sound when volume reaches it's maximum.
- Volume Down:** Long press or short press to turn down the volume until it's mute.

Set a Timer

It can timing night light using and sound when switch on the night light or play sound. Also can timed shutdown. As well switch off night light and sound at same time. Short press the timer to set timer for 15/30/60/90/120 minutes or turn off the timer by pressing and holding the for 2 seconds. the machine will automatically turn off after the selected time.

Note: Turn off the timer if you wish to listen to the sounds continuously.

7

Safety Instructions

- Before connecting this product to the power supply, please check whether the voltage marked by the power adapter matches the local supply voltage.
- Never use an adapter that exceeds the voltage and power marked on this product to connect the machine.
- If an abnormal situation occurs during use, stop using it immediately and switch off the power.
- Do not allow this product to enter into the water, do not use it in a humid environment (for example: bathroom, swimming pool...).
- Please do not throw or hit this product to avoid damage to the product.
- Recommended to use this product within the ambient temperature range: -10°C-50°C.
- When not using for a long time, please turn off the power.

8

Warranty

Thank you for purchasing this finely engineered, quality product from us.

Our utmost care and attention has gone into providing you with a product which will give you one years of care-free service.

Our products are covered by warranty from defects in materials and workmanship for a period of one year. The following conditions will apply. All products returned for defects in material or workmanship shall be repaired or replaced with equal units(at our option)at no charge subject to the following provisions.

Inspection of the unit must disclose that all defects are as specified and that defective equipment has not been improperly and contrary to our instructions been altered damaged by improper line voltages or polarity, increase of fuse value other than recommended, defaced or treated in negligent manner.

We are not responsible for product damage caused by improper use.

Has inspection Checker:QC01