


Print camera




2.4-inch large screen

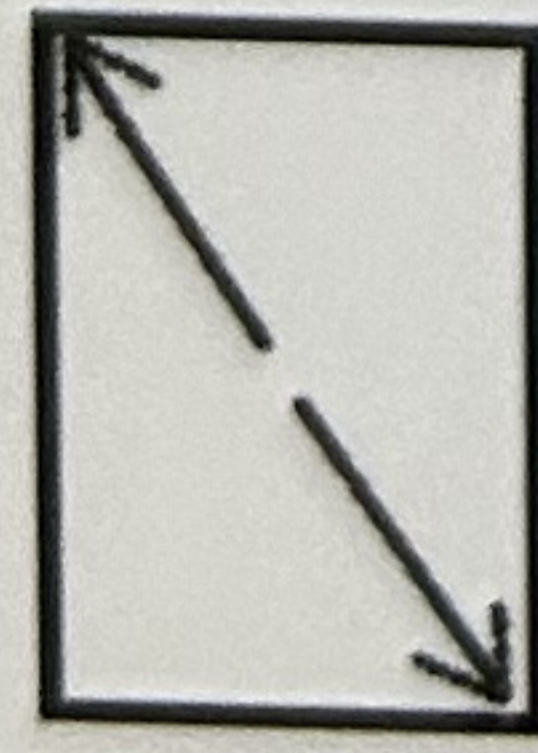

1200mAh large battery



Photo sticker

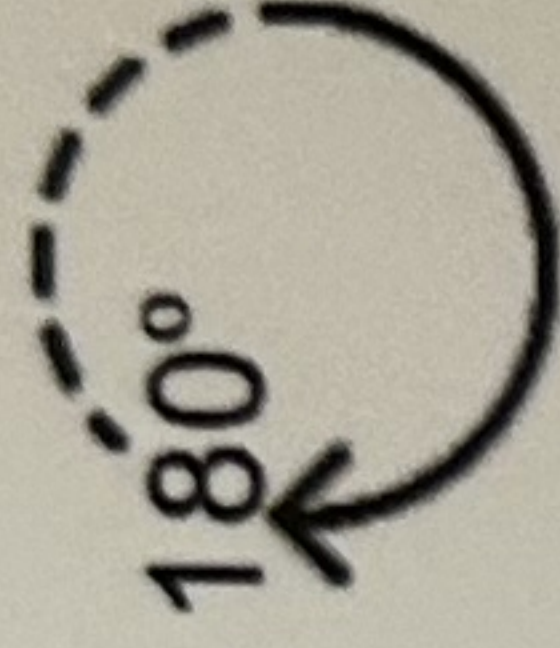

180 degree rotating lens



Support expansion



Environmental protection material

caveat:


1. This product contains small parts, there is a danger of suffocation, not suitable for children under 3 years old.
2. Do not immerse the battery in water, pay attention to moisture and explosion.
3. Do not get close to the fire source when playing.
4. Do not disassemble or modify the battery without authorization.
5. This product needs to be used under direct adult supervision.
6. Toys are not allowed for children under 3 years of age
7. Toys can only use the recommended transformer.
8. Transformer are not toys.
9. There is important information on the package, which must be retained.

This product contains electronic components, please do not place it near humid, high temperature environment and flammable objects to avoid falling
Keep wet and damp, please clean the surface dirt with a dry cloth.

battery cautions

1. This machine uses a built-in 7.4V / 1200mAh polymer battery, which cannot be removed and replaced. If it is damaged, please contact the seller for repair.
2. The battery must be charged under adult supervision. When the battery is charging, the toy switch should be turned off.
3. The power terminals must not be short-circuited. Cannot be connected to more than the recommended number or greater than the recommended voltage (recommended adapter specifications: 5V 2A)
4. During the use of the toy, it should be regularly checked whether the wire plug shell and other parts are damaged. If the damage is found, the use should be stopped until the repair is intact.
5. When not using the machine for a long time, please turn off the power switch after fully charging the battery.

The pictures on the packaging are for reference only, please refer to the actual product.

CE **FC** **RoHS**  **MADE IN CHINA**