

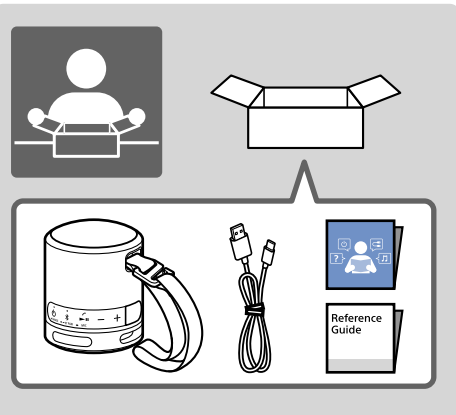
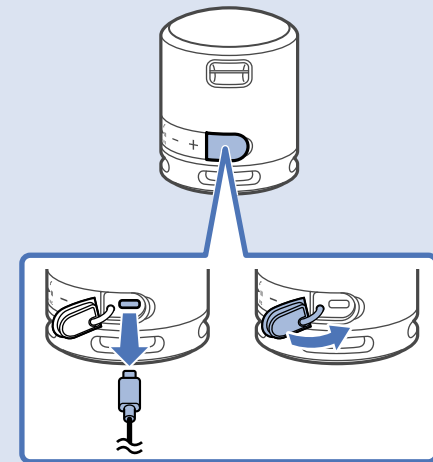


SONY®


1

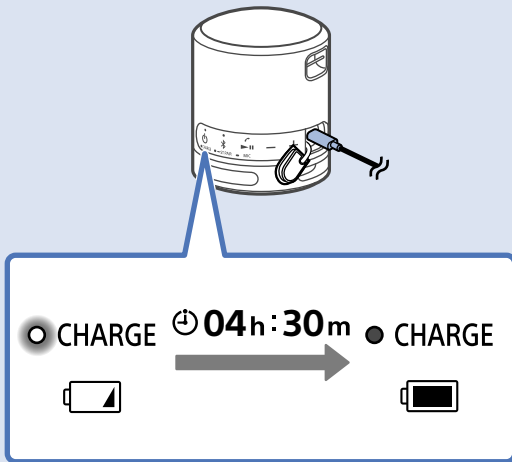


SRS-XB13

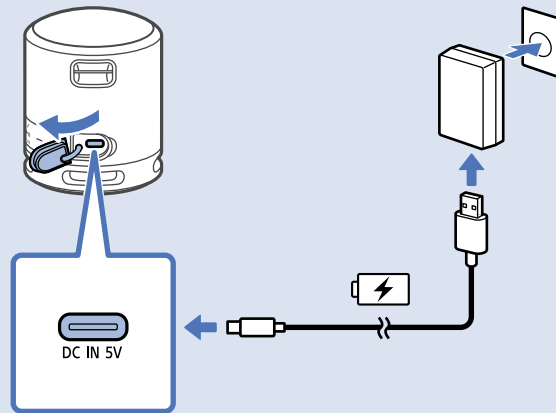





2

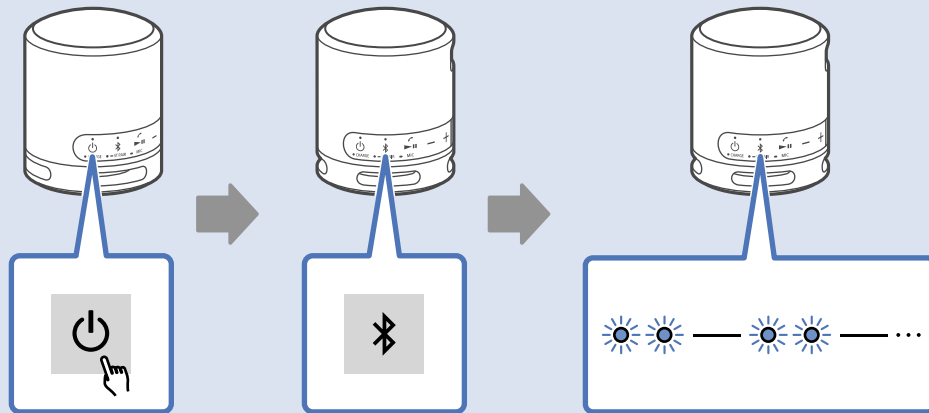




Android™ iPhone

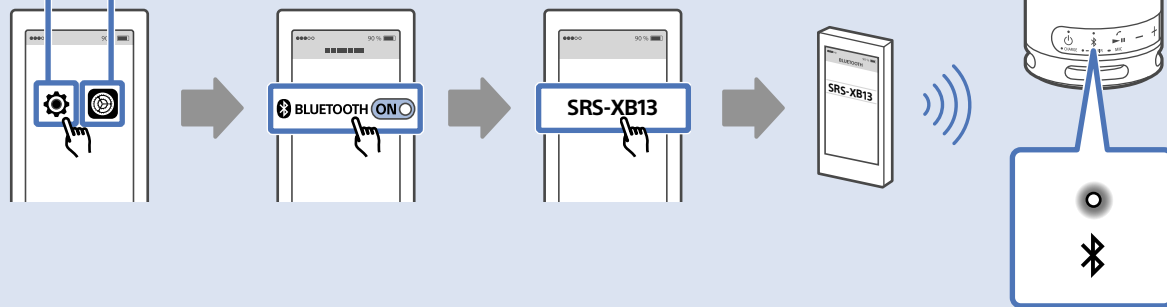

# 3

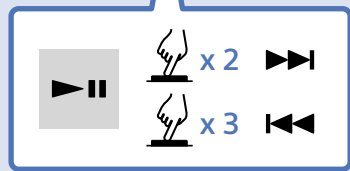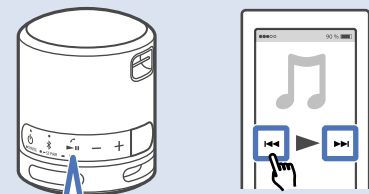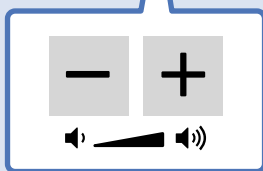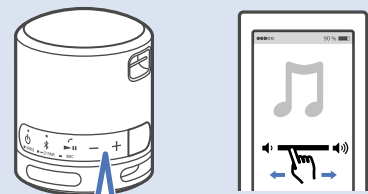

 [https://rd1.sony.net/help/speaker/srs-xb13/h\\_zz/](https://rd1.sony.net/help/speaker/srs-xb13/h_zz/)

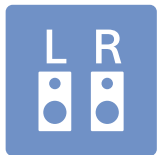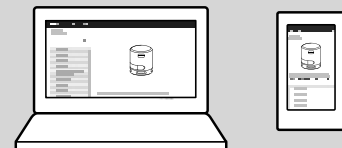

SRS-XB13



SRS-XB13

