

① Removable fin * 3




② Waterproof mobile cover * 1



④ Backpack * 1




③ Safety leash * 1

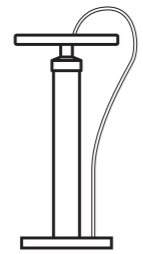


⑤ Double-action pump*1



⑥ Floating paddle * 1

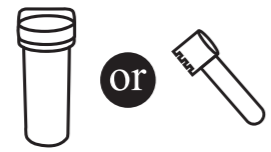

⑦ Repair kit * 1 or Repair wrench * 1

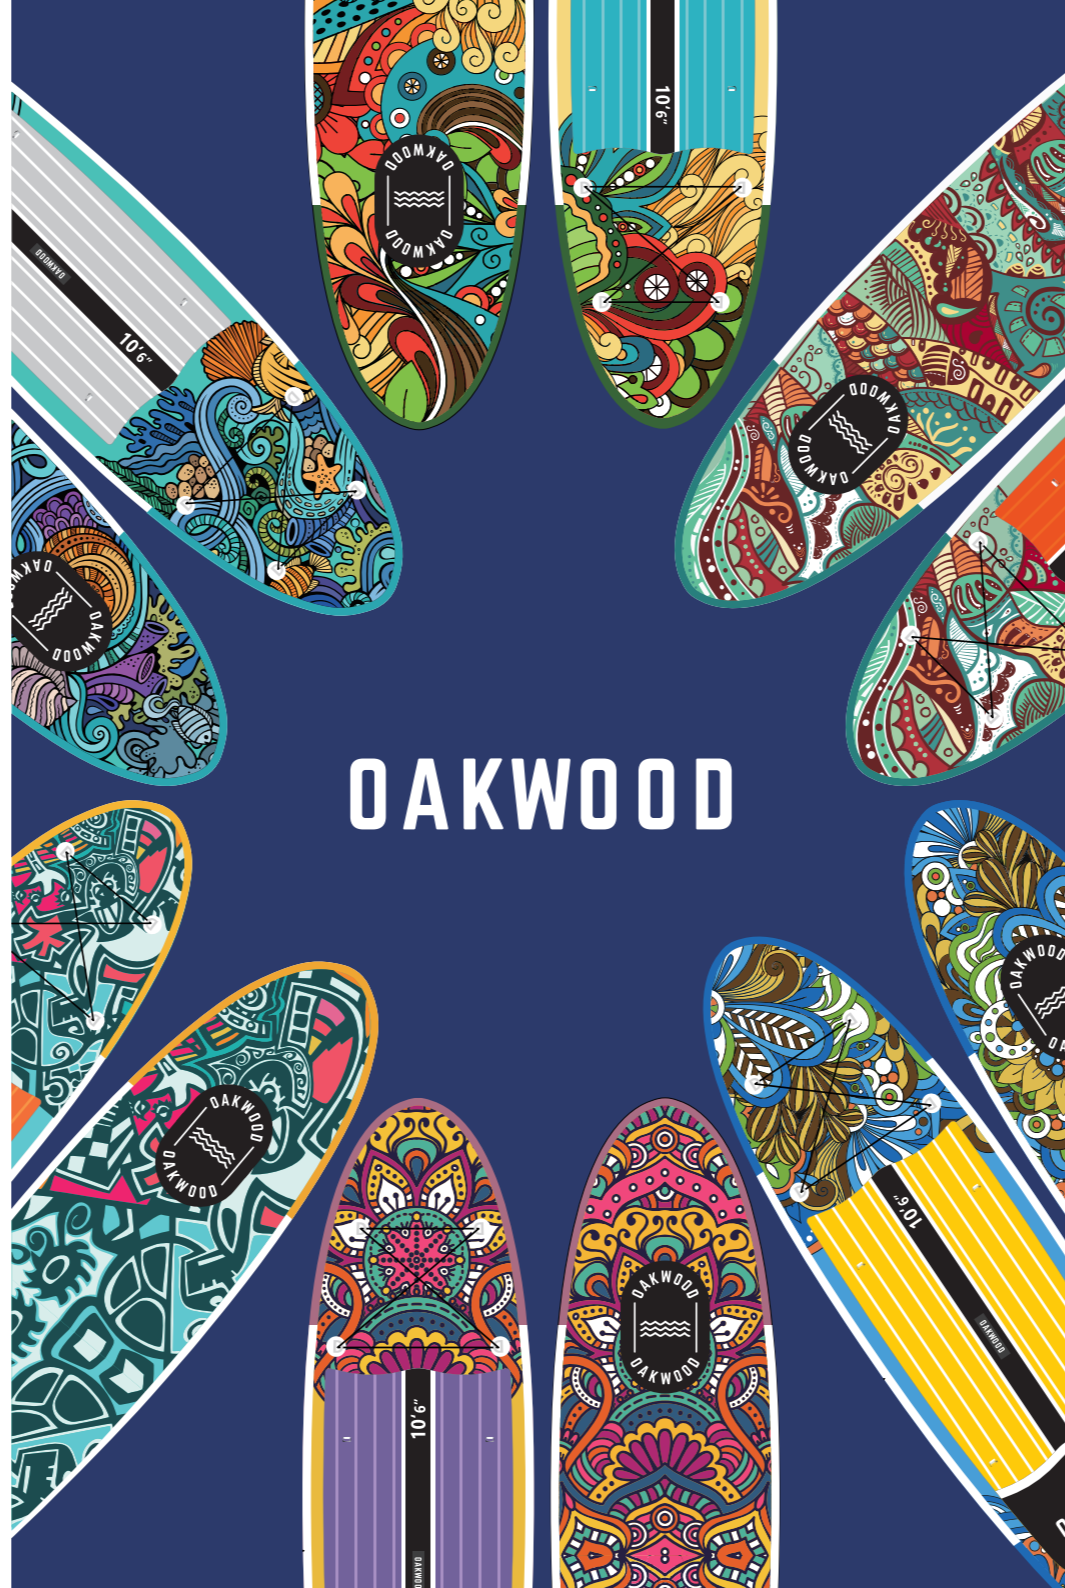

OAKWOOD




USER MANUAL

Standing Paddle Board


For any questions about our product, please feel free to contact us by email, **OAKWOOD** Service Team will reply within 24 hours.

2-YEAR WARRANTY


1 HOW TO INFLATE?

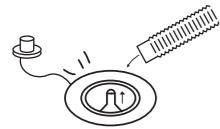

1. Connect the valve with the air hose, with the spring bounced up

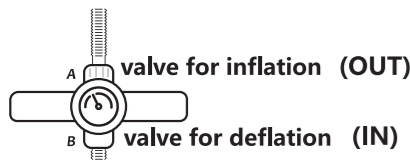

2. Connect the pump to the valve for inflation.

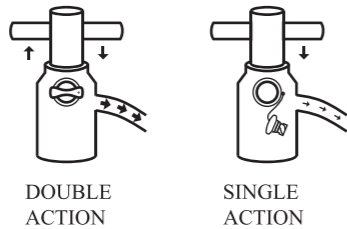


- 3.
- 1) Use double-action mode to inflate (with the piston locked).
 - 2) Switch to single-action mode when reaching 8 PSI (with the piston unlocked).

3) Keep inflating until full.


* Please note that the needle on the gauge won't move until it gets 5 PSI.

2 TWO WAYS TO DEFLATE

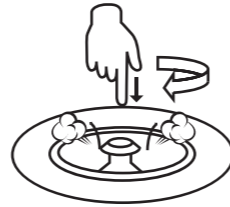

Method 1 (Recommended):


Directly press down on the air tap.

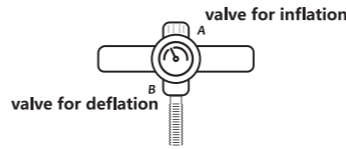

Method 2:

Use the pump to deflate (valve for deflation).

3 HOW TO INSTALL THE FINS

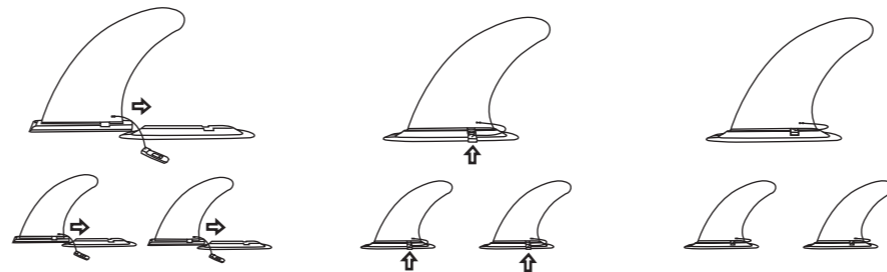


1. Insert the removable fin into the base

2. Insert the buckle into the pin


3. Removable fins

*If the fins are bent by tight storage, place them in boiling water or use heat (e.g. hairdryer) to reform them into original shape.


4 HOW TO ASSEMBLE THE PADDLE?

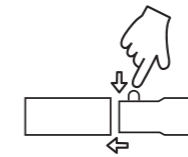

1. Push down the button on the oar;




2. Connect tightly;



3. Unlock the buckle to adjust the length.


5 HOW TO SOLVE VALVE LEAKAGE (with wrench)?

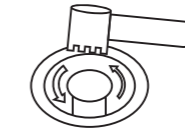

Turn the valve counterclockwise and remove it.



Sort out the extra thread inwards.

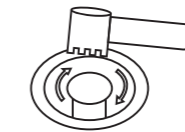

Reinstall the valve and tighten it.

6 OTHER IMPORTANT REMIANINGS

- Avoid storing your SUP board in direct sunlight.
- Clean the paddle board before storing. After rinsing the paddle board, please leave it in a cool place to dry.
- Do not roll up the board too tight while storing it.
- After each inflation, make sure that the paddle board is not leaking and the air pressure is 12 to 15 PSI.
- Avoid letting the fins touch the beach or other rough surfaces.