

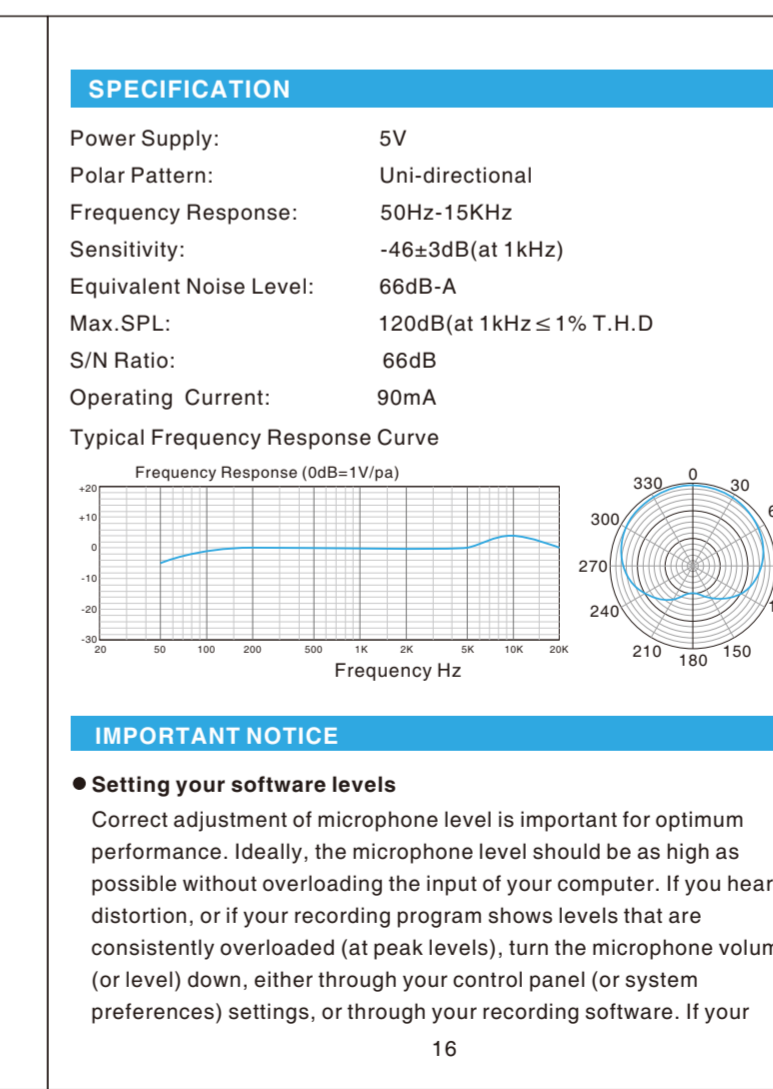
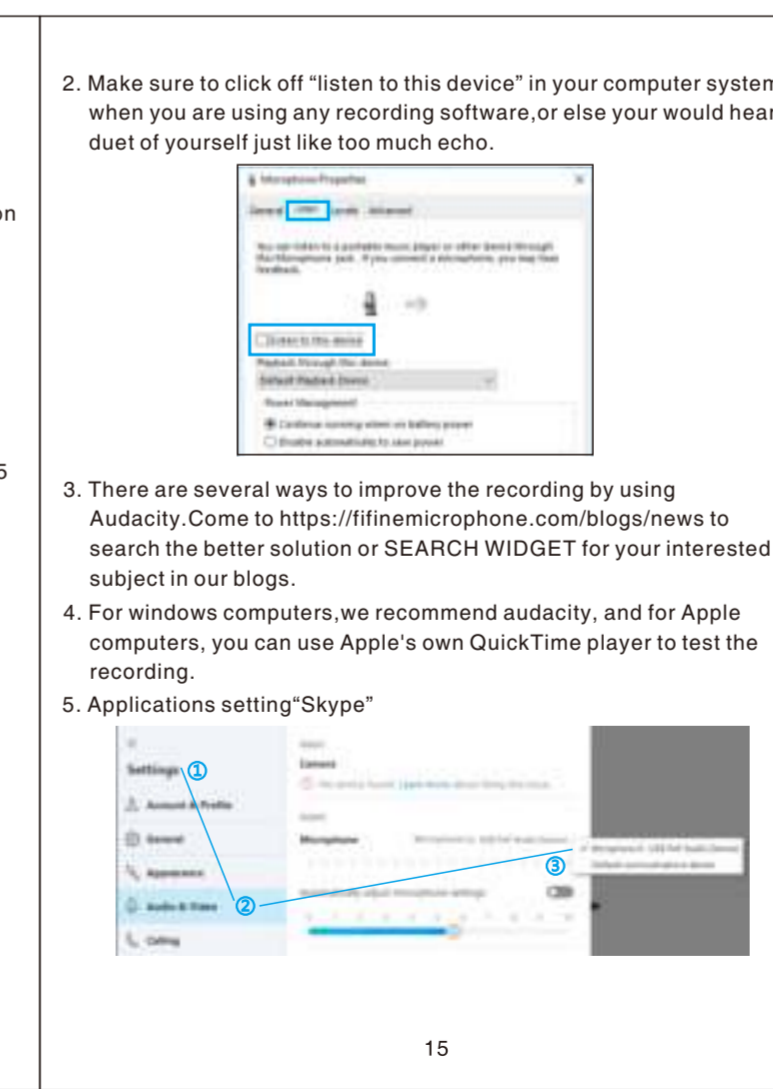
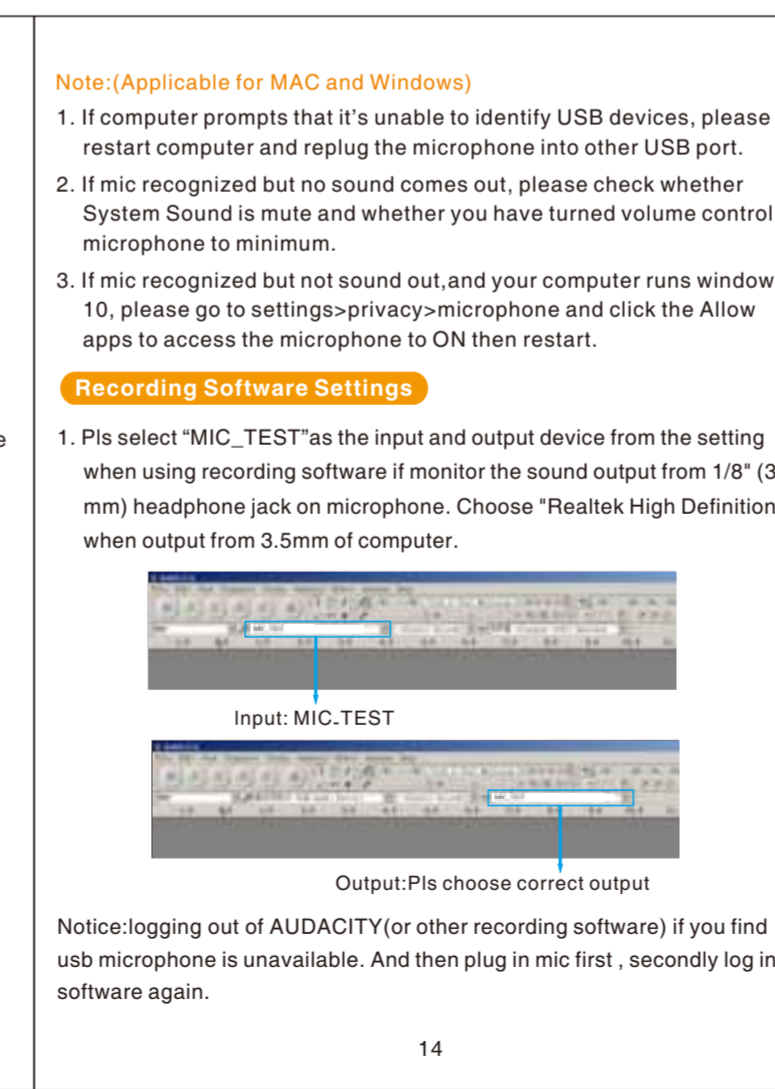
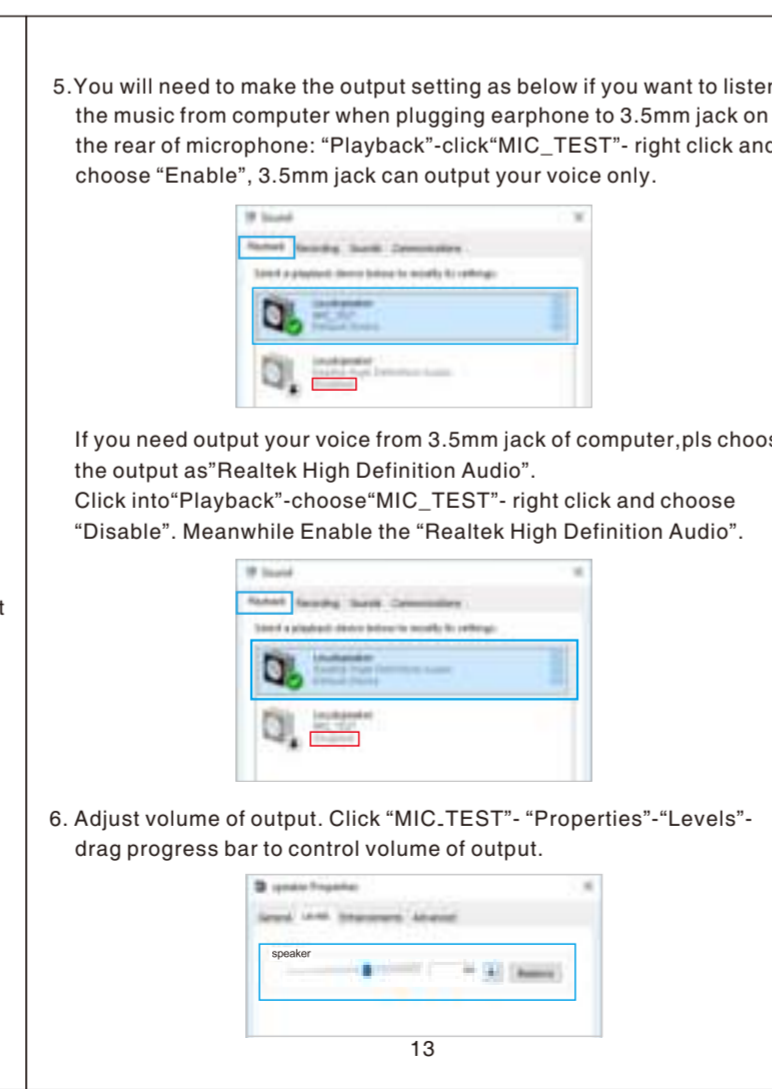
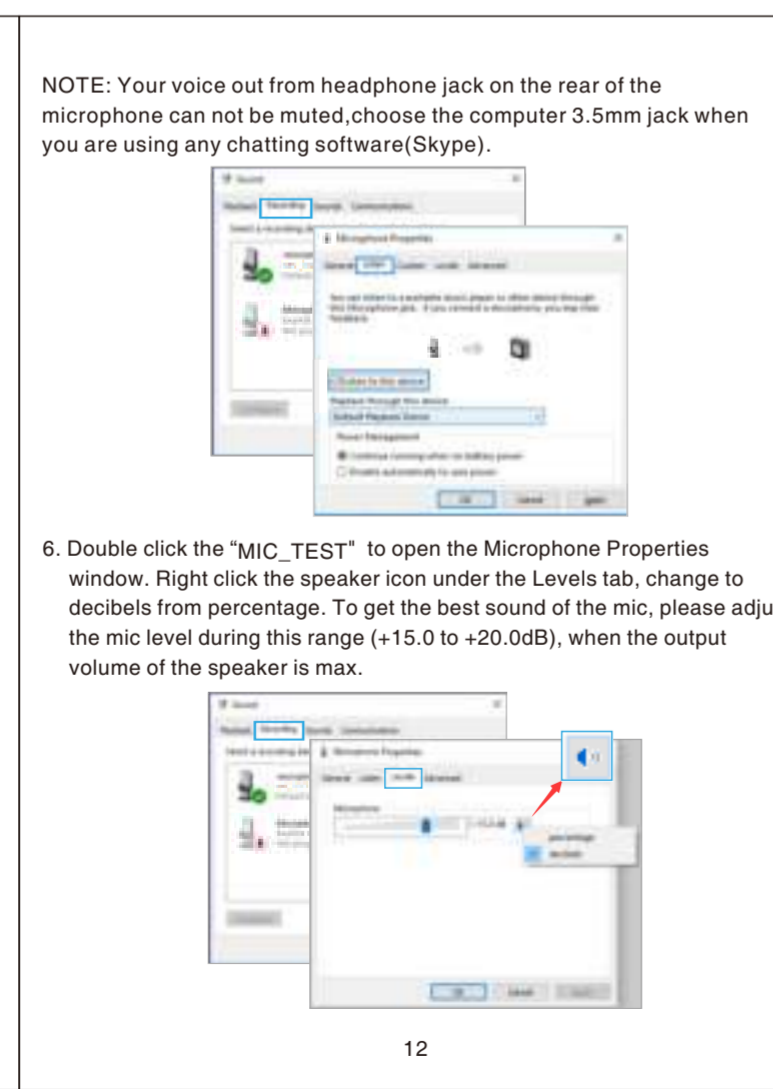
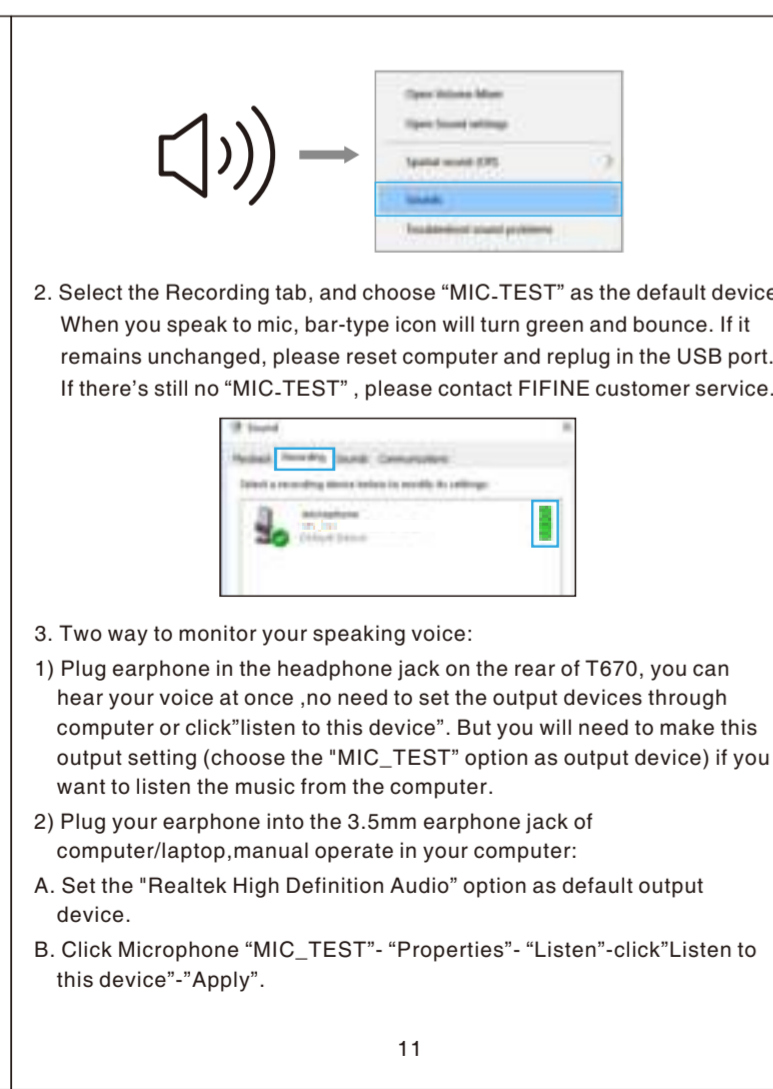
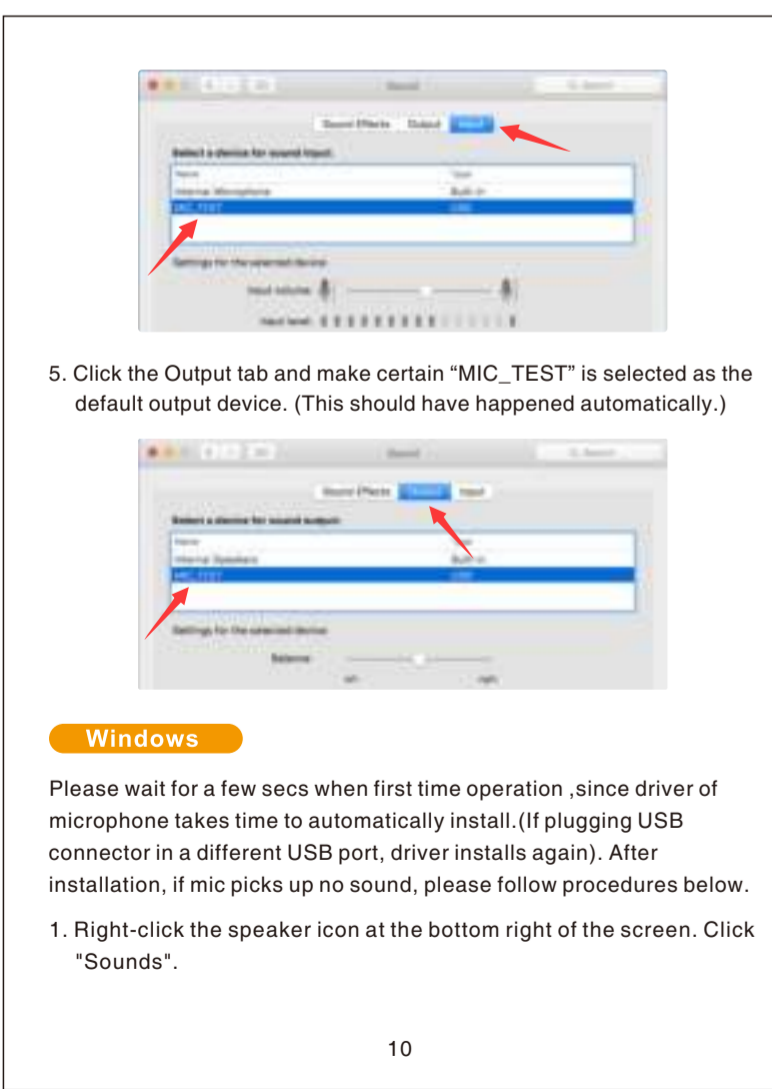
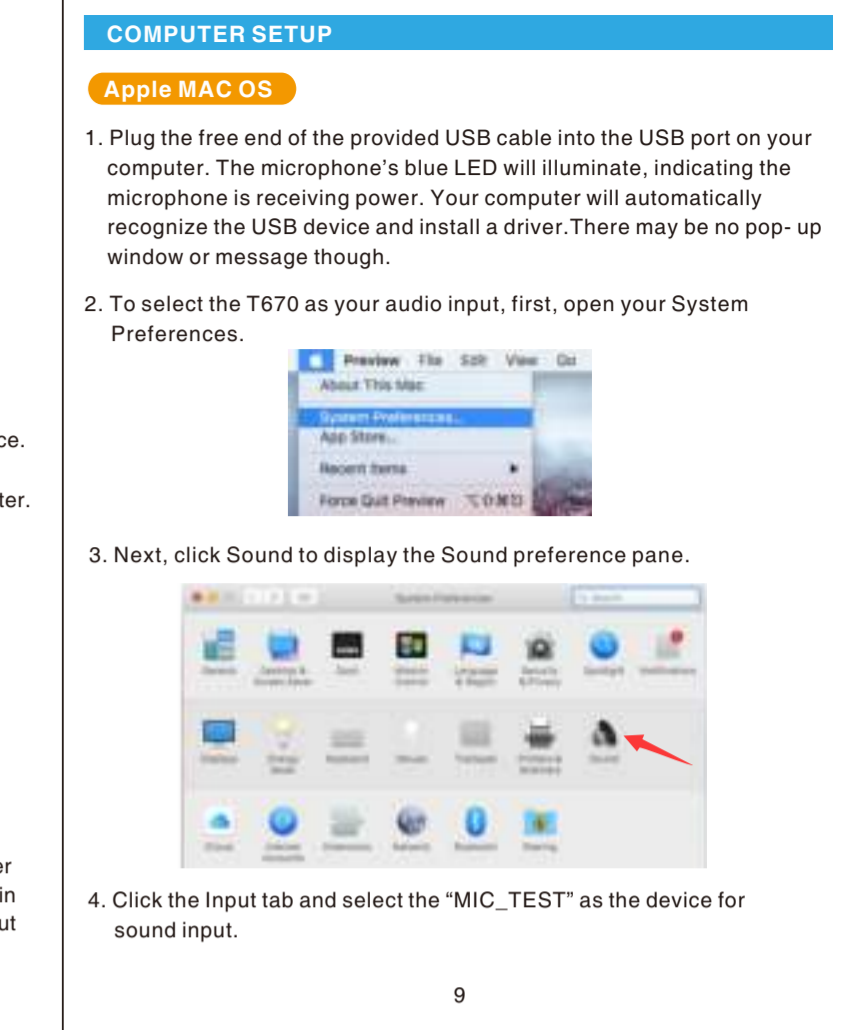
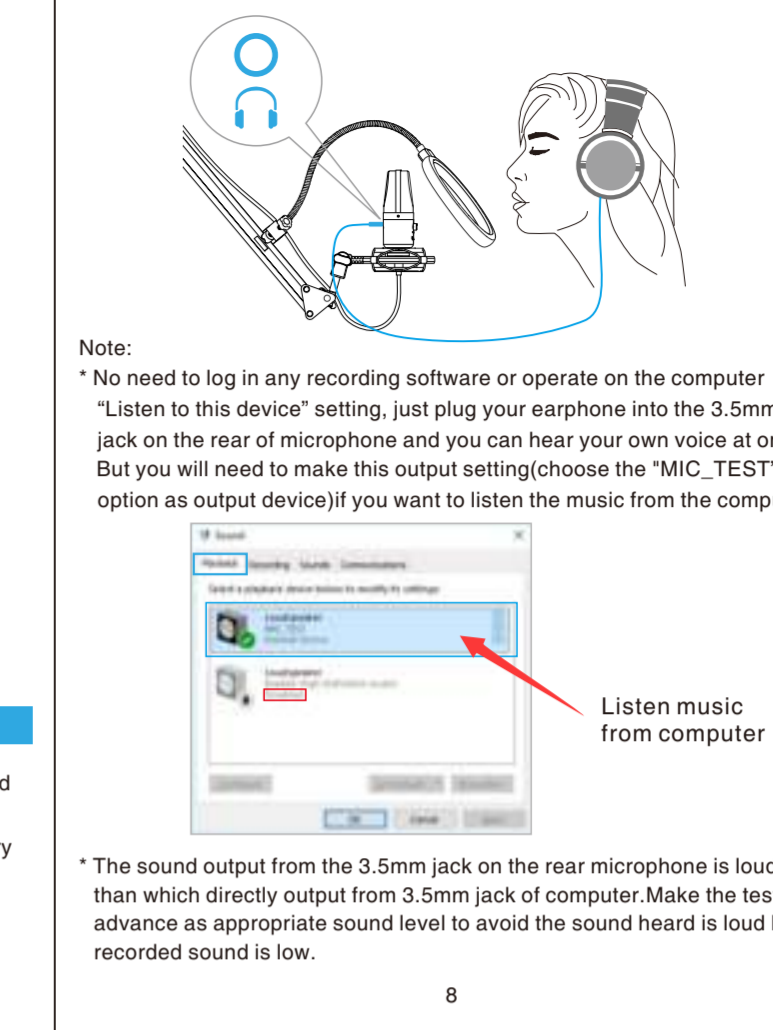
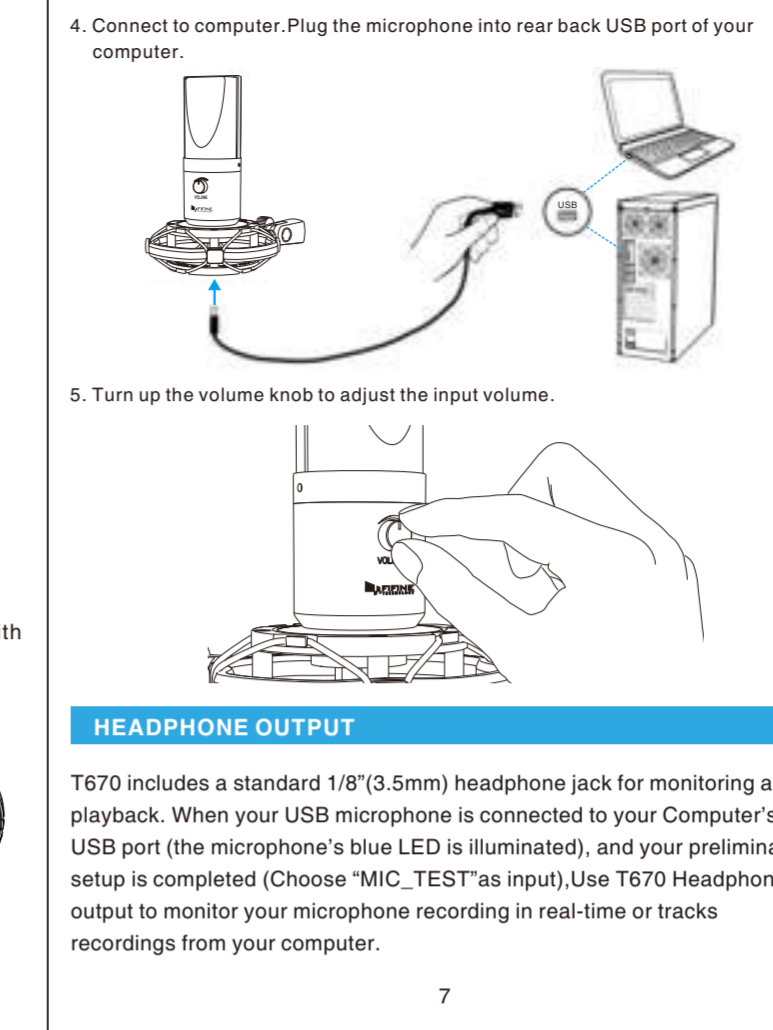
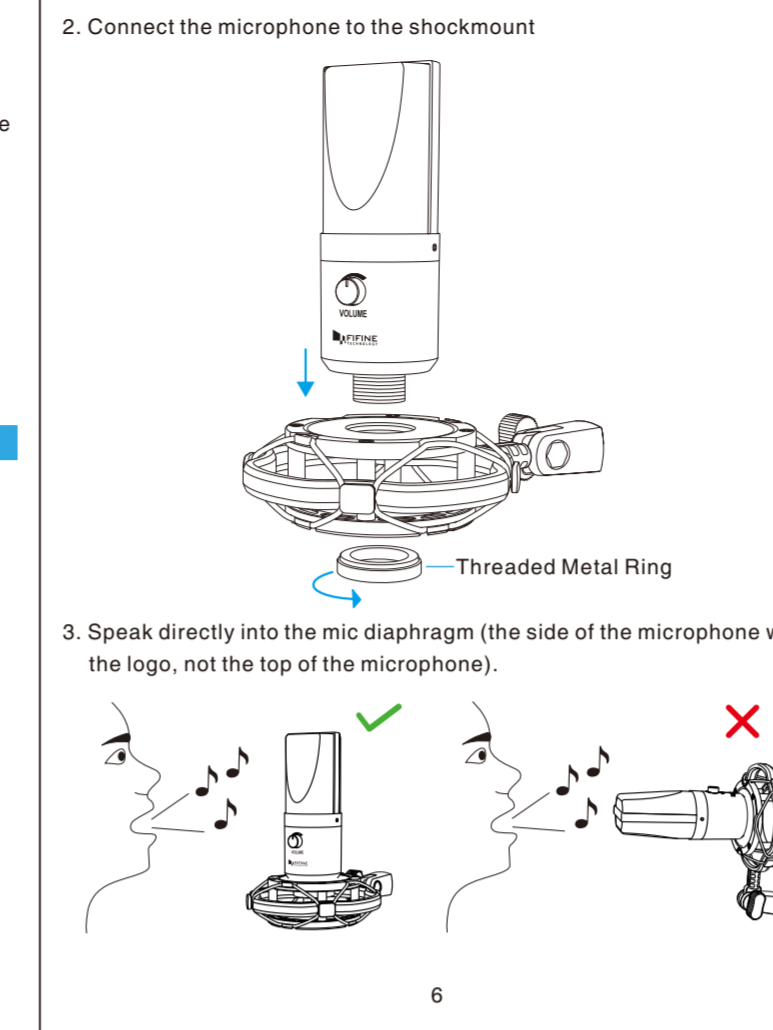
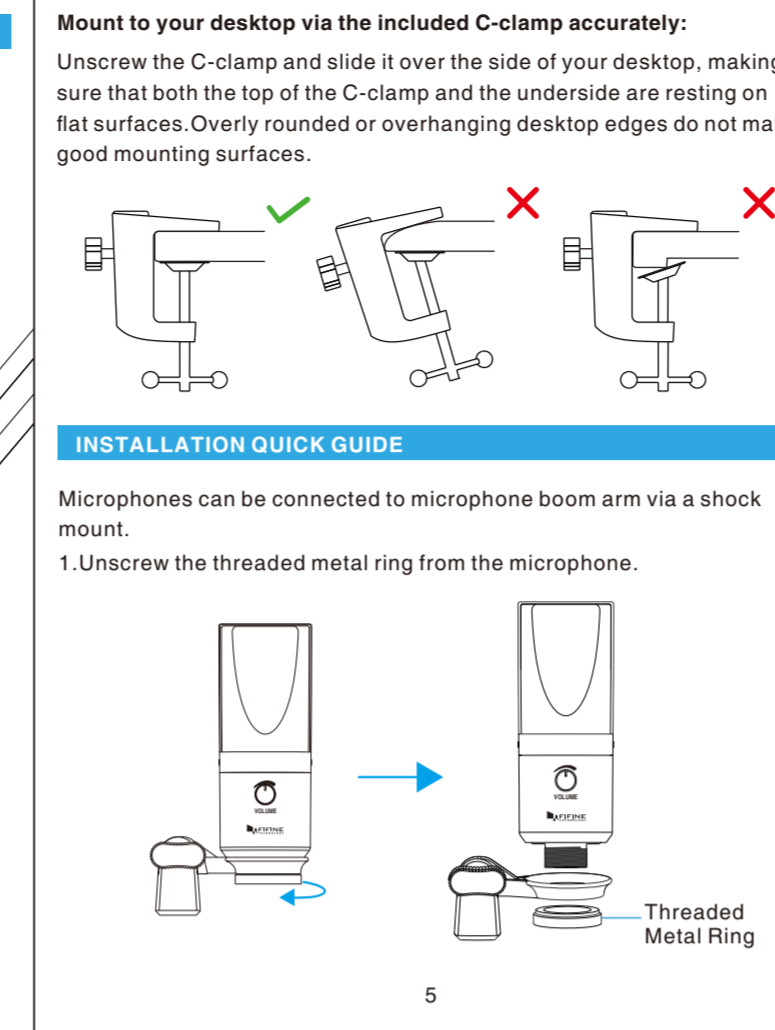
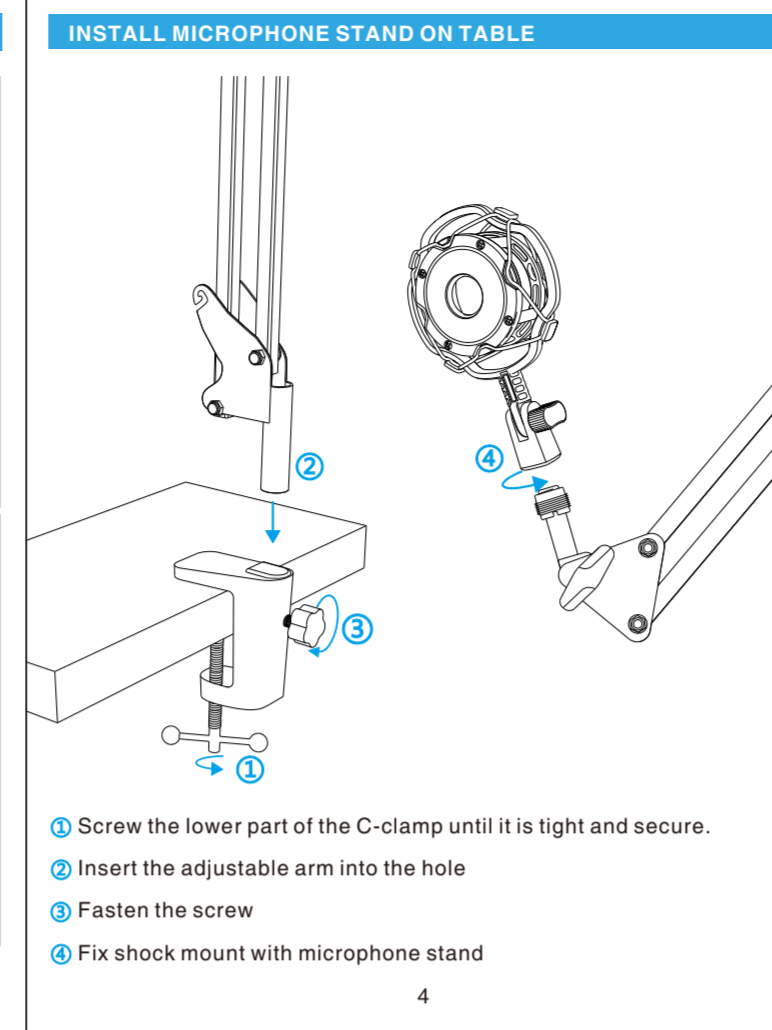
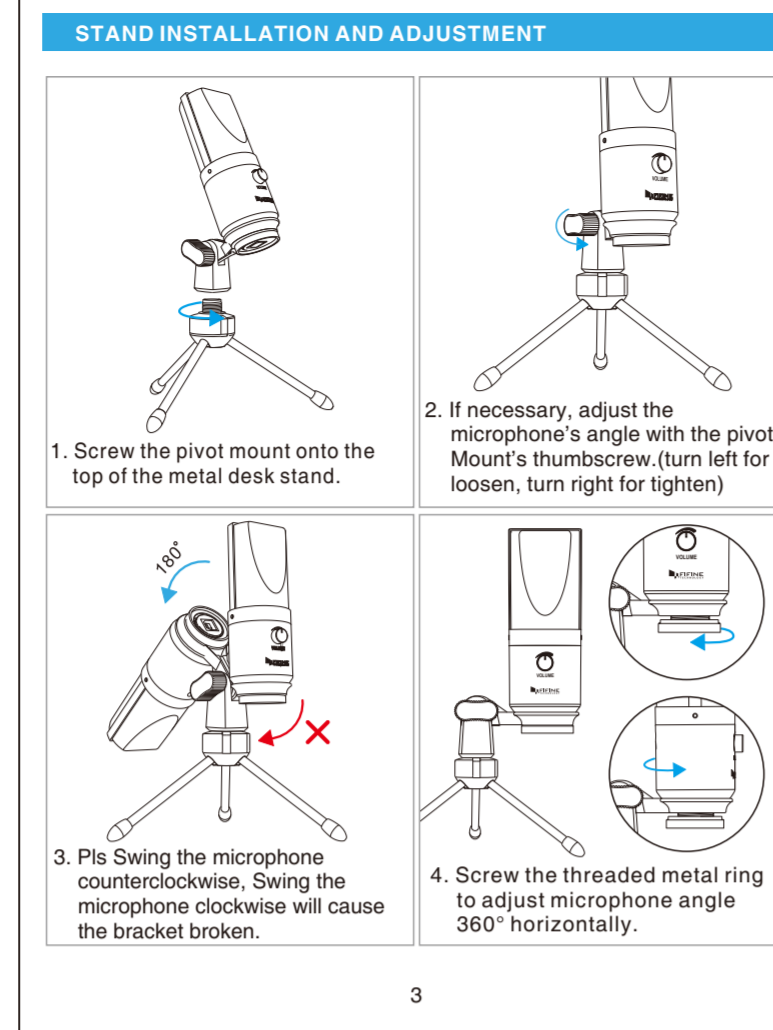


CONTENTS
Install Operation 3-8
Computer set-up(windows&MAC OS) 9-14
Software Settings14-15
Important Notice16-17
CONTACT US
Get Social:  Facebook page:http://bit.ly/FifinePage
Contact Info:  E-mail:web@fifine.cc
WARRANTY
Fifine microphone warrants its hardware product defects in materials and workmanship for a period of one year from the date of original retail purchase, provided the purchase was made from an authorized Fifine microphone dealer. This warranty is void if the equipment is altered, misused, mishandled, suffers excessive wear or is serviced by any parties not authorized by Fifine Microphone. For warranty service ,contact your local distributor or web@fifine.cc
1



recording program shows insufficient level, you can increase the microphone gain either from the control panel (or system preferences) settings or through your recording program.

- **Selecting software**
You have many choices in recording software. Audacity, available for free online at <http://audacity.sourceforge.net/>, is a widely used software program that provides basic recording software. Note:The microphone must be plugged in first and secondly turning on the recording software.
- **Positioning your microphone**
It is important to position the microphone directly in line (on axis) with the person speaking/ singing or instrument (or other sound source) to achieve the best frequency response of the microphone.For use in speaking/singing applications, the ideal placement for the microphone is directly in front of the person speaking/singing. The same placement is optimal when miking an instrument such as an acoustic guitar, drums or piano. Experiment with different mic placements to find the best sound for your particular setup.
- **Protecting your microphone**
Avoid leaving your microphone in the open sun or in areas where temperatures exceed 110° F (43° C) for extended periods. Extremely high humidity should also be avoided.
- **Choose your output setting** ⚠️
When you plug microphone to your pc, it cancels the audio from any other audio file played or there's no sound on the playback,you need to manually select the "speaker (Realtek High Definition Audio)" as the default playback device.

17



要求：4色折页