



MC28H5015\*\*

# Microwave Oven

## Owner's instructions & Cooking guide

Please be advised that the Samsung warranty does NOT cover service calls to explain product operation, correct improper installation, or perform normal cleaning or maintenance.

**Planet First** **100 % Recycled Paper**

**This manual is made with 100 % recycled paper.**

imagine the possibilities

Thank you for purchasing this Samsung product.  
To receive more complete service, please register your product at

[www.samsung.com/register](http://www.samsung.com/register)



## contents

<b>Safety information</b> .....	<b>2</b>
<b>Quick look-up guide</b> .....	<b>11</b>
<b>Oven features</b> .....	<b>12</b>
Oven .....	12
Control panel .....	13
Accessories .....	13
<b>Oven use</b> .....	<b>14</b>
How a microwave oven works .....	14
Checking that your oven is operating correctly .....	15
Setting the time .....	15
Cooking/Reheating .....	16
Power levels and time variations .....	16
Adjusting the cooking time .....	16
Stopping the cooking .....	17
Setting the energy save mode .....	17
Using the auto reheat/cook features .....	17
Using the healthy cooking features .....	19
Using the dough proof/yogurt features .....	21
Using the power defrost features .....	22
Convection .....	23
Grilling .....	23
Combining microwave and grill .....	24
Combining microwave and convection .....	24
Choosing the accessories .....	25
Using the child lock features .....	25
Using the turntable on/off features .....	25
Using the manual crusty cook function (Only MC28H5015C*, MC28H5015Z* model use) .....	26
Using the steam cook function (Only MC28H5015F*, MC28H5015Z* model use) .....	27
Manual steam cook settings .....	27
Spit-roasting (Only MC28H5015Z* model use) .....	28
Using the vertical multi-spit .....	29
Using the deodorisation features .....	30
Switching the beeper off .....	30
<b>Cookware guide</b> .....	<b>30</b>
<b>Cooking guide</b> .....	<b>31</b>
<b>Troubleshooting and error code</b> .....	<b>40</b>
Troubleshooting .....	40
Error code .....	41
<b>Technical specifications</b> .....	<b>41</b>
















## safety information

### USING THIS INSTRUCTION BOOKLET

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain valuable information on cooking with your microwave oven:

- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips
- Cooking tips

### LEGEND FOR SYMBOLS AND ICONS


	<b>WARNING</b>	Hazards or unsafe practices that may result in <b>severe personal injury or death</b> .	
	<b>CAUTION</b>	Hazards or unsafe practices that may result in <b>minor personal injury or property damage</b> .	
	Warning; Fire hazard		Warning; Hot surface
	Warning; Electricity		Warning; Explosive material
	Do NOT attempt.		Do NOT touch.
	Do NOT disassemble.		Follow directions explicitly.
	Unplug the power plug from the wall socket.		Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.		Note
	Important		

## IMPORTANT SAFETY INSTRUCTIONS

### READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Make sure that these safety precautions are obeyed at all times.







**Before using the oven, confirm that the following instructions are followed.**

 <b>WARNING</b> (Microwave function only)	
<input type="checkbox"/>	<b>WARNING:</b> If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
<input type="checkbox"/>	<b>WARNING:</b> It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
<input checked="" type="checkbox"/>	This appliance is intended to be used in household only.


<input checked="" type="checkbox"/>	<b>WARNING:</b> Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
<input checked="" type="checkbox"/>	<b>WARNING:</b> This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
<input checked="" type="checkbox"/>	Only use utensils that are suitable for use in microwave ovens.
<input checked="" type="checkbox"/>	When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignitions.








★	The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
☞	If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
★	<b>WARNING:</b> Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
★	<b>WARNING:</b> The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
☒	Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
★	The oven should be cleaned regularly and any food deposits removed.

☞	Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
☒	The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.
★	This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
★	Children should be supervised to ensure that they do not play with the appliance.
☞	If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
☒	<b>WARNING:</b> Liquids or other foods must not be heated in sealed containers since they are liable to explode;

	The appliance should not be cleaned with a water jet.
	This oven should be positioned proper direction and height permitting easy access to cavity and control area.
	Before using the your oven first time, oven should be operated with the water during 10 minute and then used.
	If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.
	The microwave oven has to be positioned so that plug is accessible.
	The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet.

 **WARNING**  
(Oven function only) - Optional

	<b>WARNING:</b> When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
---	--

	During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
	<b>WARNING:</b> Accessible parts may become hot during use. Young children should be kept away.
	A steam cleaner is not to be used.
	<b>WARNING:</b> Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
	<b>WARNING:</b> The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
	The temperature of accessible surfaces may be high when the appliance is operating.
	The door or the outer surface may get hot when the appliance is operating.
	Keep the appliance and its cord out of reach of children less than 8 years.

English - 5

★	This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
☐	Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
☐	Appliances are not intended to be operated by means of an external timer or separate remote-control system.

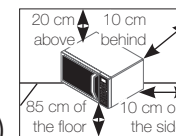
This product is a Group 2 Class B ISM equipment. The definition of group 2 which contains all ISM equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and

EDM and arc welding equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

### **INSTALLING YOUR MICROWAVE OVEN**

Place the oven on a flat level surface 85 cm above the floor. The surface should be strong enough to safely bear the weight of the oven.

1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.
2. Remove all packing materials inside the oven.
3. Install the roller ring and turntable. Check that the turntable rotates freely. (Turntable type model only)
4. This microwave oven has to be positioned so that plug is accessible.



- ☑ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.  
For your personal safety, plug the cable into a proper AC earthed socket.
- ☑ Do not install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

## **CLEANING YOUR MICROWAVE OVEN**

The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:


- Inside and outside surfaces
  - Door and door seals
  - Turntable and Roller rings  
(Turntable type model only)
- ☑ **ALWAYS** ensure that the door seals are clean and the door closes properly.

- ☑ Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
  2. Remove any splashes or stains on the inside surfaces of oven with a soapy cloth. Rinse and dry.
  3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice in the oven and heat for ten minutes at maximum power.
  4. Wash the dishwasher-safe plate whenever necessary.
- ☑ **DO NOT** spill water in the vents. **NEVER** use any abrasive products or chemical solvents. Take particular care when cleaning the door seals to ensure that no particles:
- Accumulate
  - Prevent the door from closing correctly

- ☑ **Clean** the microwave oven cavity right after each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury.

When cleaning the upper part inside the cavity, it will be convenient to turn heater downward by 45 ° and clean it. (Swing heater model only)



## STORING AND REPAIRING YOUR MICROWAVE OVEN

A few simple precautions should be taken when storing or having your microwave oven serviced.

The oven must not be used if the door or door seals are damaged:

- Broken hinge
- Deteriorated seals
- Distorted or bent oven casing

Only a qualified microwave service technician should perform repair

- ☑ **NEVER** remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:

- Unplug it from the wall socket
- Contact the nearest after-sales service centre

- ☑ If you wish to store your oven away temporarily, choose a dry, dustfree place. **Reason :** Dust and damp may adversely affect the working parts in the oven.

- ☑ This microwave oven is not intended for commercial use.

- ☑ The Light bulb should not be replaced in person for safety reasons. Please contact nearest authorised Samsung customer care, to arrange for a qualified engineer to replace the bulb.

⚠ WARNING		🔥	⚡	🚰	👤
🔧	Only qualified staff should be allowed to modify or repair the appliance.	✓	✓	✓	✓
📦	Do not heat liquids and other food in sealed containers for microwave function.	✓	✓	✓	✓
🚰	For your safety, do not use high-pressure water cleaners or steam jet cleaners.	✓	✓	✓	✓
📦	Do not install this appliance; near heater, inflammable material; in a humid, oily or dusty location, in a location exposed to direct sunlight and water or where gas may leak; on un level ground.	✓	✓	✓	✓
🔌	This appliance must be properly grounded in accordance with local and national codes.	✓	✓	✓	✓

English - 8



<input checked="" type="checkbox"/>	Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.	✓	✓	✓	✓
<input type="checkbox"/>	Do not pull or excessively bend or place heavy object on the power cord.	✓	✓	✓	✓
<input checked="" type="checkbox"/>	In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug.	✓	✓	✓	✓
<input type="checkbox"/>	Do not touch the power plug with wet hands.	✓	✓	✓	✓
<input type="checkbox"/>	Do not turn the appliance off by unplugging the power plug while an operation is in progress.	✓	✓	✓	✓
<input type="checkbox"/>	Do not insert fingers or foreign substances. If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.	✓	✓	✓	✓
<input type="checkbox"/>	Do not apply excessive pressure or impact to the appliance.	✓	✓	✓	✓
<input type="checkbox"/>	Do not place the oven over a fragile object such as a sink or glass object.	✓	✓		
<input type="checkbox"/>	Do not use benzene, thinner, alcohol, steam cleaner or high pressure cleaner to clean the appliance.	✓	✓	✓	✓
<input type="checkbox"/>	Ensure that the power voltage, frequency and current are the same as those of the product specifications.	✓	✓		✓
<input type="checkbox"/>	Plug the power plug into the wall socket firmly. Do not use a multiple plug adapter, an extension cord or an electric transformer.	✓	✓	✓	
<input type="checkbox"/>	Do not hook the power cord on a metal object, insert the power cord between the objects or behind the oven.	✓	✓	✓	

<input type="checkbox"/>	Do not use a damaged power plug, damaged power cord or loose wall socket. When the power plug or power cord is damaged, contact your nearest service centre.	✓	✓	✓	✓
<input type="checkbox"/>	Do not pour or directly spray water onto the oven.	✓	✓		
<input type="checkbox"/>	Do not place objects on the oven, inside or on the door of the oven.	✓	✓	✓	
<input type="checkbox"/>	Do not spray volatile material such as insecticide onto the surface of the oven.	✓	✓		
<input type="checkbox"/>	Do not store flammable materials in the oven. Take special care when heating dishes or drinks that contain alcohol as alcohol vapours may contact a hot part of the oven.	✓		✓	✓
<input checked="" type="checkbox"/>	Keep children away from the door when opening or closing it as they may bump themselves on the door or catch their fingers in the door.	✓	✓	✓	✓
<input checked="" type="checkbox"/>	<b>WARNING:</b> Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize. Stir during heating, if necessary, and ALWAYS stir after heating. In the event of scalding, follow these FIRST AID instructions: <ul style="list-style-type: none"> <li>Immerse the scalded area in cold water for at least 10 minutes.</li> <li>Cover with a clean, dry dressing.</li> <li>Do not apply any creams, oils or lotions.</li> </ul>	✓	✓	✓	✓
<input type="checkbox"/>	Do not put the tray or rack in water shortly after cooking because it may cause breakage or damage of the tray or rack.				✓

	Do not operate the microwave oven for deep fat frying because the oil temperature cannot be controlled. This could result in a sudden boil over of the hot liquid.	✓			✓
--	--	---	--	--	---

<b>CAUTION</b>					
----------------	--	--	--	--	--

	Only use utensils that are suitable for use in microwave ovens; DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc. Remove wire twist ties from paper or plastic bags. Reason: Electric arcing or sparking may occur and may damage the oven.	✓		✓	✓
	Do not use your microwave oven to dry papers or clothes.	✓		✓	✓
	Use shorter times for smaller amounts of food to prevent overheating and burning food.	✓		✓	✓
	Do not immerse the power cable or power plug in water and keep the power cable away from heat.	✓	✓		
	Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended; Also do not heat airtight or vacuum-sealed bottles, jars, containers, nuts in shells, tomatoes etc.			✓	✓
	Do not cover the ventilation slots with cloth or paper. They may catch fire as hot air escapes from the oven. The oven may also overheat and switch itself off automatically, and will remain off until it cools sufficiently.	✓		✓	
	Always use oven mitts when removing a dish from the oven to avoid unintentional burns.			✓	
	Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.			✓	

	Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.				✓
	Do not operate the microwave oven when it is empty. The microwave oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the microwave oven is started accidentally.	✓			✓
	Install the oven in compliance with the clearances stated in this manual. (See installing your microwave oven.)	✓		✓	
	Take care when connecting other electrical appliances to sockets near the oven.	✓	✓	✓	

**PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.(MICROWAVE FUNCTION ONLY)**

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- (a) Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.
- (b) Do NOT place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.
- (c) Do NOT operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:
  - (1) door (bent)
  - (2) door hinges (broken or loose)
  - (3) door seals and sealing surfaces
- (d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit and/or damage to or loss of the accessory was caused by the customer. Items this stipulation covers include:

- (a) A Dented, Scratched, or Broken Door, Handle, Out-Panel, or Control Panel.
- (b) A Broken or missing Tray, Guide Roller, Coupler, or Wire Rack.
- Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at [www.samsung.com](http://www.samsung.com).
- This microwave oven is supposed for heating food. It is intended for domestic home-use only. Do not heat any type of textiles or cushions filled with grains, which could cause burns and fire. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the appliance.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possible result in a hazardous situation.



### **CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRONIC EQUIPMENT)**

**(Applicable in countries with separate collection systems)**


This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.



Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

## quick look-up guide





### I want to cook some food.

	<p><b>1.</b> Place the food in the oven. Press the <b>Start/+30s</b> button.</p> <p><b>Result:</b> When cooking has finished, the oven will beep and flash "End" 4 times. The oven will then beep one time per minute.</p>
--	--

### I want to add an extra 30 seconds.

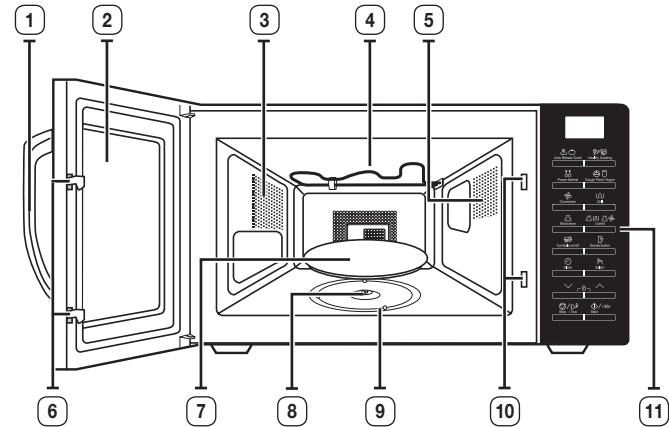
	<p>Press the <b>Start/+30s</b> button one or more times for each extra 30 seconds that you wish to add.</p>
	<p>By Pressing the <b>Up</b> and <b>Down</b> Button, You can set the time as you want.</p>

## I want to Power Defrost some food.

	<p>1. Press the <b>Power Defrost</b> button.</p>
	<p>2. Set the cooking category by pressing the <b>Up</b> or <b>Down</b> button. Press the <b>Select</b> button to set desired.</p>
	<p>3. Select the weight by pressing the <b>Up</b> or <b>Down</b> button as required.</p>
	<p>4. Press the <b>Start/+30s</b> button.</p> <p><b>Result:</b> Defrosting starts.</p> <ul style="list-style-type: none"> <li>When cooking has finished, the oven will beep and flash "End" 4 times. The oven will then beep one time per minute.</li> </ul>

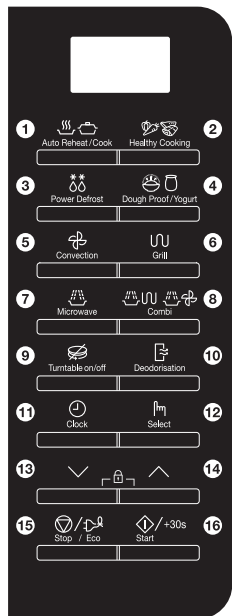
## oven features

### OVEN



- |                      |                            |
|----------------------|----------------------------|
| 1. DOOR HANDLE       | 7. TURNTABLE               |
| 2. DOOR              | 8. COUPLER                 |
| 3. VENTILATION HOLES | 9. ROLLER RING             |
| 4. HEATING ELEMENT   | 10. SAFETY INTERLOCK HOLES |
| 5. LIGHT             | 11. CONTROL PANEL          |
| 6. DOOR LATCHES      |                            |

## CONTROL PANEL




- |                              |                            |
|------------------------------|----------------------------|
| 1. AUTO REHEAT/COOK BUTTON   | 9. TURNTABLE ON/OFF BUTTON |
| 2. HEALTHY COOKING BUTTON    | 10. DEODORISATION BUTTON   |
| 3. POWER DEFROST BUTTON      | 11. CLOCK BUTTON           |
| 4. DOUGH PROOF/YOGURT BUTTON | 12. SELECT BUTTON          |
| 5. CONVECTION BUTTON         | 13. DOWN BUTTON            |
| 6. GRILL BUTTON              | 14. UP BUTTON              |
| 7. MICROWAVE BUTTON          | 15. STOP/ECO BUTTON        |
| 8. COMBI BUTTON              | 16. START/+30S BUTTON      |

## ACCESSORIES

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

	<p><b>1. Roller ring</b>, to be placed in the centre of the oven.  <b>Purpose:</b> The roller ring supports the turntable.</p>
	<p><b>2. Turntable</b>, to be placed on the roller ring with the centre fitting on to the coupler.  <b>Purpose:</b> The turntable serves as the main cooking surface; it can be easily removed for cleaning.</p>
	<p><b>3. High rack, Low rack</b>, to be placed on the turntable.  <b>Purpose:</b> The metal racks can be used to cook two dishes at the same time. A small dish may be placed on the turntable and a second dish on the rack. <b>The metal racks can be used in grill, convection and combination cooking.</b></p>
	<p><b>4. Crust plate</b>, to be placed on the turntable.          (Only MC28H5015C*, MC28H5015Z* Model use)  <b>Purpose:</b> The crust plate is used to brown bottom of food by using the microwave or grill combination cooking modes and to keep pastry and pizza dough crispy.</p>
	<p><b>5. Roasting spit, coupler barbecue and Skewer</b> to be placed in the glass bowl. (Only MC28H5015Z* Model use)  <b>Purpose:</b> The roasting spit is a convenient of barbecuing a chicken, as the meat does not have to be turned over. It can be used for grill combination cooking.</p>

(continued)



## 6. Steam cooker

(Only MC28H5015F\*, MC28H5015Z\* Model use)

**Purpose:** The plastic steam cooker when using power steam function.

**DO NOT** operate the microwave oven without the roller ring and turntable.

**DO NOT** operate the Grill, Convection and Combi mode with Steam cooker.

Operation mode	MW	GRILL	COMBI	CONV
 (Steam cooker)	O	X	X	X



- Never use this Pro Steamer with a different product or model. It may cause a fire or fatal damage to the product.
- Do not use the Pro Steamer without water or food inside. When you use this Pro Steamer, pour at least 500 ml of water before use. If the amount of water is less than 500 ml, it may cause incomplete cooking, or may cause a fire or fatal damage to the product.
- Caution must be taken when removing the container from inside the Pro Steamer after cooking, as it will be very hot.
- Make sure you install the cover onto the Pro Steamer so that it fits into the Steam plate / Crusty plate. The eggs or the chestnuts would be explode without setting the steam cover and steam plate as instructed on the Instruction book.

## oven use


### HOW A MICROWAVE OVEN WORKS

Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without changing either the form or the colour.

You can use your microwave oven to:

- Defrost
- Reheat
- Cook

Cooking principle.




1. The microwaves generated by the magnetron reflected at cavity and are distributed uniformly as the food rotates on the turntable. The food is thus cooked evenly.
2. The microwaves are absorbed by the food up to a depth of about 1 inch (2.5 cm). Cooking then continues as the heat is dissipated within the food.
3. Cooking times vary according to the container used and the properties of the food:
  - Quantity and density
  - Water content
  - Initial temperature (refrigerated or not)

As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the oven. Standing times specified in recipes and in this booklet must therefore be respected to ensure:


- Even cooking of the food right to the centre
- The same temperature throughout the food.

## CHECKING THAT YOUR OVEN IS OPERATING CORRECTLY

The following simple procedure enables you to check that your oven is working correctly at all times. If you are in doubt, refer to the section entitled "Troubleshooting" on the 40-41 page.

-  The oven must be plugged into an appropriate wall socket. The turntable must be in position in the oven. If a power level other than the maximum (100 % - 900 W) is used, the water takes longer to boil.


Open the oven door by pulling the handle on the right side of the door. Place a glass of water on the turntable. Close the door.








 +30s Start <input type="text"/>	<p>Press the <b>Start/+30s</b> button and set the time to 4 or 5 minutes, by pressing the <b>Start/+30s</b> button the appropriate number of times.</p> <p><b>Result:</b> The oven heats the water for 4 or 5 minutes. The water should then be boiling.</p>
---	--

## SETTING THE TIME

Your microwave oven has an inbuilt clock. When power is supplied, "88:88" and then "12:00" is automatically displayed on the display. Please set the current time. The time can be displayed in either the 24-hour or 12-hour notation. You must set the clock:

- When you first install your microwave oven
- After a power failure

-  Do not forget to reset the clock when you switch to and from summer and winter time.











 Clock <input type="text"/>	1. Press the <b>Clock</b> button.
 <input type="text"/>  Select <input type="text"/>	2. Press the <b>Up</b> or <b>Down</b> button to set time display type (12H or 24H). At that time, press the <b>Select</b> button to set the display type.
 <input type="text"/>	3. Press the <b>Up</b> or <b>Down</b> button to set the hour.
 Select <input type="text"/>	4. Press the <b>Select</b> button.
 <input type="text"/>	5. Press the <b>Up</b> or <b>Down</b> button to set the minute.
 Select <input type="text"/>	6. When the right time is displayed, press the <b>Select</b> button to start the clock. <b>Result:</b> The time is displayed whenever you are not using the microwave oven.

## COOKING/REHEATING

The following procedure explains how to cook or reheat food.

 ALWAYS check your cooking settings before leaving the oven unattended.

Open the door. Place the food in the centre of the turntable. Close the door. Never switch the microwave oven on when it is empty.

 Microwave 	<p>1. Press the <b>Microwave</b> button.</p> <p><b>Result:</b> The following indications are displayed:   (microwave mode)</p>
  Select 	<p>2. Press the <b>Up</b> or <b>Down</b> button until the appropriate power level is displayed.</p> <p>At that time, press the <b>Select</b> button to set the power level.</p> <ul style="list-style-type: none"> <li>If don't set the power level within 5 seconds, Automatically changes to the cooking time setting stage.</li> </ul>
 	<p>3. Set the Cooking time by pressing the <b>Up</b> or <b>Down</b> button.</p> <p><b>Result:</b> The cooking time is displayed.</p>
 Start 	<p>4. Press the <b>Start/+30s</b> button.</p> <p><b>Result:</b> The oven light comes on and the turntable starts rotating. Cooking starts and when it has finished:</p> <ul style="list-style-type: none"> <li>The oven beep and flash "End" 4 times. The oven will then beep one time per minute.</li> </ul>

## POWER LEVELS AND TIME VARIATIONS

The power level function enables you to adapt the amount of energy dissipated and thus the time required to cook or reheat your food, according to its type and quantity. You can choose between six power levels.

Power level	Percentage	Output
HIGH	100 %	900 W
MEDIUM HIGH	67 %	600 W
MEDIUM	50 %	450 W
MEDIUM LOW	33 %	300 W
DEFROST	20 %	180 W
LOW	11 %	100 W





The cooking times given in recipes and in this booklet correspond to the specific power level indicated.

If you select a...	Then the cooking time must be...
Higher power level	Decreased
Lower power level	Increased

## ADJUSTING THE COOKING TIME

You can adjust the cooking time by pressing the **Start/+30s**.

- Check how cooking is progressing at any time simply by opening the door
- Increase the remaining cooking time

 Start 	<p>To adjust the cooking time of your food during cooking, press the <b>Start/+30s</b> button once for each 30 seconds that you wish to add.</p> <ul style="list-style-type: none"> <li>Example: To add three minutes, press the <b>Start/+30s</b> button six times.</li> </ul>
 	<p>To adjust the cooking time of press the <b>UP</b> and <b>DOWN</b> button that you wish to add.</p>



## STOPPING THE COOKING

You can stop cooking at any time so that you can:

- Check the food
- Turn the food over or stir it
- Leave it to stand

To stop the cooking...	Then...
Temporarily	Temporarily : Open the door or Press the stop button once. <b>Result:</b> Cooking stops. To resume cooking, close the door again and press the <b>Start/+30s</b> button.
Completely	Completely : Press the stop button once. <b>Result:</b> Cooking stops. If you wish to cancel the cooking settings, press the <b>Stop/Eco</b> button again.

## SETTING THE ENERGY SAVE MODE

The oven has an energy save mode.

 Stop / Eco <input type="text"/>	<ul style="list-style-type: none"> <li>• Press the <b>Stop/Eco</b> button. (During Standby mode.) <b>Result:</b> Display off.</li> <li>• To remove energy save mode, open the door or press the <b>Stop/Eco</b> button and then display shows current time. The oven is ready for use.</li> </ul>
---	---

### Auto energy saving function

If you do not select any function when appliance is in the middle of setting or operating with temporary stop condition, function is canceled and clock will be displayed after 25 minutes.


Oven Lamp will be turned off after 5 minutes with door open condition.

## USING THE AUTO REHEAT/COOK FEATURES








The 10 **Auto Reheat/Cook** features include/provide pre-programmed cooking times.

You do not need to set either the cooking times or the power level.

You can adjust the size of the serving by pressing the **Up** or **Down** button.

 Use only recipients that are microwave-safe.

Open the door. Place the food in the centre of the turntable. Close the door.

 Auto Reheat/Cook <input type="text"/>	<b>1.</b> Press the <b>Auto Reheat/Cook</b> button.
 <input type="text"/>	<b>2.</b> Press the <b>Up</b> and <b>Down</b> button to select Cook category. (1 : Auto Reheat, 2 : Auto Cook)
 Select <input type="text"/>	<b>3.</b> Press the <b>Select</b> button.
  <input type="text"/>	<b>4.</b> Select the type of food that you are cooking by pressing the <b>Up</b> and <b>Down</b> button. Refer to the table on the following page for a description of the various pre-programmed settings. At that time, press the <b>Select</b> button to select the type of food.
 <input type="text"/>	<b>5.</b> Select the size of the serving by Press the <b>Up</b> and <b>Down</b> button.
 Start <input type="text"/>	<b>6.</b> Press the <b>Start/+30s</b> button. <b>Result:</b> The food is cooked according to the preprogrammed setting selected. <ul style="list-style-type: none"> <li>• When cooking has finished, the oven will beep and flash "End" 4 times. The oven will then beep one time per minute.</li> </ul>

The following table presents quantities and appropriate instructions for auto reheat and cook.

 Use oven gloves when taking out food.

### 1. Auto Reheat


Code/Food	Serving Size	Instructions
<b>1-1 Ready Meal</b> (chilled)	300-350 g 400-450 g	Put on a ceramic plate and cover with microwave cling film. This programme is suitable for meals consisting of 3 components (e.g. meat with sauce, vegetables and a side dish like potatoes, rice or pasta). Stand for 2-3 minutes.
<b>1-2 Mini Ravioli</b> (chilled)	200-250 g 300-350 g	Put chilled ready mini ravioli in a microwave proof plastic dish in the centre of turntable. Pierce film of ready product or cover plastic dish with microwave cling film. Stir carefully before and after standing time. This programme is suitable for ravioli, as well as for noodles in sauce. Stand for 3 minutes.
<b>1-3 Frozen Pizza</b>	300-350 g 400-450 g	Put frozen pizza on the low rack.
<b>1-4 Frozen Pizza Snacks</b>	100-150 g 250-300 g	Put frozen pizza snacks on the low rack.
<b>1-5 Frozen Lasagne</b>	400-450 g 600-650 g	Put frozen lasagne into a suitable sized ovenproof dish. Put dish on low rack. Stand for 3-4 minutes.
<b>1-6 Frozen Bread Rolls</b>	100-150 g (2 pcs) 200-250 g (4 pcs) 300-350 g (6 pcs)	We recommend to preheat the oven to 180 °C for 5 minutes using the convection function. Put 2 to 6 frozen bread rolls (-18 °C) in a circle on the low rack. This program is suitable for small frozen bakery products as bread rolls, ciabatta rolls and small baguettes. Stand for 3-5 minutes.

### 2. Auto Cook








Code/Food	Serving Size	Instructions
<b>2-1 Broccoli Florets/ Fresh Vegetables</b>	200-250 g 300-350 g 400-450 g	Weigh the vegetables after washing, cleaning and cutting into similar size. Put them into a glass bowl with lid. Add 30 ml (2 tablespoons) water when cooking for 200-250 g, add 45 ml (3 tablespoons) for 300-450 g and add 60-75 ml (4 tablespoons) for 400-450 g. Stir after cooking. When cooking higher quantities stir once during cooking. Stand for 1-2 minutes.
<b>2-2 Chicken Pieces</b>	300-400 g (1 pc) 500-600 g (2 pcs) 700-800 g (3 pcs)	Brush the chicken pieces with oil and spice them with pepper, salt and paprika. Put them in a circle on the high rack with the skin-side down. Turnover, as soon as the beep sounds. Stand for 2 minutes.
<b>2-3 Roast Chicken</b>	1100-1150 g 1200-1250 g	Brush chilled chicken with oil and spices. Put breast-side-down, in the middle of the low rack. Turnover, as soon as the oven beeps. Push start button to continue process. Stand for 5 minutes.
<b>2-4 Muffins</b>	250-300 g	Pour dough into 6-8 paper or silicone cups for muffins (each 45 g) and set on low rack. Start programme (oven is preheating). After beep sounds insert rack with food.

## USING THE HEALTHY COOKING FEATURES

The 15 **Healthy Cooking** features provide pre-programmed cooking times. You do not need to set either the cooking times or the power level. You can adjust the size of the serving by pressing the **Up** or **Down** button.

 Use only recipients that are microwave-safe.

Open the door. Place the food in the centre of the turntable. Close the door.

 Healthy Cooking <input type="text"/>	<b>1.</b> Press the <b>Healthy cook</b> button.
 <input type="text"/>	<b>2.</b> Press the <b>Up</b> or <b>Down</b> button to select cook category.
 Select <input type="text"/>	<b>3.</b> Select the cook category by pressing the <b>Select</b> button.
 <input type="text"/>	<b>4.</b> Press the <b>Up</b> or <b>Down</b> button to select cook type.
 Select <input type="text"/>	<b>5.</b> Select the cook type by pressing the <b>Select</b> button.
 <input type="text"/>	<b>6.</b> Press the <b>Up</b> or <b>Down</b> button to select serving size. Refer to the table on the following page for a description of the various pre-programmed settings.
 Start <input type="text"/>	<b>7.</b> Press the <b>Start/+30s</b> button. <b>Result:</b> The food is cooked according to the pre-programmed setting selected. <ul style="list-style-type: none"> <li>When cooking has finished, the oven will beep and flash "End" 4 times. The oven will then beep one time per minute.</li> </ul>

The following table presents quantities and appropriate instructions about 15 pre-programmed cooking options. This is composed of Grain/Pasta, Vegetables and Poultry/Fish.

 Use oven gloves when taking out food.

### 1. Grain/Pasta

Code/Food	Serving Size	Instructions
<b>1-1</b> <b>Brown Rice</b>	150-200 g 200-250 g	Use a large glass ovenware dish with lid. Add cold water of double quantity. Cook covered. Stir before standing time and add salt and herbs. Stand for 5-10 minutes.
<b>1-2</b> <b>Quinoa</b>	150-200 g 200-250 g	Use a large glass ovenware dish with lid. Add cold water of double quantity. Cook covered. Stir before standing time and add salt and herbs. Stand for 1-3 minutes.
<b>1-3</b> <b>Macaroni</b>	100-150 g 200-250 g	Use a large glass ovenware dish with lid. Add hot boiling water of 4 times, a pinch of salt and stir well. Cook uncovered. Stir before standing time and drain thoroughly afterwards. Stand for 1-3 minutes.

## 2. Vegetables





Code/Food	Serving Size	Instructions
<b>2-1 Green Beans</b>	200-250 g 300-350 g	Rinse and clean green beans. Put them evenly into a glass bowl with lid. Add 30 ml (2 tablespoons) water when cooking for 200-250 g and add 45 ml (3 tablespoons) for 300-450 g. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
<b>2-2 Spinach</b>	100-150 g 200-250 g	Rinse and clean spinach. Put into a glass bowl with lid. Do not add water. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
<b>2-3 Peeled Potatoes</b>	300-350 g 400-450 g 500-550 g	Wash and peel potatoes, cut into halves and put into a glass bowl with lid. Add 15-30 ml of water (1-2 tablespoons). Stir after cooking. When cooking higher quantities stir once during cooking. Stand for 3-5 minutes.
<b>2-4 Potatoes Gratin</b>	400-450 g 800-850 g	Put the fresh potato gratin into a glass pyrex dish. Put the dish on the low rack. Stand for 2-3 minutes.
<b>2-5 Grilled Eggplants</b>	100-150 g 200-250 g	Rinse and slice eggplants. Brush with oil and spices. Put slices evenly on the high rack. Turnover after beep sounds. Press start to continue (The oven keeps operating if you do not turnover). Stand for 1-2 minutes.
<b>2-6 Grilled Tomatoes</b>	400-450 g 600-650 g	Rinse and clean tomatoes. Cut them into halves and put in an ovenware dish. Add grated cheese on top. Put dish on the high rack. Stand for 1-2 minutes.

## 3. Poultry/Fish

Code/Food	Serving Size	Instructions
<b>3-1 Chicken Breasts</b>	300-350 g 400-450 g	Rinse chicken breast and put on a ceramic plate. Cover with microwave cling film and pierce film. Put dish on the turntable. Stand for 2 minutes.
<b>3-2 Turkey Breasts</b>	300-350 g 400-450 g	Rinse turkey breast and put on deep glass ovenware dish. Cover with microwave cling film and pierce film. Put dish on the turntable. Stand for 2 minutes.
<b>3-3 Grilled Chicken Breasts</b>	300-350 g 400-450 g	Rinse chicken breast, marinate and put them on the high rack. Turnover as soon as the beep sounds. Stand for 2 minutes.
<b>3-4 Grilled Fish Fillets</b>	200-300 g 400-500 g	Put fish fillets evenly on the high rack. Turnover as soon as the beep sounds. Stand for 1-2 minutes.
<b>3-5 Grilled Salmon Steaks</b>	200-250 g 300-350 g	Put fish steaks evenly on the high rack. Turnover as soon as the beep sounds. Stand for 2 minutes.
<b>3-6 Roast Fish</b>	200-300 g 400-500 g	Brush skin of whole fish (trout or gilthead) with oil and add herbs and spices. Put fish side by side, head to tail on the high rack. Turnover as soon as the beep sounds. Stand for 3 minutes.

## USING THE DOUGH PROOF/YOGURT FEATURES

The 5 **Dough Proof/Yogurt** features provide pre-programmed cooking times. You do not need to set either the cooking times or the power level. You can adjust the dough proof/yogurt category by pressing the **Up** or **Down** button after press the **Dough Proof/Yogurt** button. First, place the food in the centre of the turntable and close the door.

 Dough Proof/Yogurt <input type="text"/>	<b>1.</b> Press the <b>Dough Proof/Yogurt</b> button.
 <input type="text"/>	<b>2.</b> Select the type of food that you are cooking by <b>Up</b> or <b>Down</b> button. No.1 is Dough Proof and No.2 is Homemade Yogurt. You have to choose the number that you want to use for cooking by pressing the <b>Up</b> or <b>Down</b> button. Refer to the table on the following page for a description of the various pre-programmed settings. At that time, press the <b>Select</b> button to select the type of food.
 <input type="text"/>	<b>3.</b> Select the food by pressing the <b>Up</b> or <b>Down</b> button.
 <input type="text"/>	<b>4.</b> Press the <b>Start/+30s</b> button.

 Turntable is not operating during yogurt cooking.

The following table presents how to use the auto programmes for rising yeast dough or homemade yogurt.

### 1. Dough Proof


Code/Food	Serving Size	Instructions
1-1 Pizza Dough	300-500 g	Put dough in suitable sized bowl and set on the low rack. Cover with aluminium foil.
1-2 Cake Dough	500-800 g	Put dough in suitable sized bowl and set on the low rack. Cover with aluminium foil.
1-3 Bread Dough	600-900 g	Put dough in suitable sized bowl and set on the low rack. Cover with aluminium foil.

### 2. Homemade Yogurt






Code/Food	Serving Size	Instructions
2-1 Small Cups	500 g	Distribute 150 g natural yogurt into 5 ceramic cups or small glass jars evenly (30 g each). Add 100 ml milk into each cup. Use long-life milk (room-temperature; 3,5 % fat). Cover each with cling film and set in a circle on turntable. After finish, keep 6 hours in a refrigerator. For the first time we recommend to use dried yoghurt bacteria ferment.
2-2 Large Bowl	500 g	Mix 150 g natural yogurt with 500 ml long-life milk (room-temperature; 3,5 % fat). Pour evenly into large glass bowl. Cover with cling film and set on turntable. After finish, keep 6 hours in a refrigerator. For the first time we recommend to use dried yoghurt bacteria ferment.

## USING THE POWER DEFROST FEATURES

The 5 **Power Defrost** feature enables you to defrost meat, poultry, fish, bread, cake and fruit. The defrost time and power level are set automatically. You simply select the programme and the weight.

 Use only containers that are microwave-safe.

Open the door. Place the frozen food on a ceramic in the centre of the turntable. Close the door.

 Power Defrost <input type="text"/>	<b>1.</b> Press the <b>Power Defrost</b> button.
	<b>2.</b> Select the type of food that you are cooking by pressing the <b>Up</b> or <b>Down</b> button. Refer to the table on the following page for a description of the various pre-programmed settings. At that time, press the <b>Select</b> button to select the type of food.
	<b>3.</b> Select the size of the serving by pressing the <b>Up</b> or <b>Down</b> button.
 Start <input type="text"/>	<b>4.</b> Press the <b>Start/+30s</b> button. <b>Result:</b> <ul style="list-style-type: none"> <li>• Defrosting begins.</li> <li>• The oven beeps through defrosting to remind you to turn the food over. (except fruit)</li> </ul>
 Start <input type="text"/>	<b>5.</b> If oven will beep and operate stop, must turn the food over (ex: Meat, Poultry, Fish). And press the <b>Start/+30s</b> button again to finish defrosting. <b>Result:</b> When cooking has finished, the oven will beep and flash "End" 4 times. The oven will then beep one time per minute.

The following table presents the various **Power Defrost** programmes, quantities and appropriate instructions. Remove all kind of package material before defrosting. Place meat, poultry and fish on a flat glass plate or on a ceramic plate, arrange bread and cake on kitchen paper.







Code/Food	Serving Size	Instructions
<b>1</b> Meat	200-1500 g	Shield the edges with aluminium foil. Turn the meat over, when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops, minced meat. Stand for 20-90 minutes.
<b>2</b> Poultry	200-1500 g	Shield the leg and wing tips with aluminium foil. Turn the poultry over, when the oven beeps. This programme is suitable for whole chicken as well as for chicken portions. Stand for 20-90 minutes.
<b>3</b> Fish	200-1500 g	Shield the tail of a whole fish with aluminium foil. Turn the fish over, when the oven beeps. This programme is suitable for whole fishes as well as for fish fillets. Stand for 20-80 minutes.
<b>4</b> Bread/Cake	125-1000 g	Put bread horizontally on a piece of kitchen paper and turn over, as soon as the oven beeps. Place cake on a ceramic plate and if possible, turn over, as soon as the oven beeps. (Oven keeps operating and is stopped, when you open the door.) This programme is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle. This programme is suitable for all kinds of yeast cake, biscuit, cheese cake and puff pastry. It is not suitable for short/crust pastry, fruit and cream cakes as well as for cake with chocolate topping. Stand for 10-60 minutes.
<b>5</b> Fruit	100-600 g	Spread fruits evenly into a flat glass dish. This programme is suitable for all kind of fruits. Stand for 5-20 minutes.

## CONVECTION

The convection mode enables you to cook food in the same way as in a traditional oven. The microwave mode is not used. You can set the temperature, as required, in a range varying from 40 °C to 200 °C. The maximum cooking time is 60 minutes.

- Always use oven gloves when touching the recipients in the oven, as they will be very hot.
- You can get better cooking and browning, if you use the low rack.






Check that the heating element is in the horizontal position. Open the door and place the recipient on the low rack and set on turntable.

 Convection <input type="text"/>	<p>1. Press the <b>Convection</b> button.</p> <p><b>Result:</b> The following indications are displayed:</p> <p> (convection mode)          180 °C (temperature)</p>
 <input type="text"/>	<p>2. Set the temperature by pressing the <b>Up</b> or <b>Down</b> button. (Temperature : 40~200 °C, 10 °C interval)</p> <ul style="list-style-type: none"> <li>• If don't set the temperature within 5 seconds, Automatically changes to the cooking time setting stage.</li> </ul>
 Select <input type="text"/>	<p>3. Press the <b>Select</b> button.</p>
 <input type="text"/>	<p>4. Set the cooking time by pressing the <b>Up</b> or <b>Down</b> button. (If you want to preheat the oven, omit this step.)</p>
 Start <input type="text"/>	<p>5. Press the <b>Start/+30s</b> button.</p> <p><b>Result:</b> Cooking starts.</p> <ul style="list-style-type: none"> <li>• When cooking has finished, the oven will beep and flash "End" 4 times. The oven will then beep one time per minute.</li> </ul>

## GRILLING

The grill enables you to heat and brown food quickly, without using microwaves.

- Always use oven gloves when touching the recipients in the oven, as they will be very hot.
- You can get better cooking and grilling results, if you use the high rack.

	<p>1. Open the door and place the food on the rack.</p>
 Grill <input type="text"/>	<p>2. Press the <b>Grill</b> button.</p> <p><b>Result:</b> The following indications are displayed:</p> <p> (grill mode)</p> <ul style="list-style-type: none"> <li>• You cannot set the temperature of the grill.</li> </ul>
 <input type="text"/>	<p>3. Set the grilling time by pressing the <b>Up</b> or <b>Down</b> button.</p> <ul style="list-style-type: none"> <li>• The maximum grilling time is 60 minutes.</li> </ul>
 Start <input type="text"/>	<p>4. Press the <b>Start/+30s</b> button.</p> <p><b>Result:</b> Grilling starts.</p> <ul style="list-style-type: none"> <li>• When cooking has finished, the oven will beep and flash "End" 4 times. The oven will then beep one time per minute.</li> </ul>







## COMBINING MICROWAVE AND GRILL

You can also combine microwave cooking with the grill, to cook quickly and brown at the same time.

- ☑ ALWAYS use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.
- ☑ ALWAYS use oven gloves when touching the recipients in the oven, as they will be very hot.

You can improve cooking and grilling, if you use the high rack.

Open the door. Place the food on the rack best suited to the type of food to be cooked. Place the rack on the turntable. Close the door.

	<p>1. Press the <b>Combi</b> button. <b>Result:</b> The following indications are displayed: Cb - 1 (Microwave + Grill)</p>
	<p>2. Make the display indicating Cb - 1 by pressing the <b>Up</b> or <b>Down</b> button, and then press the <b>Select</b> button. <b>Result:</b> The following indications are displayed:  (microwave &amp; grill combi mode) 600 W (output power)</p>
	<p>3. Select the appropriate power level by pressing the <b>Up</b> or <b>Down</b> button until the corresponding output power is displayed (600, 450, 300 W). At that time, press the <b>Select</b> button to set the power level.</p> <ul style="list-style-type: none"> <li>• You cannot set the temperature of the grill.</li> <li>• If don't set the power level within 5 seconds, Automatically changes to the cooking time setting stage.</li> </ul>
	<p>4. Set the cooking time by pressing the <b>Up</b> or <b>Down</b> button.</p> <ul style="list-style-type: none"> <li>• The maximum cooking time is 60 minutes.</li> </ul>
	<p>5. Press the <b>Start/+30s</b> button. <b>Result:</b></p> <ul style="list-style-type: none"> <li>• Combination cooking starts.</li> <li>• When cooking has finished, the oven will beep and flash "End" 4 times. The oven will then beep one time per minute.</li> </ul>

## COMBINING MICROWAVE AND CONVECTION





Combination cooking uses both microwave energy and convection heating. No preheating is required as the microwave energy is immediately available.

Many foods can be cooked in combination mode, particularly:




- Roast meats and poultry
- Pies and cakes
- Egg and cheese dishes

- ☑ ALWAYS use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.
- ☑ ALWAYS use oven gloves when touching the recipients in the oven, as they will be very hot.  
You can get better cooking and browning, if you use the low rack.


Open the door. Place the food on the turntable or on the low rack which should then be placed on the turntable. Close the door. The heating element must be in the horizontal position.

	<p>1. Press the <b>Combi</b> button. <b>Result:</b> The following indications are displayed: Cb - 1 (Microwave + Grill)</p>
	<p>2. Make the display indicating Cb - 2 by pressing the <b>Up</b> or <b>Down</b> button, and then press the <b>Select</b> button. <b>Result:</b> The following indications are displayed:  (microwave &amp; convection combi mode) 600 W (output power)</p>
	<p>3. Select the appropriate power level by pressing the <b>Up</b> or <b>Down</b> button until the corresponding output power is displayed (600, 450, 300, 180, 100 W). At that time, press the <b>Select</b> button to set the power level.</p> <ul style="list-style-type: none"> <li>• If don't set the power level within 5 seconds, Automatically changes to the cooking time setting stage. (Default: 180 °C)</li> </ul>



	<p>4. Select the appropriate temperature by pressing the <b>Up</b> or <b>Down</b> button. (Temperature : 200~40 °C) At that time, press the <b>Select</b> button to set the temperature.</p> <ul style="list-style-type: none"> <li>If don't set the temperature within 5 seconds, Automatically changes to the cooking time setting stage.</li> </ul>
	<p>5. Set the cooking time by pressing the <b>Up</b> or <b>Down</b> button.</p> <ul style="list-style-type: none"> <li>The maximum cooking time is 60 minutes.</li> </ul>
	<p>6. Press the <b>Start/+30s</b> button.</p> <p><b>Result:</b></p> <ul style="list-style-type: none"> <li>Combination cooking starts.</li> <li>The oven is heated to the required temperature and then microwave cooking continues until the cooking time is over.</li> <li>When cooking has finished, the oven will beep and flash "End" 4 times. The oven will then beep one time per minute.</li> </ul>

## CHOOSING THE ACCESSORIES




	<p>Traditional convection cooking does require cookware. You should, however, use only cookware that you would use in your normal oven.</p> <p>Microwave-safe containers are not usually suitable for convection cooking; don't use plastic containers, dishes, paper cups, towels, etc.</p>
---	--

If you wish to select a combined cooking mode (microwave and grill or convection), use only recipients that are microwave-safe and oven-proof.

- For further details on suitable cookware and utensils, refer to the Cookware Guide on page 30-31.

## USING THE CHILD LOCK FEATURES


Your microwave oven is fitted with a special child lock programme, which enables the oven to be "locked" so that children or anyone unfamiliar with it cannot operate it accidentally.




	<p>1. Press the <b>Up</b> and <b>Down</b> button at the same time. (Three second)</p> <p><b>Result :</b></p> <ul style="list-style-type: none"> <li>The oven is locked (no functions can be selected).</li> <li>The display shows "L".</li> </ul> 
	<p>2. To unlock the oven, press the <b>Up</b> and <b>Down</b> button at the same time. (Three second)</p> <p><b>Result :</b> The oven can be used normally.</p>

## USING THE TURNTABLE ON/OFF FEATURES

The **Turntable on/off** button enables you to use large dishes which fill the whole oven by stopping the turntable from rotating (only manual cooking mode).

- The results will be less satisfactory in this case as the cooking is less even. We recommend that you turn the dish by hand halfway through the cooking process.


 Never operate the turntable without food in the oven.  
**Reason:** This may cause fire or damage to the unit.

	<p>1. Press the <b>Turntable on/off</b> button.</p> <p><b>Result:</b> The turntable will not rotate. The following indications are displayed:</p> 
	<p>2. To switch the turntable rotating back on, press the <b>Turntable on/off</b> button again.</p> <p><b>Result:</b> The turntable will rotate.</p>

- This **Turntable on/off** button is available only during manual cooking mode.

## USING THE MANUAL CRUSTY COOK FUNCTION (ONLY MC28H5015C\*, MC28H5015Z\* MODEL USE)

Normally when cooking in microwave oven, using grill or microwave mode in grill/convection ovens, foods like pastries and pizza become soggy from bottom side. Using the Samsung Crusty plate helps to gain a crispy cooked result of your food. The crusty plate can also be used for bacon, eggs, sausages, etc.







<p>Combi</p> <p>Select</p>	<ol style="list-style-type: none"> <li>Preheat the crusty plate, as described above.</li> <li>Brush the plate with oil if you are cooking food, such as bacon and eggs, in order to brown the food nicely.</li> <li>Place the food on the crusty plate.</li> <li>Place the crusty plate on the metal rack (or turntable) in the microwave.</li> <li>Press the <b>Combi</b> Button. Select the combi mode by pressing <b>Up</b> and <b>Down</b> button. After then Press the <b>Select</b> button. <ul style="list-style-type: none"> <li>Cb - 1 (Microwave + Grill)</li> <li>Cb - 2 (Microwave + Convection)</li> </ul> </li> </ol>
<p>Select</p>	<ol style="list-style-type: none"> <li>Select the appropriate power level by pressing the <b>Up</b> or <b>Down</b> button until the appropriate output power. At that time, press the <b>Select</b> button to set the power level. <ul style="list-style-type: none"> <li>If don't set the power level within 5 seconds, Automatically changes to the cooking time setting stage.</li> </ul> </li> </ol>
<p>Select</p>	<ol style="list-style-type: none"> <li>If use the MW+Convection mode, select the appropriate temperature by pressing the <b>Up</b> and <b>Down</b> button. At that time, press the <b>Select</b> button to set temperature. <ul style="list-style-type: none"> <li>If don't set the power level within 5 seconds, Automatically changes to the cooking time setting stage. (Default: 180 °C)</li> </ul> </li> </ol>


	<ol style="list-style-type: none"> <li>Select the cooking time by press <b>Up</b> and <b>Down</b> button until the appropriate cooking time is displayed.</li> </ol>
<p>Start</p>	<ol style="list-style-type: none"> <li>Press the <b>Start/+30s</b> button. <p><b>Result:</b> Cooking starts.</p> <ul style="list-style-type: none"> <li>When cooking has finished, the oven will beep and flash "End" four times. The oven will then beep one time per minute.</li> </ul> </li> </ol>

- Before using the crusty plate, preheat it by selecting the combination mode for 3 to 5 minutes:
  - Combination of convection (200 °C) and microwaves. (600 W power level)
  - Combination of grill and microwaves. (600 W power level)
- Use oven gloves at all times as the crusty plate will become very hot.
- Please note that the crusty plate has a teflon layer which is not scratch-resistant. Do not use any sharp objects like a knife to cut on the crusty plate.
- Use plastic accessories to avoid scratches on the surface of the crusty plate or remove the food from the plate before cutting.
- Do not place any recipients on the crusty plate that are not heat-resistant (plastic bowls for example).
- Never place the crusty plate in the oven without the turntable.
- How to clean the Crusty Plate**  
Clean the crusty plate with warm water and detergent and rinse off with clean water.
- Do not use a scrubbing brush or a hard sponge otherwise the top layer will be damaged.
- Please note**  
The crusty plate is not dishwasher-safe.

## USING THE STEAM COOK FUNCTION (ONLY MC28H5015F\*, MC28H5015Z\* MODEL USE)

Use the plastic steam cooker when using pure steam function.  
First, place the plastic steam cooker in the center of the turntable and close the door.

	1. Press the <b>Microwave</b> button.
	2. Press the <b>Up</b> and <b>Down</b> button to desired until the appropriate power level is displayed. At that time, press the <b>Select</b> button to set the power level. <ul style="list-style-type: none"> <li>If don't set the power level within 5 seconds, Automatically changes to the cooking time setting stage.</li> </ul>
	3. Set the cooking time by pressing <b>Up</b> and <b>Down</b> button.
	4. Press the <b>Start/+30s</b> button. <b>Result:</b> Cooking starts. <ul style="list-style-type: none"> <li>When cooking has finished, the oven will beep and flash "End" four times. The oven will then beep one time per minute.</li> </ul>

 Steam cooking hint


### Components of steam cooker



Bowl




Insert tray




Lid

### Handling of steam cooker



Bowl + Lid



Bowl with insert tray + Lid

## MANUAL STEAM COOK SETTINGS

Food	Serving Size	Power	Time (min.)
Artichokes	300 g (1-2 pcs)	900 W	5-6
	<b>Instructions</b> Rinse and clean artichokes. Put into bowl. Add one tablespoon lemon juice. Cover with lid. Stand for 1-2 minutes.		
Fresh Vegetables	300 g	900 W	4-5
	<b>Instructions</b> Weigh the vegetables (e.g. broccoli florets, cauliflower florets, carrots, pepper) after washing, cleaning and cutting into similar size. Put basket into bowl. Distribute vegetables in basket. Add 2 tablespoons water. Cover with lid. Stand for 1-2 minutes.		
Frozen Vegetables	300 g	600 W	7-8
	<b>Instructions</b> Put the frozen vegetables into the basket in bowl. Add 1 tablespoon water. Cover with lid. Stir well after cooking and standing. Stand for 2-3 minutes.		
Fresh Fish Fillets	300 g	1st stage: 900 W 2nd stage: 450 W	1-2 5-6
	<b>Instructions</b> Rinse and prepare fish fillets, such as Pollack, rose fish or salmon. Sprinkle with lemon juice. Put basket into bowl. Add fillets side by side. Add 100 ml cold water. Cover with lid. Stand for 1-2 minutes.		
Chicken Breast	300 g	1st stage: 900 W 2nd stage: 600 W	1-2 7-8
	<b>Instructions</b> Rinse and chicken breasts. Cut surface 2-3 times with a knife. Put basket into bowl. Add chicken breasts side by side. Add 100 ml cold water. Cover with lid. Stand for 1-2 minutes.		






(continued)




Food	Serving Size	Power	Time (min.)
Rice	250 g	900 W	15-18
	<b>Instructions</b> Put parboiled rice into the bowl. Add 500 ml cold water. Cover with lid. After cooking let stand white rice for 5 minutes, brown rice for 10 minutes. Stand for 5-10 minutes.		
Jacket Potatoes	500 g	900 W	7-8
	<b>Instructions</b> Weigh and rinse the potatoes and put them into bowl. Add 3 tablespoons water. Cover with lid. Stand for 2-3 minutes.		
Stew (chilled)	400 g	600 W	5-6
	<b>Instructions</b> Put stew into the bowl. Cover with lid. Stir well before standing. Stand for 1-2 minutes.		
Frozen Yeast Dumpling with Jam Filling	150 g	600 W	1-2
	<b>Instructions</b> Moist the top of filled dumplings with cold water. Put 1-2 frozen dumplings side by side into the basket. Insert basket in bowl. Cover with lid. Stand for 2-3 minutes.		
Fruit Compote	250 g	900 W	3-4
	<b>Instructions</b> Weigh the fresh fruits (e.g. apples, pears, plums, apricots, mangoes or pineapple) after peeling, washing and cutting into similar sizes or cubes. Put into bowl. Add 1-2 tablespoons water and 1-2 tbsp. sugar. Cover with lid. Stand for 2-3 minutes.		

## SPLIT-ROASTING (ONLY MC28H5015Z\* MODEL USE)

The barbecue spit is useful for grilling, as you do not need to turn the meat over. It can be used for combined microwave and Convection cooking.

- ☑ Make sure that the weight of the meat is evenly distributed on the spit and that the spit rotates evenly.  
Always use oven gloves when touching the recipients in the oven, as they will be very hot.

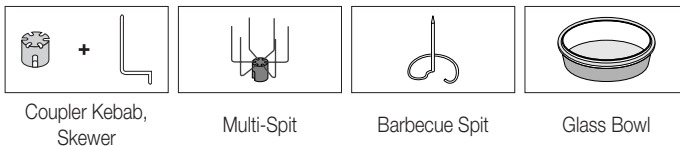
	<p>1. Push the roasting spit through the centre of the meat. <b>Example:</b> Push the spit between the backbone and breast of a chicken. Place the spit on its upright on the glass bowl the glass bowl and the glass bowl onto the turntable. To help brown the meat, brush it with and spices oil.</p>
	<p>2. Press the <b>Combi</b> button. <b>Result:</b> The following indications are displayed: Cb - 1 (Microwave + Grill)</p>
	<p>3. Make the display indicating Cb - 2 by pressing the <b>Up</b> or <b>Down</b> button, and then press the <b>Select</b> button. <b>Result:</b> The following indications are displayed:  (microwave &amp; convection combi mode) 600 W (output power)</p>
	<p>4. Select the appropriate power level by pressing the <b>Up</b> or <b>Down</b> button until the corresponding output power is displayed (600, 450, 300, 180, 100 W). At that time, press the <b>Select</b> button to set the power level.</p> <ul style="list-style-type: none"> <li>• If don't set the power level within 5 seconds, Automatically changes to the cooking time setting stage. (Default: 180 °C)</li> </ul>

	<p>5. Select the appropriate temperature by pressing the <b>Up</b> or <b>Down</b> button. (Temperature : 200~40 °C) At that time, press the <b>Select</b> button to set the temperature.</p> <ul style="list-style-type: none"> <li>If don't set the temperature within 5 seconds, Automatically changes to the cooking time setting stage.</li> </ul>
	<p>6. Set the cooking time by pressing the <b>Up</b> or <b>Down</b> button.</p> <ul style="list-style-type: none"> <li>The maximum cooking time is 60 minutes.</li> </ul>
	<p>7. Press the <b>Start/+30s</b> button.</p> <p><b>Result:</b></p> <ul style="list-style-type: none"> <li>Combination cooking starts.</li> <li>The oven is heated to the required temperature and then microwave cooking continues until the cooking time is over.</li> <li>When cooking has finished, the oven will beep and flash "End" 4 times. The oven will then beep one time per minute.</li> <li>When the meat has been fully cooked, carefully remove the spit, using oven gloves to protect your hands.</li> </ul>


## USING THE VERTICAL MULTI-SPIT

### MULTI-SPIT FOR KEBAB


Using the multi-spit with 6 kebab skewers you can easily barbecue meat, poultry, fish, vegetables (like onions, peppers or courgettes) and fruit which have been cut into pieces. You can prepare the above food with the kebab skewers by using convection or combination mode.



## USE OF THE MULTI-SPIT WITH KEBAB SKEWERS


- For preparing kebabs with the multi-spit use the 6 skewers.
  - Put the same amount of food on each skewer.
  - Place the roasting-spit into the glass bowl and insert the multi-spit into it.
  - Put the glass bowl with the multi-spit in the centre of the turntable.
-  Make sure that the grill heating element is in the right position at the back wall of the cavity and not at the top before starting the grilling process.




## REMOVING THE MULTI-SPIT FROM THE OVEN AFTER GRILLING

- Use oven gloves for taking for glass bowl with the multi-spit out of the oven, because it will be very hot.
  - Remove multi-spit out of the spit stand by using oven gloves as well.
  - Carefully remove the skewers and use a fork for removing the food pieces from the skewers.
-  The multi--is not suitable for cleaning in the dishwasher. Therefore clean it with warm water and washing up liquid by hand. Remove the vertical multi-spit from the oven, after use.

## USING THE DEODORISATION FEATURES



Use the feature after cooking odorous food or when there is a lot of smoke in the oven interior. First clean the oven interior.

 Deodorisation <input type="text"/>	<b>1.</b> Press the <b>Deodorisation</b> button than it will start automatically, after you have finished cleaning.
--	---

-  The deodorisation time has been specified as 5 minutes.
-  You can also adjust **Deodorisation** time by pressing the **Start/+30s** button.
-  The maximum deodorisation time is 15 minutes.

## SWITCHING THE BEEPER OFF

You can switch the beeper off whenever you want.

 <input type="text"/>	<b>1.</b> Press the <b>Start/+30s</b> and <b>Stop/Eco</b> button at the same time. (one second) <b>Result:</b> The oven does not beep to indicate the end of a function.
 <input type="text"/>	<b>2.</b> To switch the beeper back on, press the <b>Start/+30s</b> and <b>Stop/Eco</b> buttons again at the same time. (one second) <b>Result:</b> The oven operates normally.

## cookware guide

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.

Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.

The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-safe	Comments
<b>Aluminum foil</b>	✓ ✗	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
<b>Crust plate</b>	✓	Do not preheat for more than 8 minutes.
<b>China and earthenware</b>	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
<b>Disposable polyester cardboard dishes</b>	✓	Some frozen foods are packaged in these dishes.
<b>Fast-food packaging</b>		
<ul style="list-style-type: none"> <li>• Polystyrene cups containers</li> </ul>	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
<ul style="list-style-type: none"> <li>• Paper bags or newspaper</li> </ul>	✗	May catch fire.
<ul style="list-style-type: none"> <li>• Recycled paper or metal trims</li> </ul>	✗	May cause arcing.

Cookware	Microwave-safe	Comments
<b>Glassware</b>		
• Oven-to-tableware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.
<b>Metal</b>		
• Dishes	✗	May cause arcing or fire.
• Freezer bag twist ties	✗	
<b>Paper</b>		
• Plates, cups, napkins and kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	✗	May cause arcing.
<b>Plastic</b>		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓ ✗	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
<b>Wax or grease-proof paper</b>	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended

✓✗ : Use caution

✗ : Unsafe

## cooking guide

### MICROWAVES

Microwave energy actually penetrates food, attracted and absorbed by its water, fat and sugar content.

The microwaves cause the molecules in the food to move rapidly. The rapid movement of these molecules creates friction and the resulting heat cooks the food.

### COOKING

#### Cookware for microwave cooking:

Cookware must allow microwave energy to pass through it for maximum efficiency. Microwaves are reflected by metal, such as stainless steel, aluminium and copper, but they can penetrate through ceramic, glass, porcelain and plastic as well as paper and wood. So food must never be cooked in metal containers.

#### Food suitable for microwave cooking:

Many kinds of food are suitable for microwave cooking, including fresh or frozen vegetables, fruit, pasta, rice, grains, beans, fish, and meat. Sauces, custard, soups, steamed puddings, preserves, and chutneys can also be cooked in a microwave oven. Generally speaking, microwave cooking is ideal for any food that would normally be prepared on a hob. Melting butter or chocolate, for example (see the chapter with tips, techniques and hints).

#### Covering during cooking

To cover the food during cooking is very important, as the evaporated water rises as steam and contributes to cooking process. Food can be covered in different ways: e.g. with a ceramic plate, plastic cover or microwave suitable cling film.

#### Standing times

After cooking is over food the standing time is important to allow the temperature to even out within the food.

### Cooking Guide for frozen vegetables

Use a suitable glass pyrex bowl with lid. Cook covered for the minimum time – see table. Continue cooking to get the result you prefer.

Stir twice during cooking and once after cooking. Add salt, herbs or butter after cooking. Cover during standing time.

Food	Serving Size	Power	Time (min.)
Spinach	150 g	600 W	5-6
	<b>Instructions</b> Add 15 ml (1 tbsp.) cold water. Serve after 2-3 minutes standing.		
Broccoli	300 g	600 W	8-9
	<b>Instructions</b> Add 30 ml (2 tbsp.) cold water. Serve after 2-3 minutes standing.		
Peas	300 g	600 W	7-8
	<b>Instructions</b> Add 15 ml (1 tbsp.) cold water. Serve after 2-3 minutes standing.		
Green Beans	300 g	600 W	7½-8½
	<b>Instructions</b> Add 30 ml (2 tbsp.) cold water. Serve after 2-3 minutes standing.		
Mixed Vegetables (Carrots/Peas/ Corn)	300 g	600 W	7-8
	<b>Instructions</b> Add 15 ml (1 tbsp.) cold water. Serve after 2-3 minutes standing.		
Mixed Vegetables (Chinese style)	300 g	600 W	7½-8½
	<b>Instructions</b> Add 15 ml (1 tbsp.) cold water. Serve after 2-3 minutes standing.		

### Cooking Guide for fresh vegetables

Use a suitable glass pyrex bowl with lid. Add 30-45 ml cold water (2-3 tbsp.) for every 250 g unless another water quantity is recommended – see table. Cook covered for the minimum time – see table. Continue cooking to get the result you prefer. Stir once during and once after cooking. Add salt, herbs or butter after cooking. Cover during a standing time of 3 minutes.

**Hint:** Cut the fresh vegetables into even sized pieces. The smaller they are cut, the quicker they will cook.

Food	Serving Size	Power	Time (min.)
Broccoli	250 g 500 g	900 W	4½-5 7-8
	<b>Instructions</b> Prepare even sized florets. Arrange the stems to the centre. Serve after 3 minutes standing.		
Brussels Sprouts	250 g	900 W	6-6½
	<b>Instructions</b> Add 60-75 ml (5-6 tbsp.) water. Serve after 3 minutes standing.		
Carrots	250 g	900 W	4½-5
	<b>Instructions</b> Cut carrots into even sized slices. Serve after 3 minutes standing.		
Cauliflower	250 g 500 g	900 W	5-5½ 7½-8½
	<b>Instructions</b> Prepare even sized florets. Cut big florets into halves. Arrange stems to the centre. Serve after 3 minutes standing.		
Courgettes	250 g	900 W	4-4½
	<b>Instructions</b> Cut courgettes into slices. Add 30 ml (2 tbsp.) water or a knob of butter. Cook until just tender. Serve after 3 minutes standing.		
Egg plants	250 g	900 W	3½-4
	<b>Instructions</b> Cut egg plants into small slices and sprinkle with 1 tablespoon lemon juice. Serve after 3 minutes standing.		



Food	Serving Size	Power	Time (min.)
Leeks	250 g	900 W	4-4½
	<b>Instructions</b> Cut leeks into thick slices. Serve after 3 minutes standing.		
Mushrooms	125 g	900 W	1½-2
	250 g		2½-3
<b>Instructions</b> Prepare small whole or sliced mushrooms. Do not add any water. Sprinkle with lemon juice. Spice with salt and pepper. Drain before serving. Serve after 3 minutes standing.			
Onions	250 g	900 W	5-5½
	<b>Instructions</b> Cut onions into slices or halves. Add only 15 ml (1 tbsp.) water. Serve after 3 minutes standing.		
Pepper	250 g	900 W	4½-5
	Cut pepper into small slices.		
Potatoes	250 g	900 W	4-5
	500 g		7-8
<b>Instructions</b> Weigh the peeled potatoes and cut them into similar sized halves or quarters. Serve after 3 minutes standing.			
Turnip Cabbage	250 g	900 W	5½-6
	<b>Instructions</b> Cut turnip cabbage into small cubes. Serve after 3 minutes standing.		

### Cooking Guide for rice and pasta

**Rice:** Use a large glass pyrex bowl with lid - rice doubles in volume during cooking. Cook covered.

After the cooking time is over, stir before standing time and salt or add herbs and butter.

Remark: the rice may not have absorbed all water after the cooking time is finished.

**Pasta:** Use a large glass pyrex bowl. Add boiling water, a pinch of salt and stir well. Cook uncovered.  
Stir occasionally during and after cooking. Cover during standing time and drain thoroughly afterwards.

Food	Serving Size	Power	Time (min.)
White Rice (Parboiled)	250 g	900 W	15-16
	375 g		17½-18½
<b>Instructions</b> Add cold water of double quantity. Serve after 5 minutes standing.			
Brown Rice (Parboiled)	250 g	900 W	20-21
	375 g		22-23
<b>Instructions</b> Add cold water of double quantity. Serve after 5 minutes standing.			
Mixed Rice (Rice + Wild rice)	250 g	900 W	16-17
	<b>Instructions</b> Add 500 ml cold water. Serve after 5 minutes standing.		
Mixed Corn (Rice + Grain)	250 g	900 W	17-18
	<b>Instructions</b> Add 400 ml cold water. Serve after 5 minutes standing.		
Pasta	250 g	900 W	10-11
	<b>Instructions</b> Add 1000 ml hot water. Serve after 5 minutes standing.		

## REHEATING

Your microwave oven will reheat food in a fraction of the time that conventional ovens hobs normally take.

Use the power levels and reheating times in the following chart as a guide. The times in the chart consider liquids with a room temperature of about +18 to +20 °C or a chilled food with a temperature of about +5 to +7 °C.

### Arranging and covering

Avoid reheating large items such as joint of meat - they tend to overcook and dry out before the centre is piping hot. Reheating small pieces will be more successful.

### Power levels and stirring

Some foods can be reheated using 900 W power while others should be reheated using 600 W, 450 W or even 300 W.

Check the tables for guidance.

In general, it is better to reheat food using a lower power level, if the food is delicate, in large quantities, or if it is likely to heat up very quickly (mince pies, for example).

Stir well or turn food over during reheating for best results. When possible, stir again before serving.

Take particular care when heating liquids and baby foods. To prevent eruptive boiling of liquids and possible scalding, stir before, during and after heating. Keep them in the microwave oven during standing time. We recommend putting a plastic spoon or glass stick into the liquids. Avoid overheating (and therefore spoiling) the food. It is preferable to underestimate cooking time and add extra heating time, if necessary.

### Heating and standing times

When reheating food for the first time, it is helpful to make a note of the time taken - for future reference.

Always make sure that the reheated food is piping hot throughout.

Allow food to stand for a short time after reheating - to let the temperature even out.

The recommended standing time after reheating is 2-4 minutes, unless another time is recommended in the chart.

Take particular care when heating liquids and baby food. See also the chapter with the safety precautions.

## REHEATING LIQUIDS

Always allow a standing time of at least 20 seconds after the oven has been switched off to allow the temperature to even out. Stir during heating, if necessary, and ALWAYS stir after heating. To prevent eruptive boiling and possible scalding, you should put a spoon or glass stick into the beverages and stir before, during and after heating.

## REHEATING BABY FOOD

### BABY FOOD:

Empty into a deep ceramic plate. Cover with plastic lid. Stir well after reheating! Let stand for 2-3 minutes before serving. Stir again and check the temperature. Recommended serving temperature: between 30-40 °C.

### BABY MILK:

Pour milk into a sterilised glass bottle. Reheat uncovered. Never heat a baby's bottle with teat on, as the bottle may explode if overheated. Shake well before standing time and again before serving ! Always carefully check the temperature of baby milk or food before giving it to the baby. Recommended serving temperature: ca. 37 °C.

### REMARK:

Baby food particularly needs to be checked carefully before serving to prevent burns. Use the power levels and times in the next table as a guide lines for reheating.

### Reheating Liquids and Food

Use the power levels and times in this table as a guide lines for reheating.

Food	Serving Size	Power	Time (min.)
Drinks (Coffee, Tea and Water)	150 ml (1 cup)	900 W	1-1½
	300 ml (2 cups)		2-2½
	450 ml (3 cups)		3-3½
	600 ml (4 cups)		3½-4
	<b>Instructions</b> Pour into cups and reheat uncovered: 1 cup in the centre, 2 cups opposite of each other, 3 cups in a circle. Keep in microwave oven during standing time and stir well. Serve after 1-2 minutes standing.		
Soup (Chilled)	250 g	900 W	2½-3
	350 g		3-3½
	450 g		3½-4
	550 g		4½-5
	<b>Instructions</b> Pour into a deep ceramic plate or deep ceramic bowl. Cover with plastic lid. Stir well after reheating. Stir again before serving. Serve after 2-3 minutes standing.		

Food	Serving Size	Power	Time (min.)
Stew (Chilled)	350 g	600 W	4½-5½
	<b>Instructions</b> Put stew in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving. Serve after 2-3 minutes standing.		
Pasta with Sauce (Chilled)	350 g	600 W	3½-4½
	<b>Instructions</b> Put pasta (e.g. spaghetti or egg noodles) on a flat ceramic plate. Cover with microwave cling film. Stir before serving. Serve after 3 minutes standing.		
Filled Pasta with Sauce (Chilled)	350 g	600 W	4-5
	<b>Instructions</b> Put filled pasta (e.g. ravioli, tortellini) in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving. Serve after 3 minutes standing.		
Plated Meal (Chilled)	350 g 450 g	600 W	4½-5 5½-6½
	<b>Instructions</b> Plate a meal of 2-3 chilled components on a ceramic dish. Cover with microwave cling-film. Serve after 3 minutes standing.		
Cheese Fondue Ready-To-Serve (Chilled)	400 g	600 W	6-7
	<b>Instructions</b> Put the ready-to-serve cheese fondue in a suitable sized glass pyrex bowl with lid. Stir occasionally during and after reheating. Stir well before serving. Serve after 1-2 minutes standing.		

### Reheating Baby Food and Milk

Use the power levels and times in this table as guide lines for reheating.

Food	Serving Size	Power	Time
Baby Food (Vegetables + Meat)	190 g	600 W	30 sec.
	<b>Instructions</b> Empty into ceramic deep plate. Cook covered. Stir after cooking time. Before serving, stir well and check the temperature carefully. Serve after 2-3 minutes standing.		
Baby Porridge (Grain + Milk + Fruit)	190 g	600 W	20 sec.
	<b>Instructions</b> Empty into ceramic deep plate. Cook covered. Stir after cooking time. Before serving, stir well and check the temperature carefully. Serve after 2-3 minutes standing.		
Baby Milk	100 ml 200 ml	300 W	30-40 sec. 1 min. to 1 min. 10 sec.
	<b>Instructions</b> Stir or shake well and pour into a sterilized glass bottle. Place into the centre of turntable. Cook uncovered. Before serving, shake well and check the temperature carefully. Serve after 2-3 minutes standing.		

## DEFROSTING

Microwaves are an excellent way of defrosting frozen food. Microwaves gently defrost frozen food in a short period of time. This can be of great advantage, if unexpected guests suddenly show up.

Frozen poultry must be thoroughly thawed before cooking. Remove any metal ties and take it out of any wrapping to allow thawed liquid to drain away.

Put the frozen food on a dish without cover. Turn over half way, drain off any liquid and remove any giblets as soon as possible. Check the food occasionally to make sure that it does not feel warm.

If smaller and thinner parts of the frozen food start to warm up, they can be shield by wrapping very small strips of aluminium foil around them during defrosting.

Should poultry start to warm up on the outer surface, stop thawing and allow it to stand for 20 minutes before continuing.

Leave the fish, meat and poultry to stand in order to complete defrosting. The standing time for complete defrosting will vary depending on the quantity defrosted. Please refer to the table below.

**Hint:** Flat food defrosts better than thick and smaller quantities need less time than bigger ones. Remember this hint while freezing and defrosting food.

For defrosting of frozen food with a temperature of about -18 to -20 °C, use the following table as a guide.

Food	Serving Size	Power	Time (min.)
<b>Meat</b>			
Minced Meat	250 g	180 W	6-7
	500 g		8-13
Pork Steaks	250 g	180 W	7-8
	<b>Instructions</b> Place the meat on turntable. Shield thinner edges with aluminium foil. Turn over after half of defrosting time! Serve after 15-30 minutes standing.		

Food	Serving Size	Power	Time (min.)
<b>Poultry</b>			
Chicken Pieces	500 g (2 pcs)	180 W	14-15
Whole Chicken	1200 g	180 W	32-34
<b>Instructions</b> First, put chicken pieces first skin-side down, whole chicken first breast-side-down on a flat ceramic plate. Shield the thinner parts like wings and ends with aluminium foil. Turn over after half of defrosting time! Serve after 15-60 minutes standing.			
<b>Fish</b>			
Fish Fillets	200 g	180 W	6-7
Whole Fish	400 g	180 W	11-13
<b>Instructions</b> Put frozen fish in the middle of a flat ceramic plate. Arrange the thinner parts under the thicker parts. Shield narrow ends of fillets and tail of whole fish with aluminium foil. Turn over after half of defrosting time! Serve after 10-25 minutes standing.			
<b>Fruits</b>			
Berries	300 g	180 W	6-7
<b>Instructions</b> Spread fruit on a flat, round glass dish (with a large diameter). Serve after 5-10 minutes standing.			
<b>Bread</b>			
Bread Rolls (Each ca. 50 g)	2 pcs	180 W	1-1½
	4 pcs		2½-3
Toast/Sandwich	250 g	180 W	4-4½
<b>Instructions</b> Arrange rolls in a circle or bread horizontally on kitchen paper in the middle of turntable. Turn over after half of defrosting time! Serve after 5-20 minutes standing.			

## GRILL

The grill-heating element is located underneath the ceiling of the cavity. It operates while the door is closed and the turntable is rotating. The turntable's rotation makes the food brown more evenly. Preheating the grill for 3-5 minutes will make the food brown more quickly.

### Cookware for grilling:

Should be flameproof and may include metal. Do not use any type of plastic cookware, as it can melt.

### Food suitable for grilling:

Chops, sausages, steaks, hamburgers, bacon and gammon rashers, thin fish portions, sandwiches and all kinds of toast with toppings.

### Important remark:

Whenever the grill only mode is used, please remember that food must be placed on the high rack, unless another instruction is recommended.

## MICROWAVE + GRILL

This cooking mode combines the radiant heat that is coming from the grill with the speed of microwave cooking. It operates only while the door is closed and the turntable is rotating. Due to the rotation of the turntable, the food browns evenly. Three combination modes are available with this model: 600 W + Grill, 450 W + Grill and 300 W + Grill.

### Cookware for cooking with microwave + grill

Please use cookware that microwaves can pass through. Cookware should be flameproof. Do not use metal cookware with combination mode. Do not use any type of plastic cookware, as it can melt.

### Food suitable for microwave + grill cooking:

Food suitable for combination mode cooking include all kinds of cooked food which need reheating and browning (e.g. baked pasta), as well as foods which require a short cooking time to brown the top of the food. Also, this mode can be used for thick food portions that benefit from a browned and crispy top (e.g. chicken pieces, turning them over half way through cooking). Please refer to the grill table for further details.

### Important remark:

Whenever the combination mode (microwave + grill) is used, the food should be placed on the high rack, unless another instruction is recommended. Please refer to the instructions in the following chart.

The food must be turned over, if it is to be browned on both sides.

## Grill Guide for Fresh Food

Preheat the grill with the grill-function for 2-3 minutes.

Use the power levels and times in this table as guide lines for grilling.

Use oven gloves when taking out.

Fresh food	Serving Size	Power	1 step (min.)	2 step (min.)
Toast Slices	4 pcs (each 25 g)	Grill only	3-4	2-3
	<b>Instructions</b> Put toast slices side by side on the high rack.			
Grilled Tomatoes	400 g (2 pcs)	300 W + Grill	5-6	-
	<b>Instructions</b> Cut tomatoes into halves. Put some cheese on top. Arrange in a circle in a flat glass pyrex dish. Place it on the high rack. Stand for 2-3 minutes.			
Tomato-Cheese Toast	4 pcs (300 g)	300 W + Grill	4-5	-
	<b>Instructions</b> Toast the bread slices first. Put the toast with topping on the high rack. Stand for 2-3 minutes.			
Toast Hawaii (Ham, Pineapple, Cheese slices)	4 pcs (500 g)	300 W + Grill	5-6	-
	<b>Instructions</b> Toast the bread slices first. Put the toast with topping on the high rack. Stand for 2-3 minutes.			
Baked Potatoes	500 g	600 W + Grill	7-8	-
	<b>Instructions</b> Cut potatoes into halves. Put them in a circle on the high rack with the cut side to the grill.			
Gratin Potatoes/Vegetables (Chilled)	450 g	450 W + Grill	9-11	-
	<b>Instructions</b> Put the fresh gratin into a small glass pyrex dish. Put the dish on the high rack. After cooking stand for 2-3 minutes.			

(continued)

Fresh food	Serving Size	Power	1 step (min.)	2 step (min.)
Baked Apples	2 apples (ca. 400 g)	300 W + Grill	7-8	-
	<b>Instructions</b> Core the apples and fill them with raisins and jam. Put some almond slices on top. Put apples on a flat glass pyrex dish. Place the dish directly on the low rack.			
Chicken Pieces	500 g (2 pcs)	300 W + Grill	8-10	6-8
	<b>Instructions</b> Brush chicken pieces with oil and spices. Put them in a circle on the high rack. After grilling stand for 2-3 minutes.			
Roast Chicken	1200 g	450 W + Grill	18-19	17
	<b>Instructions</b> Brush the chicken oil and spices. Put the chicken on the low rack. After grilling stand for 5 minutes.			
Roast Fish	400-500 g	300 W + Grill	5-7	5½-6½
	<b>Instructions</b> Brush skin of whole fish with oil and add herbs and spices. Put two fishes side by side (head to tail) on the high rack. After grilling stand for 2-3 minutes.			

## CONVECTION

Cooking with convection is the traditional and well known method of cooking food in a traditional oven with hot air.

The heating element and the fan position is at the back-wall, so that the hot air is circulating. This mode is supported by the top heating element.

### Cookware for convection cooking:

All conventional ovenproof cookware, baking tins and sheets – anything you would normally use in a traditional convection oven – can be used.

### Food suitable for convection cooking:

All biscuits, individual scones, rolls and cakes should be made by this mode as well as rich fruit cakes, choux pastry and soufflés.

## MICROWAVE + CONVECTION

This mode combines the microwave energy with the hot air and is therefore reducing the cooking time while giving the food a brown and crispy surface.

Cooking with convection is the traditional and well known method of cooking food in an oven with hot air circulated by a fan on the back-wall.

### Cookware for cooking with microwaves + convection:

Should be able to let the microwaves pass through. Should be ovenproof (like glass, pottery or china without metal trims); similar to the cookware described under Microwave + Grill.

### Food suitable for Microwave + Convection cooking:

All kinds of meats and poultry as well as casseroles and gratin dishes, sponge cakes and light fruit cakes, pies and crumbles, roast vegetables, scones and breads.

### Convection Guide for fresh and frozen food

Preheat the convection with the auto pre-heat function to the desired temperature. Use the power levels and times in this table as guide lines for convection cooking. Use oven gloves when taking out.

Fresh food	Serving Size	Power	1 step (min.)	2 step (min.)
<b>PIZZA</b> Frozen Pizza (Ready baked)	300 g	1 step 300 W + 200 °C 2 step Grill	11-12	2-3
<b>Instructions</b> Place the pizza on the low rack. After baking stand for 2-3 minutes.				
<b>PASTA</b> Frozen Lasagne	400 g	1 step 450 W + 200 °C 2 step Conv. 200 °C	15-16	5-6
<b>Instructions</b> Put into a suitable sized glass pyrex dish or leave in the original packaging (take care that this is suitable for microwaves and oven heat). Put frozen pasta gratin on the low rack. After cooking stand for 2-3 minutes.				
<b>MEAT</b> Roast Beef/ Roast Lamb (Medium)	1200-1300 g	600 W + 180 °C	20-23	10-13
<b>Instructions</b> Brush beef/ lamb with oil and spice it with pepper, salt and paprika. Put it on the low rack, first with the fat side down. After cooking wrap in aluminium foil and stand for 10-15 minutes.				
Roast Chicken	1000-1100 g	450 W + 200 °C	20-22	20
<b>Instructions</b> Brush chicken with oil and spices. Put chicken first breast side down, second side breast side up on the low rack. Stand for 5 minutes.				

Fresh food	Serving Size	Power	1 step (min.)	2 step (min.)
<b>BREAD</b> Fresh Bread Rolls	6 pcs (350 g)	100 W + 180 °C	8-10	-
<b>Instructions</b> Put bread rolls in a circle on the low rack. Stand for 2-3 minutes.				
Garlic Bread (Chilled, Prebaked)	200 g (1 pc)	180 W + 200 °C	8-10	-
<b>Instructions</b> Put the chilled baguette on baking paper on the low rack. After baking stand for 2-3 minutes.				
<b>CAKE</b> Marble Cake (Fresh Dough)	500 g	Only 180 °C	38-43	-
<b>Instructions</b> Put the fresh dough in a small rectangular black metal baking dish (length 25 cm). Put the cake on the low rack. After baking stand for 5-10 minutes.				
Small Cakes (Fresh Dough)	10 x 28 g	Only 160 °C	26-28	-
<b>Instructions</b> Fill the fresh dough evenly in paper cups and set on baking tray on the low rack. After baking stand for 5 minutes.				
Cookies (Fresh Dough)	200-250 g	Only 200 °C	15-20	-
<b>Instructions</b> Put the chilled croissants on baking paper on the low rack.				
Frozen Cake	1000 g	180 W + 180 °C	18-20	-
<b>Instructions</b> Put the frozen cake directly on the low rack. After defrost and warming stand for 15-20 minutes.				

## TIPS AND TRICKS

### MELTING BUTTER

Put 50 g butter into a small deep glass dish. Cover with plastic lid. Heat for 30-40 seconds using 900 W, until butter is melted.

### MELTING CHOCOLATE

Put 100 g chocolate into a small deep glass dish. Heat for 3-5 minutes, using 450 W until chocolate is melted. Stir once or twice during melting. Use oven gloves while taking out!

### MELTING CRYSTALLIZED HONEY

Put 20 g crystallized honey into a small deep glass dish. Heat for 20-30 seconds using 300 W, until honey is melted.

### MELTING GELATINE

Lay dry gelatine sheets (10 g) for 5 minutes into cold water. Put drained gelatine into a small glass pyrex bowl. Heat for 1 minute using 300 W. Stir after melting.

### COOKING GLAZE/ICING (FOR CAKE AND GATEAUX)

Mix instant glaze (approximately 14 g) with 40 g sugar and 250 ml cold water. Cook uncovered in a glass pyrex bowl for 3½ to 4½ minutes using 900 W, until glaze/icing is transparent. Stir twice during cooking.

### COOKING JAM

Put 600 g fruits (for example mixed berries) in a suitable sized glass pyrex bowl with lid. Add 300 g preserving sugar and stir well. Cook covered for 10-12 minutes using 900 W. Stir several times during cooking. Empty directly into small jam glasses with twist-off lids. Stand on lid for 5 minutes.

### COOKING PUDDING

Mix pudding powder with sugar and milk (500 ml) by following the manufacturers instructions and stir well. Use a suitable sized glass pyrex bowl with lid. Cook covered for 6½ to 7½ minutes using 900 W. Stir several times well during cooking.

### BROWNING ALMOND SLICES

Spread 30 g sliced almonds evenly on a medium sized ceramic plate. Stir several times during browning for 3½ to 4½ minutes using 600 W. Let it stand for 2-3 minutes in the oven. Use oven gloves while taking out!

## troubleshooting and error code

### TROUBLESHOOTING

If you have any of the problems listed below try the solutions given.

#### **This is normal.**

- Condensation inside the oven.
- Air flow around the door and outer casing.
- Light reflection around the door and outer casing.
- Steam escaping from around the door or vents.

#### **The oven does not start when you press the Start/+30s button.**

- Is the door completely closed?

#### **The food is not cooked at all.**

- Have you set the timer correctly and/or pressed the **Start/+30s** button?
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?

#### **The food is either overcooked or undercooked.**

- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

#### **The light bulb is not working.**

- The Light bulb should not be replaced in person for safety reasons. Please contact nearest authorised Samsung customer care, to arrange for a qualified engineer to replace the bulb.

#### **The oven causes interference with radios or televisions.**

- Slight interference may be observed on televisions or radios when the oven is operating. This is normal. To solve this problem, install the oven away from televisions, radios and aerials.
- If interference is detected by the oven's microprocessor, the display may be reset. To solve this problem, disconnect the power plug and reconnect it. Reset the time.

#### **Sparking and cracking occur inside the oven (arcing).**

- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- Is aluminum foil too close to the inside walls?



### Smoke and bad smell when initial operating.

- It's a temporary condition by new component heating. Smoke and smell will disappear completely after 10 minutes operation.  
To remove smell more quickly, please operate microwave oven with putting lemon formation or lemon juice in the cabinet.

☑ If the above guidelines do not enable you to solve the problem, then contact your local SAMSUNG customer service centre.  
Please have the following information read;

- The model and serial numbers, normally printed on the rear of the oven
- Your warranty details
- A clear description of the problem

Then contact your local dealer or SAMSUNG aftersales service.

### ERROR CODE

#### “SE” message indicates.

- Clean the keys and check if there is water on the surface around key. Turn off the microwave oven and try setting again. If it occurs again, call your local SAMSUNG Customer Care Centre.

#### “E-24” message indicates

- Before the microwave can overheat, the "E-24" message appears on the display. If the "E-24" message appears, press the Stop/Eco key to utilize the initialization mode. After the oven cools, try operating the oven. If the "E-24" message appears again, contact your local Samsung Customer Care Centre.

☑ For any codes not listed above, or if the suggested solution does not solve the problem, contact your local SAMSUNG Customer Care Centre.

## technical specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	MC28H5015**
<b>Power source</b>	230 V ~ 50 Hz AC
<b>Power consumption</b>	
Maximum power	2900 W
Microwave	1400 W
Grill (heating element)	1500 W
Convection (heating element)	Max. 2100 W
<b>Output power</b>	100 W / 900 W - 6 levels (IEC-705)
<b>Operating frequency</b>	2450 MHz
<b>Dimensions (W x D x H)</b>	
Outside	517 x 474.8 x 310 mm
Oven cavity	358 x 327 x 235.5 mm
<b>Volume</b>	28 liter
<b>Weight</b>	
Net	17.5 kg approx.



QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRIA	0810 - SAMSUNG (7267864, € 0.07/min)	<a href="http://www.samsung.com">www.samsung.com</a>
BELGIUM	02-201-24-18	<a href="http://www.samsung.com/be">www.samsung.com/be</a> (Dutch) <a href="http://www.samsung.com/be_fr">www.samsung.com/be_fr</a> (French)
DENMARK	70 70 19 70	<a href="http://www.samsung.com">www.samsung.com</a>
FINLAND	030-6227 515	
FRANCE	01 48 63 00 00	<a href="http://www.samsung.com/fr">www.samsung.com/fr</a>
GERMANY	0180 6 SAMSUNG bzw. 0180 6 7267864* [HHP] 0180 6 M SAMSUNG bzw. 0180 6 67267864* (*0,20 €/Anruf aus dem dt. Festnetz, aus dem Mobilfunk max. 0,60 €/Anruf)	<a href="http://www.samsung.com">www.samsung.com</a>
ITALIA	800-SAMSUNG(726-7864) [HHP] 800.Msamsung (800.67267864)	<a href="http://www.samsung.com/gr">www.samsung.com/gr</a>
CYPRUS	8009 4000 only from landline	
GREECE	80111-SAMSUNG (80111 726 7864) only from land line (+30) 210 6897691 from mobile and land line	<a href="http://www.samsung.com">www.samsung.com</a>
LUXEMBURG	261 03 710	
NETHERLANDS	0900-SAMSUNG (0900-7267864) (€ 0,10/Min)	
NORWAY	815 56480	
PORTUGAL	808 20-SAMSUNG(808 20 7267)	
SPAIN	902 - 1 - SAMSUNG (902 172 678)	
SWEDEN	0771 726 7864 (SAMSUNG)	
SWITZERLAND	0848 - SAMSUNG(7267864, CHF 0.08/min)	
U.K	0330 SAMSUNG (7267864)	<a href="http://www.samsung.com">www.samsung.com</a>
EIRE	0818 717100	

DE68-04234C-00