

mill

Series:

Invisible & Glass
WiFi panel heater



Assembly and instruction manual



EN

Please read the instructions carefully before use.
Take good care of this manual for later use.





Thanks for buying Mill

Our company was founded in Norway in 1992 by Cato Bryn, specializing in distribution of oil filled radiators and other types of heaters. From 1992 to 2009, we had gained significant knowledge and expertise of different type of heaters, thus enabling us to sell to many of the largest retailers in the Nordic countries.

In 2010, Cato's son, Philip joined the company. Philip looked at the heating industry with fresh new eyes and wondered why there had been so little change with the appearance of portable heaters in the last 20 years, especially since interior design in general had changed dramatically over the years. Philip thought consumers should have more styles to choose from other than the typical old-fashioned, traditional heaters.

Since heaters are part of so many homes, Philip and Cato decided to use their extensive knowledge to re-invent the design of heaters. They wanted to create beautiful, modern and minimalistic heaters, using the most advanced technology, that would complement people's homes. They launched the brand "Mill" in 2012.

Mill offers revolutionary, innovative Norwegian designs. We are continuously innovating to complement our line of products to meet consumers' demand.

Prospering on our success in the Nordics we decided to promote Mill at some of the world's largest electronic fairs and home shows, and the feedback from retailers and distributors all over the world were amazing. We are proud to say that consumers in over 25 countries can now **keep warm with style!**

Follow us on social media:



fb.com/millnorway



@millnorway




millnorway.com



Content

- P. 2-3 | Important safety information
- P. 4 | Specifications
- P. 4 | Before first use
- P. 4 | First use
- P. 4 | Minimum distances of heater
- P. 5 | Description of heater
- P. 5 | Assembly
- P. 5 | Power indicator
- P. 5 | Temperature calibration
- P. 6 | Resetting the heater
- P. 6 | Memory function
- P. 6 | "Open window" function
- P. 6 | Instructions
- P. 7 | Usage without WiFi connection
- P. 7 | Child lock
- P. 7 | Commercial lock
- P. 7 | Usage with WiFi connection
- P. 8 | Color codes (WiFi control light)
- P. 9 | Activating WiFi
- P. 9 | Deactivating WiFi
- P. 9 | Reconnecting to WiFi
- P. 9 | Delete WiFi settings
- P. 10 | Maintenance
- P. 10 | Warranty
- P. 10 | Waste disposal

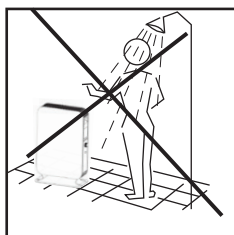

**STORE THIS INSTRUCTION
MANUAL FOR FUTURE USE!**

**NEVER TOUCH YOUR HEATER OR ITS
CASING WITH WET HANDS!**



**IN ORDER TO AVOID OVERHEATING,
DO NOT COVER THE HEATER.**



Important safety information

You must obey common safety guidelines when using electrical products, especially in the presence of children.



WARNING! To avoid electric shock or damage due to the heat, always make sure the plug is pulled out before the heater is moved or cleaned.

READ THE INSTRUCTIONS CAREFULLY

- The product is intended for home use only.
- Make sure the heater is connected to the house's regular mains as indicated on the heater.
- New heaters will produce a specific odor when used the first time. This will stop after a short time and is completely harmless.
- Check for any pieces of packing foam or cardboard that may have fallen into the heating elements of the heater. These pieces must be removed to avoid unpleasant odors.
- Prevent the heater from overheating – do not cover.
- Always turn off the heater and unplug it when not used for a long period of time.
- Pay special attention if the heater is used in rooms where children, the handicapped or elderly reside.
- The heater should not be set up directly beneath an electrical socket outlet.
- The cord must not be laid under any kind of carpet. Make sure the cord is laid in such a way that nobody can trip on it.
- The heater must not be used if either the cord or plug is damaged. The heater must not be used if it has been dropped on the floor or is damaged in any other way causing it to malfunction.
- The cord must be repaired by the manufacturer or by an expert if it has been damaged, to avoid dangerous situations.
- Avoid using extension cords, which may overheat and could possibly start a fire.
- Never cover the air vents on the heater. Avoid potential fire hazards by making sure the air intakes are not blocked or covered. The heater should be used in rooms with normal flat floors.



- The heater should not be installed in close proximity to flammable materials of any kind because there can always be a risk of fire.
- The heater must never be used in rooms where gasoline, paint or other flammable liquids are stored, such as in a garage.
- Never touch an electric heater with wet hands. The heater should be installed so a person showering or taking a bath cannot come into direct contact with it.
- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- The heater must be switched off, the plug removed and the heater must cool down before it is moved.
- Avoid overloading the mains (the circuit) where the heater is connected. The heater may overload the electrical circuit if other electrical devices are plugged into the same socket outlet.
- Do not use this heater in small rooms when they are occupied by persons not capable to leaving the room on their own, unless constant supervision is provided.
- The product cannot be used by children under 8 years of age and persons with reduced physical or mental abilities or lack of experience and knowledge unless they have been given supervision or instruction in the safe use of the product and understand the hazards involved.
- Children should not play with the product. Cleaning and maintenance should not be done by unsupervised children.
- Children under the age of 3 should be kept away from the product, unless they are under constant supervision.
- Children aged 3 to 8 years are only permitted to turn the product ON/OFF, assuming the heater is mounted according to the assembly instructions and the children have received instruction or supervision in the safe use of the product and understand the hazards involved.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

WARNING! The heater must not be used if the glass panels are damaged (this applies to the products with model names starting with GL).



Specifications

Model	Thermostat	Color	Height	Width	Amperage	Power (W)	IP	WiFi
PA600WIFI3	WiFi	White	40,0 cm	65,0 cm	220-240V~, 50-60Hz	600	IPx4	802.11b/g/n
GL600WIFI3	WiFi	White	40,0 cm	66,5 cm	220-240V~, 50-60Hz	600	IPx4	802.11b/g/n
PA600WIFI3B	WiFi	Black	40,0 cm	65,0 cm	220-240V~, 50-60Hz	600	IPx4	802.11b/g/n
PA700WIFI3	WiFi	White	40,0 cm	65,0 cm	220-240V~, 50-60Hz	700	IPx4	802.11b/g/n
PA700WIFI3B	WiFi	Black	40,0 cm	65,0 cm	220-240V~, 50-60Hz	700	IPx4	802.11b/g/n
GL700WIFI3	WiFi	White	40,0 cm	66,5 cm	220-240V~, 50-60Hz	700	IPx4	802.11b/g/n
GL800LWIFI3	WiFi	White	25,0 cm	106,5 cm	220-240V~, 50-60Hz	800	IPx4	802.11b/g/n
PA800LWIFI3	WiFi	White	25,0 cm	105,0 cm	220-240V~, 50-60Hz	800	IPx4	802.11b/g/n
PA850LWIFI3	WiFi	White	25,0 cm	105,0 cm	220-240V~, 50-60Hz	850	IPx4	802.11b/g/n
GL850LWIFI3	WiFi	White	25,0 cm	106,5 cm	220-240V~, 50-60Hz	850	IPx4	802.11b/g/n
PA900WIFI3	WiFi	White	40,0 cm	85,0 cm	220-240V~, 50-60Hz	900	IPx4	802.11b/g/n
GL900WIFI3	WiFi	White	40,0 cm	86,5 cm	220-240V~, 50-60Hz	900	IPx4	802.11b/g/n
PA1000WIFI3	WiFi	White	40,0 cm	85,0 cm	220-240V~, 50-60Hz	1000	IPx4	802.11b/g/n
GL1000WIFI3	WiFi	White	40,0 cm	86,5 cm	220-240V~, 50-60Hz	1000	IPx4	802.11b/g/n
PA1000LWIFI3	WiFi	White	25,0 cm	121,5 cm	220-240V~, 50-60Hz	1000	IPx4	802.11b/g/n
GL1000LWIFI3	WiFi	White	25,0 cm	123,0 cm	220-240V~, 50-60Hz	1000	IPx4	802.11b/g/n
GL1050WIFI3	WiFi	White	40,0 cm	86,5 cm	220-240V~, 50-60Hz	1050	IPx4	802.11b/g/n
PA1050LWIFI3	WiFi	White	25,0 cm	121,5 cm	220-240V~, 50-60Hz	1050	IPx4	802.11b/g/n
PA1200WIFI3	WiFi	White	40,0 cm	105,0 cm	220-240V~, 50-60Hz	1200	IPx4	802.11b/g/n
GL1200WIFI3	WiFi	White	40,0 cm	106,5 cm	220-240V~, 50-60Hz	1200	IPx4	802.11b/g/n
PA1300WIFI3	WiFi	White	40,0 cm	105,0 cm	220-240V~, 50-60Hz	1300	IPx4	802.11b/g/n
GL1300WIFI3	WiFi	White	40,0 cm	106,5 cm	220-240V~, 50-60Hz	1300	IPx4	802.11b/g/n
PA1500WIFI3	WiFi	White	40,0 cm	85,0 cm	220-240V~, 50-60Hz	1500	IPx4	802.11b/g/n
PA2000WIFI3	WiFi	White	40,0 cm	105,0 cm	220-240V~, 50-60Hz	2000	IPx4	802.11b/g/n

Maximum transmitting power: ≤ 20 dBm

Frequency range: 2400-2483.5MHz

The heaters are approved for use in zone 2 in wet rooms (IPx4 approved)

ATTENTION! The heaters will be connected directly to your WiFi router and it is therefore important to make sure the router has sufficient capacity for the number of active devices connected at the same time.

Before first use

After unpacking the heater, check to make sure the product was not damaged during transport. Contact the retailer or importer if you discover any visible damages to the product.

Keep the outer packaging to transport the heater in the future. If you want to dispose the packaging, make sure it is done properly. Keep plastic bags away from children.


First use

After turning on the heater for the first time or after an extended period without use, the heater can produce a burnt odor for a short time. This is normal.

Please read all the instructions carefully before use. Save the instruction manual for future use.

It is also normal for the heater to make “sounds” when it warms up or cools down.

Minimum distances

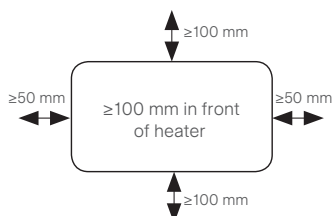



Description of heater

See figure 1 on separate illustration sheet

A MILL INVISIBLE

1. On/Off
2. Wall bracket
3. Temperature sensor
4. Heat emission
5. Thermostat
6. Steel front

B MILL GLASS

1. On/Off
2. Wall bracket
3. Temperature sensor
4. Heat emission
5. Thermostat
6. Glass front

Assembly

See figure 2 on separate illustration sheet

- A. Drill holes in the wall for holes 1 & 2. Then drill holes in the wall for the topmost holes (holes 3 & 4 by using 6)
 - B. Insert the wall plugs into the drilled holes and attach the bracket with 4 screws
 - C. Place the heater on the lower lugs on the bracket, then hang the heater on the upper lugs (lift the heater slightly to align the heater with for the upper lugs). Screw in the locking screws on the top of the bracket (clockwise)
- Attention! Horizontal placement only

Power indicator



See figure 3 on separate illustration sheet

If the heater uses power (for example, when it heats up), the power indicator is on. ⚡

Temperature calibration

See figure 4 on separate illustration sheet

It may occur deviation between the temperature registered by the heater and the actual temperature in the room. This can be caused by several reasons, however, the most common is that the heater is placed in a fair distance from where you usually reside. When you set the temperature to for example 22 degrees, it is only natural that you expect the same temperature where your sofa is placed for instance. However, the temperature sensor is placed on the product itself, and therefore a deviation in temperature may occur. To adjust this, all Mill heaters are equipped with a calibration function, which enables you to adjust the temperature registered by the heater. N.B! The room must have achieved a stable temperature before any calibration.



Press  2 times and use + or - to set the actual temperature observed in the room. Confirm with  or wait 5 seconds for automatic confirmation.

(Can be done even if you are connected to WiFi)



Resetting the heater

See figure 5 on separate illustration sheet

Turn off the heater's main switch. Turn the heater back on, within 5 seconds press and hold . After 20 seconds the display will show "Fr", once you see "Fr" release  and the heater will reset to factory settings.

Memory function

The heater remembers all the temperature settings and will automatically return to the desired temperature after a power failure. If your heater is connected to WiFi it will automatically reconnect with WiFi (where all temperatures are saved) after a power cut.

"Open window" function

The heater has an "open window" function that is activated instantly when it registers a sudden drop in temperature with more than 5 degrees Celsius in 15 minutes. The heater will automatically stop heating and FO will be visible in the display of the heater.

While in open window mode, it will maintain 5°C (to avoid frost damage).

The heater will automatically start heating again if temperature increase by at least 3 degrees within 15 minutes.

You can switch the heater back to normal mode by pressing the settings button 1 time. Open window function can be disabled/enabled by pressing and holding the settings button for 3 seconds. You can also disable/enable open windows function from the app if configured to WiFi.

The heater will stay in open window mode for maximum 1 hour, it then will go back to normal heating mode.

Instructions

TIPS! The thermostat can be used as a regular electronic thermostat (i.e. the heater will maintain a constant temperature 24 hours a day). Please see the section explaining usage without WiFi connection for further information

Control Panel

See figure 6 on separate illustration sheet

1. Display (shows the desired room temperature by default)
2. WiFi indicator
3. Power indicator — Shows whether the heater is using power or not
4. Control button (+) (increase temperature)
5. Control button (-) (reduce temperature)
6. WiFi button
7. Settings button (F)
8. LED lights indicating how much power the heater is using

ATTENTION! In the event of a power cut, the thermostat will reconnect with WiFi where all the temperatures are saved.

WARNING! BEFORE THE HEATER IS TURNED ON, IT MUST BE ATTACHED TO A WALL. IF THE HEATER IS NOT INSTALLED CORRECTLY OR IS INSTALLED ASKEW, THIS MAY CAUSE THE HEATER TO MALFUNCTION OR IN THE WORST CASE, BE DAMAGED.





Usage without WiFi connection

Set desired temperature without WiFi connection



See figure 7 on separate illustration sheet

Press the arrow buttons to set the desired temperature. The heater keeps an even temperature the whole day and night.

Child lock

You can enable/disable child lock from the app. But in addition, you can also enable/disable child lock from the heater itself. Turn off the heater using the main power switch. Turn the heater back on, within 5 seconds press the and hold . After 3 seconds the display will show "CHL", once you see "CHL" release  and the heater enables/disables child lock.

Commercial Lock

You can enable and disable commercial lock from inside the app. But in addition, you can enable/disable commercial lock from the heater itself. Turn off the heater using the main power switch. Turn the heater back on, within 5 seconds press the and hold . After 10 seconds the display will show "COL", once you see "COL" release  and the heater enables/disables commercial lock.

Usage with WiFi connection

A free app is available for downloading for iOS and Android.

By connecting your heaters with the iOS/Android device you can do the following:

- Control all your heaters situated in multiple locations . Everything is controlled with the Millheat-app (with same user)
- Set up weekly programs (or use the standard program already available in the app) by using the 4 modes: Comfort, Sleep, Away and OFF
- Set individual temperature for different modes in each room
- Override the set programs for the whole house, a specific room or a specific heater. There is no need to edit your program if you get home earlier than normal one day
- Enable vacation mode for saving energy while you are away. The app will automatically increase the temperature in your house before you get back home
- Share your house with other family members, making control easy
- If internet is down the heater will follow its weekly program which is stored on the heater. One can easily turn off the WiFi on the heaters and control them manually, so that the heaters keep an even temperature throughout the whole day and night.
- + many other things

To download the app search for “millheat” in Appstore or Google Play and install the app on your device.









Before use:

Be aware that the Millheat-app must be installed before you can connect your heaters to your WiFi network. You can then simply follow the instructions given in the app when connecting your heaters. The heaters will connect directly to your router via WiFi with 2,4 Ghz mode b/g/n. Bluetooth is needed for provisioning, so make sure its enabled. Minimum OS requirement: iOS 8.0 and Android 5.0

Go to our help desk at www.millnorway.com for more information or if you have any questions regarding the Millheat-app, connecting to WiFi or other relating questions.

ATTENTION! The heaters will be connected directly to your WiFi router and it is therefore important to make sure the router has sufficient capacity for the number of active devices connected at the same time.

Color codes (WiFi control light)

-  The heater has not been connected to WiFi. The heater keeps an even temperature throughout the whole day and night.
-  The heater is online in the Millheat cloud
-  The heater's WiFi is deactivated by the user
-  When installing/connecting the Millheat-app and cloud, the light will flash in various speed. This is normal.
-  The heater has a problem connecting to or finding the WiFi signal. Please do the following:
 1. Please turn the heater OFF and ON again
 2. Please restart the WiFi router
 3. Please check the WiFi router to make sure the capacity is sufficient for the number of active devices connected at the same time
 4. Please make sure 2,4 Ghz is activated. If the problem persists please get in touch with support.
-  The heaters are offline and have no contact with the Millheat cloud

millnorway.com

Activating WiFi

See figure 8 on separate illustration sheet

Press «add heater» on the home screen in the Millheat-app. Follow the instructions in the app.

Deactivating WiFi

See figure 9 on separate illustration sheet

Press 1 time on the WiFi button. The heater can now be used as described on page 7 (usage without WiFi connection). Relevant only if WiFi is already installed.

EN Reconnecting WiFi

See figure 10 on separate illustration sheet

Press the WiFi button 1 time. Relevant only if WiFi is already installed.

Delete WiFi setting

See figure 11 on separate illustration sheet

Delete WiFi-settings: Press and hold WiFi button for 5 seconds.





Maintenance

1. For cleaning, always unplug the heater and leave it to cool.
2. Wipe the heater regularly with a damp cloth and dry the surface before turning on the heater again.
3. The heater must be cleaned at least once a month during the heating season.

CAUTION! The heater should never be immersed in water.

Avoid using detergents to clean the heater.


Never let any water get inside the heater; this can be hazardous.

4. Dust etc. should be removed with a soft cloth.
5. The heater can be stored in a dry and clean place.
6. If the heater stops working, do not attempt to repair it yourself because it can cause a fire hazard and/or electric shock.

Warranty

The warranty is valid for 2 years. The heater will be repaired or replaced during this time should any malfunction occur. The warranty applies if the heater is used according to these instructions and the customer can present a purchase receipt. If the heater malfunctions in any way, please contact the store where it was purchased or the importer.

Waste disposal

The symbol  indicates that this product is not to be disposed of together with household waste. This product must be delivered to a recycling service or container for electrical appliances and electronic equipment. This is done to avoid health risks and prevent harm to the environment. Local businesses (or the environmental station in your neighborhood) are required by law to accept and recycle such products, as a means of environmentally sound disposal.



mill

Mill International B.V. - www.millheat.com

Designed by Mill in Norway ©All Rights Reserved.

Made and assembled in China.

Exclusively distributed and imported by BML L24 9HJ UK ©2021

Importer EU: Benross Marketing Ltd, Italielei 1-2000 Antwerp Belgium.

www.millheat.co.uk

info@millheat.co.uk

Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): GL600WIFI3, PA600WIFI3, PA600WIFI3B



Item	Symbol	Value	Unit	Item	Unit
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	0,60	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	0,60	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	0,60	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				



Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): GL700WIFI3, PA700WIFI3, PA700WIFI3B

Item	Symbol	Value	Unit	Item	Unit
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	0,70	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	0,70	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	0,70	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	el _{max}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	el _{min}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	el _{SB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				

Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): GL800LWIFI3, PA800LWIFI3

Item	Symbol	Value	Unit	Item	Unit
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	0,80	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	0,80	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	0,80	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				





Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s):GL850LWIFI3, PA850LWIFI3

Item	Symbol	Value	Unit	Item	Unit
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	0,85	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	0,85	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	0,85	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	el _{max}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	el _{min}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	el _{SB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				

Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): GL900WIFI3, PA900WIFI3

Item	Symbol	Value	Unit	Item	Unit
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	0,90	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	0,90	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	0,90	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				





Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): GL1000WIFI3, PA1000WIFI3, GL1000LWIFI3, PA1000LWIFI3

Item	Symbol	Value	Unit	Item	Unit
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	1,0	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	1,0	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	1,0	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				

Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): GL1050LWIFI3, PA1050LWIFI3

Item	Symbol	Value	Unit	Item	
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	1,05	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	1,05	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	1,05	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η_s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				

Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): GL1200WIFI3, PA1200WIFI3

Item	Symbol	Value	Unit	Item	Unit
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	1,20	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	1,20	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	1,20	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				



Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): GL1300WIFI3, PA1300WIFI3

Item	Symbol	Value	Unit	Item	
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	1,3	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	1,3	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	1,3	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				

Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): PA1500WIFI3

Item	Symbol	Value	Unit	Item	Unit
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	1,5	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	1,5	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	1,5	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η _s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				



Seasonal energy efficiency

Information requirement for the electric local space heaters

Model identifier(s): PA2000WIFI3

Item	Symbol	Value	Unit	Item	
Head Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	2,0	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	2,0	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	2,0	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
Seasonal space heating energy efficiency	η_s	39 %		with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	Yes
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Mill International AS Grini Næringspark 10, 1361 Østerås, Norway				

mill

Mill International B.V. - www.millheat.com

Designed by Mill in Norway ©All Rights Reserved.

Made and assembled in China.

Exclusively distributed and imported by BML L24 9HJ UK ©2021

Importer EU: Benross Marketing Ltd, Italielei 1-2000 Antwerp Belgium.

www.millheat.co.uk

info@millheat.co.uk