


BUSINESS DESK LAMP




OPERATING MANUAL FOR
831059

Instruction



The range of activity for lamp arm and chimney :
1. Please control the base of lamp when adjusting the angle.
2. The arm of the lamp has an activity range of 150 degrees. (It may break by over-adjusting.)

- Connect the adapter at the back of the lamp.




- Touch the key to turn the light on/off and to dim the light in 3 steps.



- Battery replacement



Function

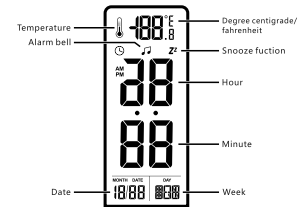

Calendar and alarm setting options

Date and time setting

- In normal mode: Press SET to enter the date and time mode. Press SET again to enter the next setting. The sequence of setting is as follows:
Hour - Minute - Year - Month - Day
Press UP and DOWN to change the week.
- In setting mode: Press MODE or do not operate for 60 seconds and the mode will switch back to normal.
- In normal mode: Press UP to switch between 12 and 24 hours format.
- In normal mode: Press DOWN to switch between the units (degree Fahrenheit/degree centigrade).

Alarm setting

- In normal mode: Press MODE to enter the alarm mode.
- In alarm mode: Press SET to enter the alarm setting. Press SET again to enter the next setting. The sequence of setting is as follows:
Hour - Minute - Time until the snooze function starts - Sound
Press UP and DOWN to set.
- In alarm mode: Press UP and DOWN to open or close snooze and alarm.
Press the key again to enter the next setting.
The sequence of setting is as follows:
Open the alarm - Open the snooze function - Close the alarm and the snooze function
- When the alarm starts, it lasts 1 minute (modifiable factory setting). Afterwards the snooze function starts automatically, but you can also press UP, DOWN or MODE to start the snooze function manually. Press SET to close the alarm without activating the snooze function.

Specifications

Color Temperature	3000K
CRI	>80Ra
Power input	5V 1A
Material	ABS+RUBBER
Luminous Flux	230LM
Power	6W

Attention:

- Do not self-disassemble the product to avoid electric shocks.
- Please use the adapter and the power socket, which is specified by the vendor to maintain normal working.
- Please do not over adjust the joint activity parts to avoid damages.
- Please don't use the light in high-temperature or high-humidity environment.
- Please don't straightly look at the LED light source to avoid eye damages.
- In case below conditions occur, please pull out the power cord and stop using the light.
 - The power cord or the power plug breaks.
 - The lamp holder damps or rains.
 - The shell or the joint of the lamp holder breaks.
 - The lamp smokes or sparks.
 - The light is abnormally flickering or the LED bulb breaks.