




---

## Digital LED TV

Please refer to the actual product

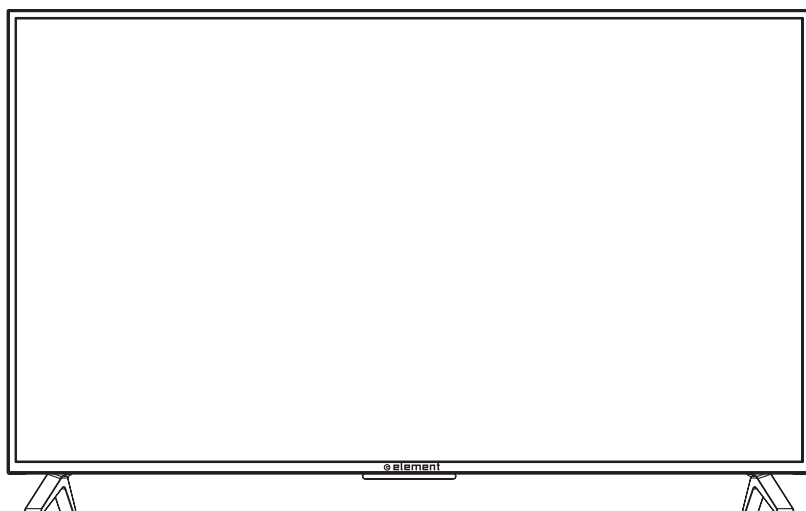

## **INSTRUCTION MANUAL**

---

Please read all the instructions carefully before using this TV,  
and keep the manual for future reference.





# CONTENTS

---

<b>Important Safety Instructions</b>	<b>2</b>
<b>Additional Safety Information</b>	<b>3</b>
<b>Preparations</b>	<b>4</b>
What's Included	4
Front View	5
Rear View	6
Wall Mounting	6
Remote Control	7
<b>Connecting External Devices</b>	<b>8</b>
<b>Customizing TV Settings</b>	<b>9</b>
Turning On/Off Your TV	9
Remote Pairing	9
Setup Wizard	10
Inputs	11
Volume Adjustment	11
Get The Most Out Of Your Element Voice Remote With Google Assistant	11
Home Page	12
TV	12
Channels	13
TV Options	14
Settings	15
Network	16
Picture	17
Sound	18
Storage & reset	19
Date & time	20
Accessibility	21
Security & restrictions	22
Parental Control	23
<b>Troubleshooting</b>	<b>25</b>
<b>FCC Notes</b>	<b>28</b>

## IMPORTANT SAFETY INSTRUCTIONS

- **Read these instructions** – All the safety and operating instructions should be read before this product is operated.
- **Keep these instructions** – The safety and operating instructions should be retained for future reference.
- **Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
- **Follow all instructions** – All operating and use instructions should be followed.
- **Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
- Clean only with dry cloth.
- **Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions.
- **Do not install near any heat sources** such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Do not defeat the safety purpose of the polarized or grounding-type plug.** A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- Unplug this apparatus during lightning storms or when unused for long periods of time.

- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Please keep the unit in a well-ventilated environment.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus should not be exposed to dripping or splashing. Objects filled with liquids, such as vases should not be placed on apparatus.

**WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

**WARNING:** The main plug is used as disconnect device, the disconnect device shall remain readily operable.

**WARNING:** To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc in the United States and other countries

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.

## ADDITIONAL SAFETY INFORMATION

---

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

### **Electrical Safety**


- The TV set should only be connected to a main power supply with voltage that matches the label at the rear of the product.
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.
- Do not place heavy items on them, which may damage the leads.
- Hold the main plug, not the wires, when removing from a socket.
- During a thunderstorm, or when not using the television for extended period of time, turn off the power switch on the back of the television.
- Do not allow water or moisture to enter the TV or power adapter. Do NOT use in wet, moist areas, such as bathrooms, steamy kitchens or near swimming pools.
- Pull the plug out immediately, and seek professional help if the main plug or cable is damaged, liquid is spilled onto the set, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the set does not work normally.
- Do not remove the safety covers. There are no user serviceable parts inside. Trying to service the unit yourself is dangerous and may invalidate the product's warranty. Qualified personnel must only service this apparatus.
- To avoid battery leakage, remove exhausted batteries from the remote control, or when not using for long period.
- Do not break open or throw exhausted batteries on a fire.
- Do not mix old and new batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.

### **Physical Safety**

- Do not block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around.
- Do not tap or shake the TV screen, or you may damage the internal circuits. Take good care of the remote control.
- To clean the TV use a soft dry cloth. Do not use solvents or petroleum based fluids.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong, the wide blade, or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs.
- Unplug the apparatus during lightning storms or when unused for long periods.
- Refer all servicing to a qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled, or objects have fallen into the apparatus, has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Please always connect your television to a power outlet with protective ground connection.

# PREPARATIONS


## What is Included?

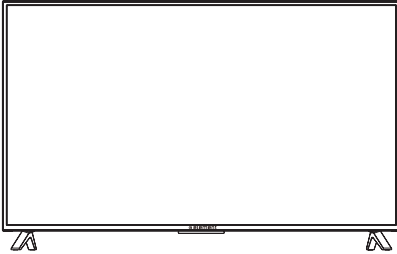


TV Set



Remote Control with Batteries

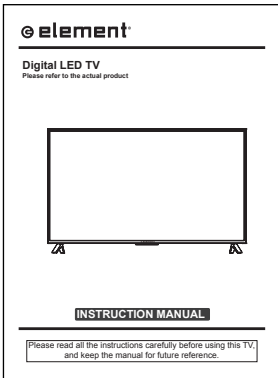

User Manual

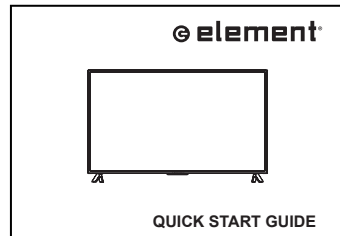


Quick Start Guide

## PREPARATIONS

---


### Front View

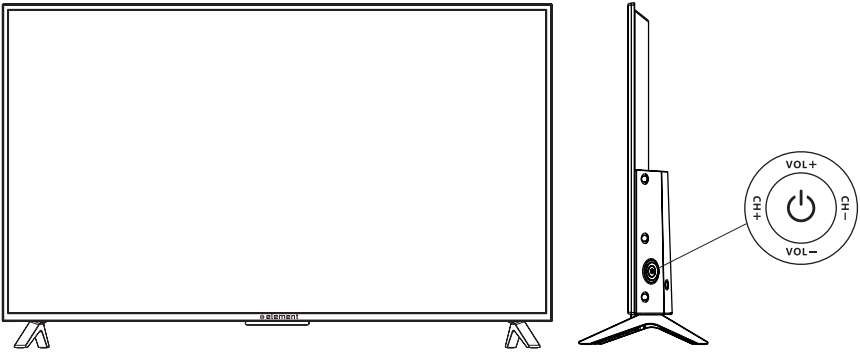

- **⏻**  
Switch the TV between On / Standby mode.
- **CH +/-**  
Press to select a channel.
- **VOL +/-**  
Press to adjust the volume.
- **LED**  
The LED light indicates when the TV is activated.
- **IR**  
Infrared Receiver.

## PREPARATIONS

### Rear View

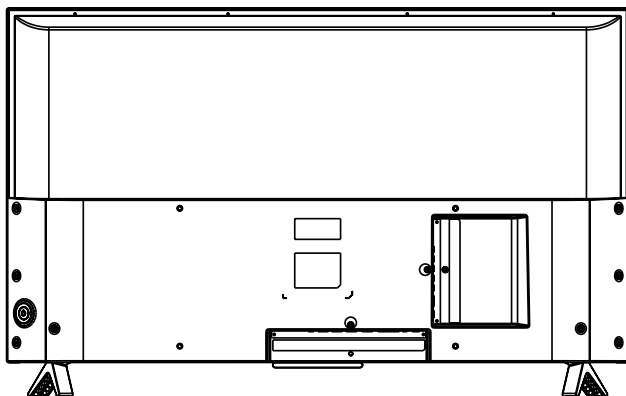

Headphone Output



HDMI

HDMI Input



RF (75Ω)

Antenna Input(75Ω VHF/UHF)



OPTICAL

Optical Output



USB

USB Input



AV/Component Input

### Wall Mounting

#### WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture(for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.If your existing television set is being retained and relocated, the same considerations as above should be applied.




Your new TV is heavy, please consult with professional wall mount installer to perform this installation.




# PREPARATIONS

## Remote Control


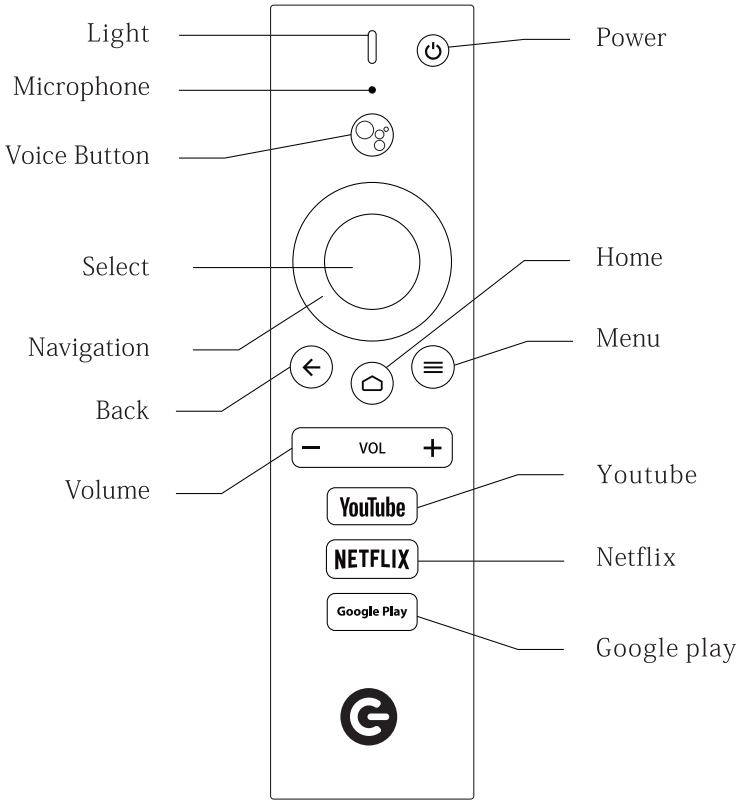


Voice Remote with Google Assistant

# CONNECTING EXTERNAL DEVICES

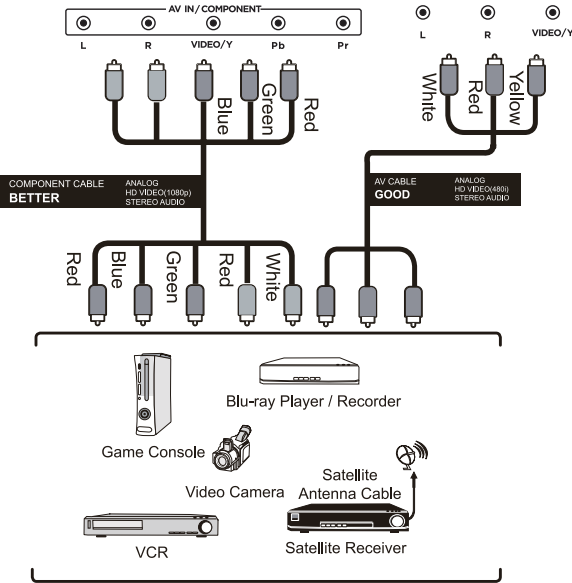

Match colored connectors to colored ports on back side of the TV.

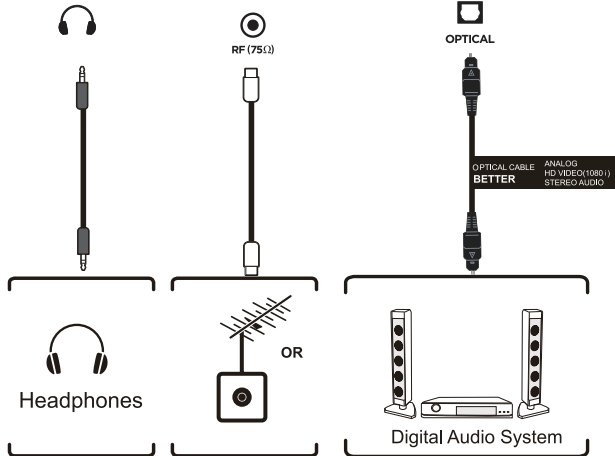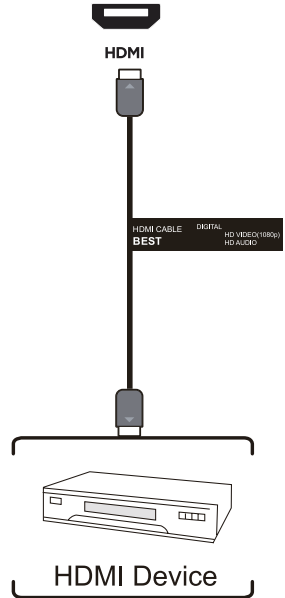

## CUSTOMIZING TV SETTINGS

### Turning On/Off Your TV

- Connect the power cord to the power socket after you have completed all the physical connections. At this stage, the TV will enter Standby Mode and the white LED indicator will illuminate.
- In Standby Mode, press the **⏻** button on the main unit or on the remote control to turn the TV on. The white LED indicator will turn blue.
- You can control your Android TV using the included remote, the Android TV Remote app, or the directional controller on the back of the TV. Download the Android TV Remote App to your iOS or Android device by visiting the appropriate app store for your device.



The **POWER** button on the main unit or on the remote control can only switch the TV into standby. To completely turn off the TV, please disconnect the power cord from the power socket.

### Remote Pairing



1

- Once you've connected your devices to your television and plugged it in, insert the included AAA batteries into the back of the remote and press the **⏻** "power" button on the remote. Your television will start and after press and hold the **⏻** button on your remote for 10 seconds you will be prompted to pair your remote with your television. Pairing your remote to your television is necessary because the remote uses Bluetooth to send most button commands and voice commands to your television.



2

- If your television doesn't find your remote, remove and reinsert the batteries in your remote. If your remote doesn't pair with your TV press and hold the **⏻** button on your remote for 10 seconds while your television is searching for your remote.
- Once you've paired your remote, follow the on-screen instructions to set up your TV.

# CUSTOMIZING TV SETTINGS

## Setup Wizard

- The first time you turn the TV on, it will go into the Setup Wizard after remote pairing. Press the **"Navigation"** buttons to highlight and select your desired mode and press **"Select"** to confirm.



1



2




3




4



5

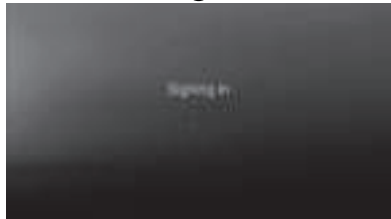

6

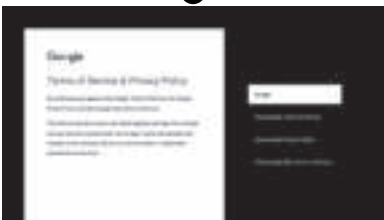

7



8



9



10

## CUSTOMIZING TV SETTINGS

### Inputs



- Press **Navigation** buttons on the remote control to display the Inputs menu, then use the **Navigation** buttons to cycle among the different inputs: Antenna/HDMI1/HDMI2/HDMI3/Composite/Component/Channels, then use the **Navigation** buttons to highlight the desired the Inputs menu and press **Select** to confirm.

### Volume Adjustment

- Press the **VOL+/-** buttons on the main unit or on the remote control to adjust the volume.
- If you wish to switch the sound off, press and hold the **VOL-** button on your remote to 0.


### GET THE MOST OUT OF YOUR ELEMENT VOICE REMOTE WITH GOOGLE ASSISTANT



### Connect to the Internet and sign in with your Google account

Connect your TV to the Internet and sign in with your Google account to use voice commands with your voice remote and to enjoy thousands of movies, shows, and games from Google Play, You Tube and your favorite apps. Voice search and personalized recommendations mean more time being entertained and less time hunting for something good.

### About your Element Voice Remote with Google Assistant

Simply press and hold the Voice button  and speak. Release the button when you are done speaking. You can use your voice to change channels or search for movies, TV shows, actors, directors, apps, games, and more.

Simply say:

- Play Stranger Things
- Show me some popular action movies from 2016
- You Tube
- What is the weather like in New York?

To learn more about voice commands you can use with your Element voice remote with Google Assistant, visit <https://support.google.com/assistant/answer/7540545>.


### ANDROID TV REMOTE CONTROL APP


Use your Android phone or tablet as a remote for your Android TV. Easily switch between d-pad and touchpad modes to navigate content and play games on your Android TV device. Tap the mic to start a voice search, or use the keyboard to input text on Android TV.

To learn more about using your phone or tablet as a remote control for Android TV, visit <https://support.google.com/androidtv/answer/6122465?hl=en>.

## CUSTOMIZING TV SETTINGS


### Home Page

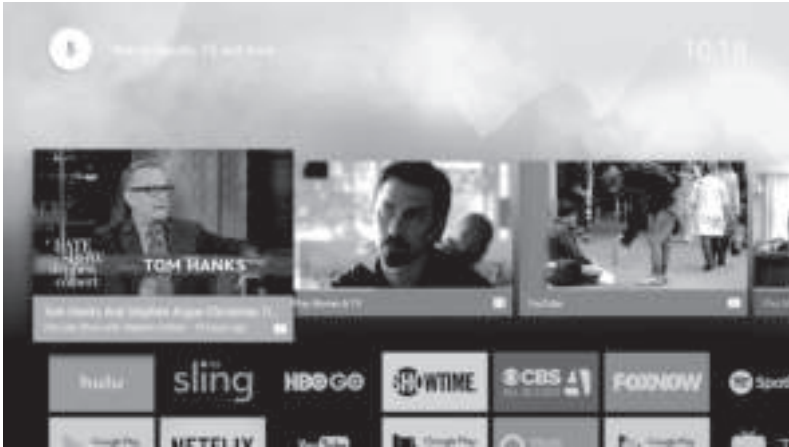

- Press  button on the remote to display the home page. Then use the **Navigation** buttons to select the home page (Recommended contents/Featured apps/Apps/Inputs/Settings) and press **Select** to enter. Use the **Navigation** buttons to select the desired APP and press **Select** button to view. Or press the hotkey(YouTube/NETFLIX/Google Play) on the remote control to enter the desired APP directly. You could download more apps and games from Google Play Store. For full listing of available Apps, please visit: [https://play.google.com/store/apps/collection/promotion\\_3000e26\\_androidtv\\_apps\\_all?hl=en](https://play.google.com/store/apps/collection/promotion_3000e26_androidtv_apps_all?hl=en).

### TV




- Press  button to display the home page, then use the **Navigation** buttons to highlight **TV** under Apps and press **Select** to confirm. Select between Channels and TV options.

## CUSTOMIZING TV SETTINGS

### Channels




Your TV has an Electronic Programme Guide (EPG) to help you navigate through all your possible viewing options. The EPG supplies information such as programme listings, start and end times for all available. In addition, detailed information about the programme is often available in EPG (the availability and amount of programme information will vary, depending on the particular broadcast). This function can only be used when the information is broadcast by the broadcasting companies. The EPG displays the programme details for the next 7 days.

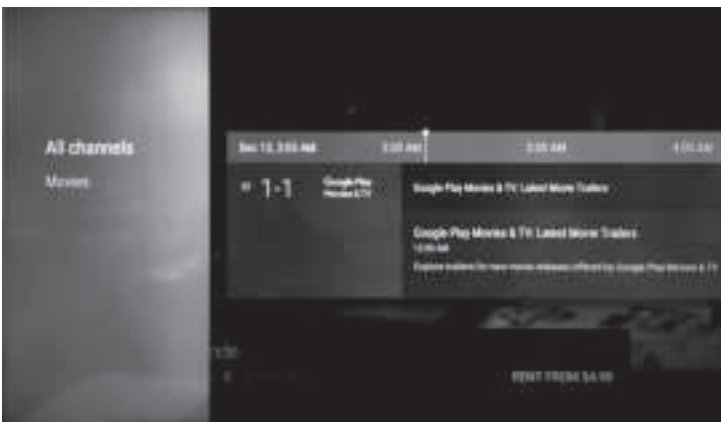


1. Press **Select** button on the remote control to select the Programme Guide.
2. Use the **Navigation** buttons to select the station you wish to watch or listen to, then press the **Select** button to tune to that station.

## CUSTOMIZING TV SETTINGS

### TV options

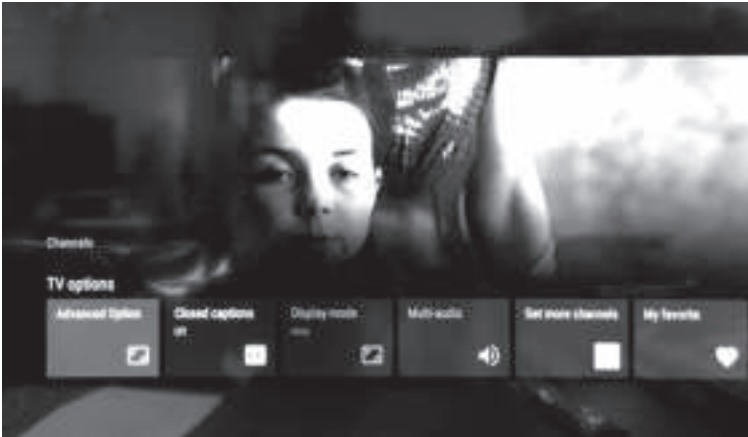




- Press  button to display the home page, then use the **Navigation** buttons to highlight **TV** under Apps and press **Select** to confirm, then use the **Navigation** buttons to highlight the desired TV options and press **Select** to confirm.

<b>Advanced Option</b>	You can also change the advanced option settings, for example Inputs Setting/Time/Misc(at TV mode). Note: With a different input source, the advanced option may differ.
<b>Closed captions</b>	Allows you to turn closed captioning of audio on or off, select analog or digital modes, or personalize the captioning style.
<b>Display mode</b>	Select display mode: Dynamic/Standard/Movie/User/PC Mode
<b>Multi-audio</b>	A variety of voice narration.
<b>Get more channels</b>	Get more channels from Google play
<b>My favorite</b>	Set the selected channel as a favorite channel.
<b>Settings</b>	Setting channel and parental controls



## CUSTOMIZING TV SETTINGS

### Settings

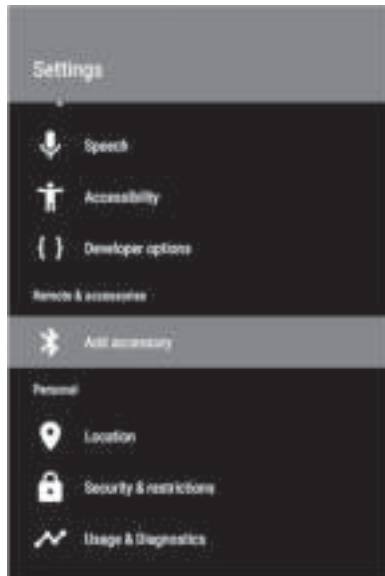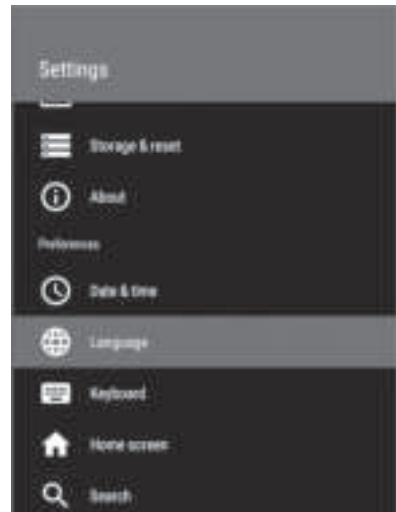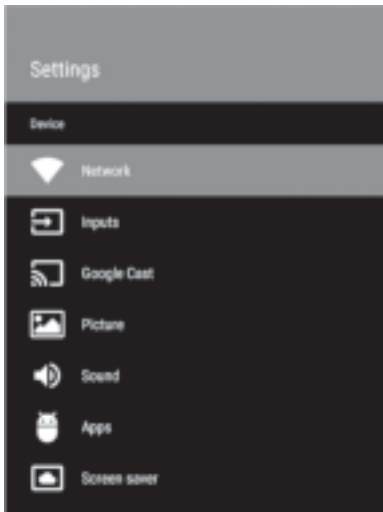


- Press **Navigation** buttons on the remote control to display the settings menu, then use the **Navigation** buttons to highlight the desired settings and press **Select** to confirm.

## CUSTOMIZING TV SETTINGS

### Network




- Press  to display the home page, use the **Navigation** buttons to highlight Settings and press **Select** to confirm. Then Use the **Navigation** buttons to select Network to enter and adjust each option setting.

<b>Wi-Fi</b>	WIFI switch WIFI link
<b>See all</b>	Display all the available networks
<b>Other options</b>	More settings network option.
<b>Connect via WPS</b>	Connect WPS network
<b>Add new network</b>	Add more new networks

## CUSTOMIZING TV SETTINGS

### Picture




- Press  to display the home page, use the **Navigation** buttons to highlight Settings and press **Select** to confirm. Then Use the **Navigation** buttons to select Picture to enter and adjust each option setting.

<b>Picture Mode</b>	Cycle among picture modes: Dynamic/Standard/Movie/ User/PC Mode.
<b>Brightness</b>	Increase or decrease the amount of white in the picture.
<b>Contrast</b>	Adjust the difference between light and dark levels in the pictures.
<b>COLOR</b>	Control the color intensity.
<b>Sharpness</b>	Adjust crispness level in edges between light and dark areas of the picture.
<b>TINT</b>	Adjust the balance between red and green levels.
<b>Color Temperature</b>	Cycle among color temperatures: Cold/Nature/ Warm/User.

## CUSTOMIZING TV SETTINGS

### Sound




- Press  to display the home page, use the **Navigation** buttons to highlight Settings and press **Select** to confirm. Then Use the **Navigation** buttons to select Sound to enter and adjust each option setting.

<b>Sound mode</b>	Allow the selection of an audio-enhancement technique: Standard/Music/Movie/User.
<b>Low Pitch</b>	Control the relative intensity of lower-pitched sounds.
<b>High Pitch</b>	Control the relative intensity of higher-pitched sounds.
<b>Equalizer</b>	Sound effects
<b>Balance</b>	Adjust the relative volume of the speaker in a multiple speaker system.
<b>AVC</b>	Turn On/Off to automatically control volume levels.
<b>Audio Description</b>	The voice of the blind person tells the motion of the audio
<b>AD Volume</b>	The volume of the sound of a blind person

## CUSTOMIZING TV SETTINGS

### Storage & reset




- Press  to display the home page, use the **Navigation** buttons to highlight Settings and press **Select** to confirm. Then Use the **Navigation** buttons to select Storage & reset to enter and adjust each option setting.

<b>Device storage</b>	Device storage content
<b>Internal shared storage</b>	Display Internal shared storage
<b>Reset</b>	Select to reset setting.
<b>Factory date reset</b>	Select to reset the Factory date setting.

## CUSTOMIZING TV SETTINGS

### Date & time




- Press  to display the home page, use the **Navigation** buttons to highlight Settings and press **Select** to confirm. Then Use the **Navigation** buttons to select Date & time to enter and adjust each option setting.

<b>Automatic date &amp; time</b>	Automatic date and time.
<b>Set date</b>	Set the system date
<b>Set time</b>	Set the system timer
<b>Set time zone</b>	Select a Time Zone
<b>Use 24-hour format</b>	Select 24-hour format.

## CUSTOMIZING TV SETTINGS

### Accessibility




- Press  to display the home page, use the **Navigation** buttons to highlight Settings and press **Select** to confirm. Then Use the **Navigation** buttons to select Accessibility to enter and adjust each option setting.

<b>Captions</b>	Display Captions
<b>High contrast text</b>	Display High contrast text
<b>TalkBack</b>	TalkBack is On/Off
<b>Switch Access</b>	Switch Access is On/Off
<b>Text to speech</b>	Text change to speech

## CUSTOMIZING TV SETTINGS

### Security & restrictions



- Press  to display the home page, use the **Navigation** buttons to highlight Settings and press **Select** to confirm. Then Use the **Navigation** buttons to select Security & restrictions to enter and adjust each option setting.

<b>Unknown sources</b>	Allow installation of apps from sources other than the Google Play Store.
<b>Verify apps</b>	Disallow or warn before installation of apps that may cause harm
<b>Restricted Profile</b>	Keep secret
<b>Create restricted profile</b>	Create keep secret


- NOTE: Other settings also see the actual operation of the TV



## CUSTOMIZING TV SETTINGS

---

### Parental Control

Press the **MENU** button on the main unit or press the  on the remote control and then press the **Navigation** buttons to highlight Live TV and press **Select** to confirm(Live TV -> Settings -> Parent Control). Use **Navigation** buttons to select 4-digit password to enter the **LOCK** menu. If used, this option feature can "block" undesirable programming from appearing on the TV. Parental Control offers the user a wide variety of options and settings that restrict or "block" the programming that can appear on the TV. Parental Control allows the user the capability of defining which program rating they consider acceptable to the younger more sensitive viewer. It can be preset and turned either on or off by the user who specifies the secret 4-number code, the password. The number of hours blocked are specified. General audiences and children blocks should be both programmed into the TV's memory. Viewer ratings are specified for both TV and the motion picture Industry; both rating systems should be used, for complete coverage. The ratings are based on the ages of children.

### Overview

To ensure complete coverage for all TV programs, (movies and regular TV shows) choose a rating for MPAA, from the selections below, as well as ratings from the TV Parental Guidelines Rating Systems below, using the Age Block option for General Audiences, and for children. In addition to those, you may wish to add additional restrictions from the content block menu, and submenus examples below.

### Things to Consider before Setting up Parental Control

Determine which rating you consider acceptable to the viewer. (For example, if you choose TV-PG, more restrictive ratings will be automatically blocked; the viewer will not be able to see: TV-PG, TV-14, or TV-MA rated programming.) Do you want to block the auxiliary video source entirely? (Blocks the signal sent by the equipment, such as VCR, connected to the TV Audio/Video Input Jacks) Or leave unblocked, then choose allowable ratings. Block program "Content" based on individual parameters such as: Strong Dialog, Bad Language, Sex Scenes, Violence Scenes, or Fantasy. Violent Scenes; in Content Blk option. Select a secret password, in the Set Password option, using the numbers keys on the remote control. Do not forget the password, it is the only way you can access the Parental Control menu and change rating selections, or turn Parental Control off. Do you want the Parental Control to be active at all times? If not, you can turn it on or off with the Lock On/Off option.

- You can set different Parental Control viewing restrictions for general audiences and for children, both can be active at the same time.
- Simply specifying one content block such as Sex Scenes, will not automatically restrict the programming that appears from the video sources.
- Even If you choose to leave the AUX Inputs unblocked, the ratings you specify will automatically restrict the programming that appears from the video sources.
- You can not disable Parental Control by disconnecting the TV from power. Block hours will be automatically reset to the original block time setting specified if power is disconnected.

## CUSTOMIZING TV SETTINGS

### Motion Picture Association of America (MPAA) Rating System

	Grade	Meaning
<b>G</b>	General Audiences	Content not offensive to most viewers.
<b>PG</b>	Parental Guidance Suggested	Content is such that parents may not want their children to view the program.
<b>PG-13</b>	Parents Strongly Cautioned	Program is inappropriate for pre-teens, with a greater degree of offensive material suggested than a PG rated program.
<b>R</b>	Restricted	Not for children under 17, strong element of sex and/or violence.
<b>NC-17</b>	No children under age 17	Not for children under 17 under any circumstances. Strong sexual content.
<b>X</b>	Hard Core Films	Same as NC-17 rating.
<b>No Rating</b>	No Rating	MPAA Not Rated

### TV Parental Guideline Rating System

	Grade	Meaning
<b>TV-Y</b>	All Children	Content not offensive to most viewers.
<b>TV-Y7</b>	Directed to Older Children	Considered suitable for children over 7, may contain fantasy violence scenes.
<b>TV-G</b>	General Audience	Considered suitable for all audience; children may watch unattended.
<b>TV-PG</b>	Parental Guidance Suggested	Suggested unsuitable for younger children, may contain suggestive language, bad language, sex and violence scenes.
<b>TV-14</b>	Parents Strongly Cautioned	Unsuitable for children under 14, may contain strong language, bad language, sex and violence scenes.
<b>TV-MA</b>	Mature Audience Only	Adults only, may contain strong language, bad language, sex and violence scenes.

#### Canadian Rating:

- *Canadian English is used throughout all English-speaking Canada (C, C8+,G, PG,14+, 18+).*
- *Canadian French is used in Quebec (G,8 ans+, 13 ans+,16 ans+, 18 ans+).*



The V-Chip will automatically block certain categories that are "more restrictive". If you block TV-Y category, then TV-Y7 will be automatically blocked. Similarly, if you block TV-G category, then all the categories in the "young adult" will be blocked (TV-G, TV-PG, TV-14, and TV-MA).

## TROUBLESHOOTING

If your TV does not operate normally or cannot be turned on, please check the following troubleshooting questions. Remember also to check any other connected electronic device, such as DVD or blu-ray player to pinpoint the problem. If the TV still fails to operate normally, please contact technical support (Refer to Warranty page).

SYMPTOM	POSSIBLE CAUSE	REMEDY
Dead. No LED lit	No power to the TV.	<ul style="list-style-type: none"> <li>Check all connections to the TV's AC socket.</li> </ul>
Dead. No LED lit white	Set in standby mode.	<ul style="list-style-type: none"> <li>Press either the Power button or the Standby button on the remote control.</li> </ul>
Blue screen	No signal.	<ul style="list-style-type: none"> <li>Press the SOURCE button to select the correct source.</li> </ul>
	Incorrect source selected.	
Noisy, snowy, ghosting picture (TV)	Poor antenna signal.	<ul style="list-style-type: none"> <li>If using an indoor antenna, try adjusting the antenna position. Check antenna connections.</li> </ul>
No sound	Sound "Mute".	<ul style="list-style-type: none"> <li>Turn sound "Mute" off.</li> </ul>
	Volume set too low.	<ul style="list-style-type: none"> <li>Check volume settings.</li> </ul>
	External leads not connected "if used".	<ul style="list-style-type: none"> <li>Check that all external leads are connected properly.</li> </ul>
PASSWORD		
Lost password	Select the SET Password setting in the LOCK menu, then enter the following master password "8899". The master password clears your previous password and allows you to enter a new password.	

## TROUBLESHOOTING

Before contacting the service technician, perform the following simple checks. If any problem still persists, unplug the LED TV and call for assistance.

PROBLEM	POSSIBLE SOLUTIONS
No sound and picture	<ul style="list-style-type: none"> <li>• Check that the main plug has been connected to a wall outlet.</li> <li>• Check that you have pressed the POWER on the front of the TV set.</li> <li>• Check the picture contrast and the brightness setting.</li> </ul>
white LED indicator lights	<ul style="list-style-type: none"> <li>• Set in standby mode. Press either the Power button or the Standby button on the remote control.</li> </ul>
Normal picture but no sound	<ul style="list-style-type: none"> <li>• Check the volume.</li> <li>• Sound muted? Press the MUTE button.</li> <li>• Try another channel, the problem may be with the broadcast.</li> <li>• Are the audio cables installed properly?</li> </ul>
The remote control does not work	<ul style="list-style-type: none"> <li>• Check to see if there are any objects between the TV and remote control causing obstruction.</li> <li>• Are batteries installed with correct polarity (+/-)?</li> <li>• Correct remote operating mode set: TV, VCR, etc?</li> <li>• Install new batteries.</li> </ul>
Power suddenly turns off	<ul style="list-style-type: none"> <li>• Is the sleep timer set?</li> <li>• Check the power connection, power may be interrupted.</li> <li>• No broadcast on the station tuned.</li> </ul>
Picture appears slowly after switching on	<ul style="list-style-type: none"> <li>• This is normal, the image is muted during the product start up process. Please contact a service provider if the picture has not appeared after 5 minutes.</li> </ul>
Poor color or picture	<ul style="list-style-type: none"> <li>• Adjust the color in Menu option.</li> <li>• Keep a sufficient distance between the product and the VCR.</li> <li>• Try another channel, the problem may be with the broadcast.</li> <li>• Are the VIDEO cables installed properly?</li> <li>• Activate any function to restore the brightness of the picture.</li> </ul>
Horizontal/vertical bars or picture shaking	<ul style="list-style-type: none"> <li>• Check for local interference, such as an electrical appliance or power tool.</li> </ul>
Blue screen	<ul style="list-style-type: none"> <li>• Press the SOURCE button to select correct source.</li> </ul>
Poor reception on some channels	<ul style="list-style-type: none"> <li>• Station or cable experiencing problems. Tune to another station.</li> <li>• Station signal is weak, reorient antenna for better reception.</li> <li>• Check for sources of possible interference.</li> </ul>
Lines or streaks in pictures	<ul style="list-style-type: none"> <li>• Check the antenna (change the direction of the antenna).</li> </ul>
No output from one of the speakers	<ul style="list-style-type: none"> <li>• Adjust balance in the Menu option.</li> </ul>

## TROUBLESHOOTING

Note: When there is a problem in VGA mode ( only when VGA mode is applied).

PROBLEM	POSSIBLE SOLUTIONS
The signal is out of range	<ul style="list-style-type: none"><li>• Adjust resolution, horizontal or vertical frequency.</li><li>• Check whether the signal cable is connected or loose.</li><li>• Check the input source.</li></ul>
Vertical bar or strip on the background, horizontal noise and incorrect position	<ul style="list-style-type: none"><li>• Set the auto configure or adjust clock, phase, or H/V position.</li></ul>
Screen color is unstable or is a single color	<ul style="list-style-type: none"><li>• Check the signal cable.</li><li>• Reinstall the PC video card.</li></ul>

### Maintenance

Early malfunction can be prevented. Careful and regular cleaning can extend the amount of time you will have with your new TV. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

Do not use your TV in areas that are too hot or too cold, because the cabinet may warp or the screen may malfunction. Your TV works best in temperatures that are comfortable to you.

Storage temperatures are 32° to 122°F(0° to 50°C).

Working temperatures are 32° to 95°F(0° to 35°C).

Do not place your TV in direct sunlight or near a heat source.

-minimum 5cm distances around the apparatus for sufficient ventilation;

-the ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.;

-no naked flame sources, such as lighted candles, should be placed on the apparatus;

-attention should be drawn to the environmental aspects of battery disposal.

### Clean the screen

A great tip to dust off your screen: wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use to wipe the screen.

Make sure the excess water is off the screen, then let air-dry before you turn on the TV.

### Cleaning the cabinet

To remove dirt or dust, wipe the cabinet with a soft, dry, line-free cloth. Please be sure not to use a wet cloth.



**FCC STATEMENT**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

**FCC Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

For customer support: **1-888-842-3577**

**Please send all correspondence to:**

**Element TV Company, LP. Customer Service**

**customerservice@elementelectronics.com**

**www.elementelectronics.com**



This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly.