



ELECTRIC MILK FROTHER

HOW TO USE
Press whisk button

ELECTRIC MILK FROTHER

HOW TO USE
Press the button to start whisking and release the button to stop.

Notices

The whisk is non-detachable. Do not try to detach the whisk.

It is recommended that the continuous working time of the frother should not exceed 3 minutes.

Do not immerse the main body of the product in water or any other liquid to avoid harm to human or the product.

Keep body parts (e.g. fingers) away from the whisk when the machine is working.

Keep this product away from children.

If there is water or other liquid on the whisk, please do not place the product upside down to avoid water flowing into the main body.

FC UK CA CE ROHS



Notices

The whisk is non-detachable. Do not try to detach the whisk.

It is recommended that the continuous working time of the frother should not exceed 3 minutes.


Do not immerse the main body of the product in water or any other liquid to avoid harm to human or the product.

Keep body parts (e.g. fingers) away from the whisk when the machine is working.

Keep this product away from children.

If there is water or other liquid on the whisk, please do not place the product upside down to avoid water flowing into the main body.

FC UK CA CE ROHS

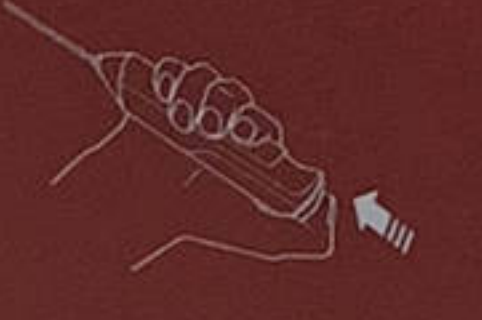

Notices

The whisk is non-detachable. Do not try to detach the whisk.

It is recommended that the continuous working time of the frother should not exceed 3 minutes.


Do not immerse the main body of the product in water or any other liquid to avoid harm to human or the product.

Keep body parts (e.g. fingers) away from the whisk when the machine is working.

Keep this product away from children.

If there is water or other liquid on the whisk, please do not place the product upside down to avoid water flowing into the main body.

FC UK CA CE ROHS

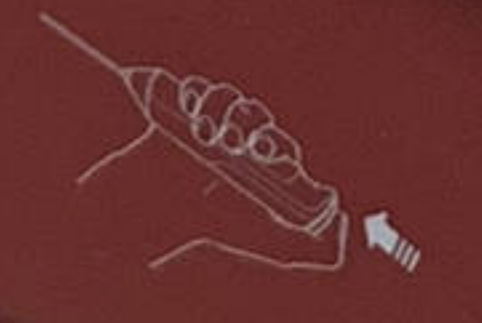

Notices

The whisk is non-detachable. Do not try to detach the whisk.

It is recommended that the continuous working time of the frother should not exceed 3 minutes.

Do not immerse the main body of the product in water or any other liquid to avoid harm to human or the product.

Keep body parts (e.g. fingers) away from the whisk when the machine is working.

Keep this product away from children.

If there is water or other liquid on the whisk, please do not place the product upside down to avoid water flowing into the main body.

FC UK CA CE ROHS



Notices

The whisk is non-detachable. Do not try to detach the whisk.

It is recommended that the continuous working time of the frother should not exceed 3 minutes.

Do not immerse the main body of the product in water or any other liquid to avoid harm to human or the product.

Keep body parts (e.g. fingers) away from the whisk when the machine is working.

Keep this product away from children.

If there is water or other liquid on the whisk, please do not place the product upside down to avoid water flowing into the main body.

FC UK CA CE ROHS



Notices

The whisk is non-detachable. Do not try to detach the whisk.

It is recommended that the continuous working time of the frother should not exceed 3 minutes.

Do not immerse the main body of the product in water or any other liquid to avoid harm to human or the product.

Keep body parts (e.g. fingers) away from the whisk when the machine is working.

Keep this product away from children.

If there is water or other liquid on the whisk, please do not place the product upside down to avoid water flowing into the main body.

FC UK CA CE ROHS