


DunRock POP




Handleiding

In de verpakking

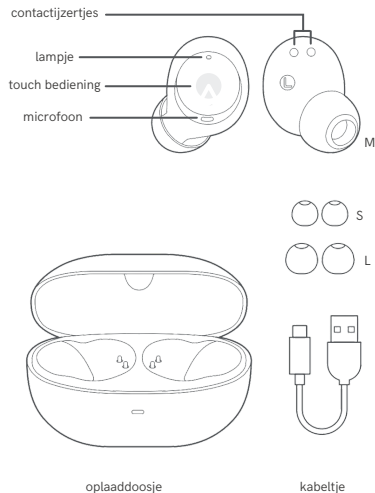

Verbinden


- *Alleen de eerste keer:* Open doosje, oortjes eruit, verwijder stickers, oortjes terug in case. Sluit klepje.
- 1. Open het oplaadoosje en haal de oortjes uit het doosje. De oordopjes proberen nu te verbinden.
- 2. Ga in je telefoon naar de bluetoothinstellingen en kies DunRock Pop. Kies: verbinden > toestaan.
- Wil je met een ander apparaat verbinden?
 - Plaats de oordopjes in de oplaadcase, klepje dicht, doe de bluetooth van je laatst verbonden apparaat uit (bijv. je telefoon).
 - Open oplaadcase weer en haal de oortjes eruit.
 - Kies daarna op je telefoon, laptop of andere bluetooth device in de instellingen de DunRock Pop en verbind.

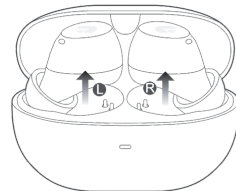


Oortjes verbinden met 1 apparaat tegelijk. Niet met 2.

Reset

1. Verwijder de DunRock Pop uit je telefoon, laptop en tablet (als ze daarmee ooit verbonden zijn) en laat de oplaadcase op met een usb-c kabeltje en oplader.
2. Druk de oortjes in de case, klepje dicht en wacht een paar minuten.
3. Open de oplaadcase, maar laat de oortjes in de case.
4. Druk in redelijke snelheid 5x achter elkaar op 1 van de 2 oordopjes terwijl ze nog in de oplaadcase zitten. De oordop knippert nu 5x wit en blijft de oordop rood.
5. Herhaal de vorige stap bij de andere oordop.
6. Haal oordopjes uit de case en verbind de oortjes.

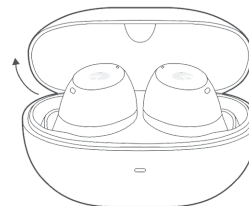

Doosje opladen

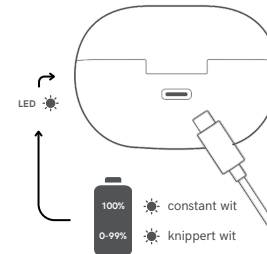

Plaats het kabeltje in het oplaadoosje. Een wit knipperend lampje op het doosje betekent dat de case wordt opgeladen. De oplaadcase is vol als een wit lampje op het doosje blijft branden.

Lampje op case (als de case niet op wordt geladen):

- Vol: case geeft rood lampje (~4 seconden)
- Bijna leeg: case knippert rood (~4 seconden)

Oortjes opladen

Doe de oortjes in de oplaadcase. Een rood lichtje op het oordopje betekent dat het oordopje wordt opgeladen. Het oordopje geeft 30 sec. een wit lichtje als de oordop vol is.

Bediening

ON oortjes uit case of 2 sec. touch

OFF oortjes in case + klepje dicht*

volume hoger: druk 1x rechts


volume lager: druk 1x links

play/pauze: druk 2x (links of rechts)

volgende lied: druk 3x rechts

voice assist: druk 3x links

game mode: links 1,5 sec ingedrukt

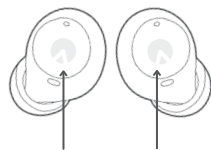

Hou het rechter oordopje 2 sec. ingedrukt om te schakelen tussen noise cancelling, transparency en normaal



Je wordt gebeld. Druk 2x om op te nemen of hou ingedrukt om af te wijzen. Druk 2x om weer op te hangen.



Zo draag je ze



Draai de oordopjes een beetje totdat de oordopjes het beste je oor afsluiten. Dat is essentieel voor de geluidskwaliteit, de bass en de noise cancelling.

- Plaats de oordopjes in je oor (lieftst zonder de touch control aan te raken)
- De opening van de microfoon wijst een beetje naar je mond.
- Zorg dat de oordop en eartip goed afsluit in je oor.
- Als je de oordopjes niet goed in je oor draagt, wordt het geluid minder zwaar en de microfoon kan minder goed werken.

Probleem? Oplossing.

- De oordopjes verbinden niet met telefoon of laptop. Laad het doosje en oortjes op. Verbind opnieuw. Werkt het niet? Check of ze niet met een ander apparaat verbonden zijn. Zo niet: reset en probeer opnieuw.
 - De oordopjes ontkoppelen niet in de oplaadcase. Dat komt altijd door een lege oplaadcase. Laad de oplaadcase op met de oortjes in de case. Ze ontkoppelen.
 - Ik wil meer bass horen. Zet het volume voldoende hard om alle tonen goed te horen. Zorg dat apparaat-equalizers uit staan en zorg dat de oortjes goed je oor afsluiten. De eerste toon die namelijk sneuvelt bij een slechte afdichting, is de lage toon. Kies een maat eartip die naadloos past in je oor.
 - De microfoon werkt niet goed. Controleer of het écht aan de microfoon ligt. Spreek een fragment in en controleer of je goed te verstaan bent. Ben je niet goed te verstaan? Maak de openingen van de mic schoon met een borsteltje.
 - Ik hoor m'n eigen stem niet goed tijdens het bellen. Zet de transparency mode aan tijdens het bellen. Je hoort dan je eigen stem versterkt in je oor.
 - De oordop hapert of de verbinding valt weg. Controleer of het door apparaat komt (opnieuw opstarten, updaten, internet verbeteren). Haperingen komen ook door andere sterke signalen in de lucht: een tram, een gebouw, een station, een microwave, koelkast etc. Doe als laatste check een reset en probeer opnieuw.

Vraag? Antwoord.

- Wat is active noise cancelling? Active noise cancelling neutraliseert het omgevingsgeluid. Je hoort daardoor minder omgevingsgeluid. Het filtert met name de lage tonen. Test de noise cancelling in omgevingen met overwegend veel omgevingsgeluid (zoals in het vliegtuig of de trein).
 - Wat is transparency mode? Bij transparency mode speelt je oordop het geluid uit je omgeving actief af in je oor. Handig als je het geluid om je heen wilt horen als je in-ear oortjes gebruikt.
 - Deze oortjes hebben 6 ENC-microfoons. Wat is ENC? ENC staat voor environmental noise cancelling. Dat betekent dat als je belt, je gesprekspartner minder last heeft van je omgevingsgeluid. ENC is niet in staat om veel wind te filteren. Microfoons hebben last van veel wind.
 - Wat is Game Mode? Game mode zorgt voor minimale vertraging tussen beeld en geluid. Bijvoorbeeld tijdens het kijken van een video of het spelen van een spel.
 - Hoe krijg ik het beste geluid? Zorg dat de oortjes goed je oor afsluiten. Denk aan de positie van de oordop in je oor en de juiste maat eartips. Zorg dat je de beste codec hebt geselecteerd in je instellingen > bluetooth > DunRock Pop > kies: AAC. Kies in je muziek-app de hoogste kwaliteit. Zet elke vorm van equalizer uit in je telefoon en muziek-app. Zorg dat het steeltje van de oordop kort en dicht langs je wang zit.

Niet doen

- Voorkom schade of mogelijk gevaar: demonteer je oordopjes niet.
- Vermijd extreme temperaturen voor de oordopjes (niet onder 0°C en niet boven 45°C).
- Vermijd het gebruik van de lampjes dichtbij de ogen van kinderen of dieren.
- Vermijd het gebruik van oortjes in situaties waar het horen van omgevingsgeluid kan bijdragen aan je veiligheid.
- Gebruik de oordopjes niet tijdens een onweersbui om storingen te voorkomen en het risico op een elektrische schok te verminderen.
- Gebruik geen agressieve chemicaliën of sterke reinigingsmiddelen bij het schoonmaken van dit product.
- Gebruik de oordopjes niet gedurende lange tijd en/of met te hoog volume, dit kan je gehoor beschadigen.

DunRock




DunRock POP




Manual

In this package

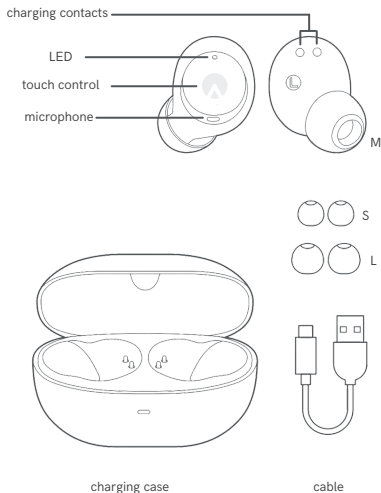

Connect


- *Only the first time:* Open the case, take out the earbuds, remove stickers, put earbuds back in the case. Close the lid.
- 1. Open the charging case and take the earbuds out. The earbuds will now try to connect.
- 2. On your phone, go to the Bluetooth settings and choose DunRock Pop. Choose: connect > allow.
- Want to connect with a different device?
 - Place the earbuds in the charging case, close the lid, turn off the Bluetooth of your last connected device (e.g., your phone).
 - Reopen the charging case and take out earbuds.
- Then choose DunRock Pop in the settings of your phone, laptop, or other Bluetooth device and connect.

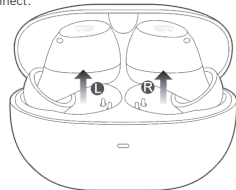


Earbuds can only be connected with 1 device at a time.

Reset

1. Remove the DunRock Pop from your phone, laptop, and tablet (if they have ever been connected) and charge the charging case using a USB-C cable and charger.
2. Press the earbuds into the case, close the lid, and wait a few minutes.
3. Open the charging case, but leave the earbuds inside.
4. Press one of the earbuds 5 times in quick succession while they are still in the charging case. The earbud will now blink white 5 times and then remain red.
5. Repeat the previous step with the other earbud.
6. Take the earbuds out of the case and connect them.

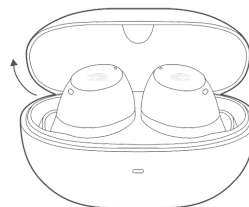

Charging case

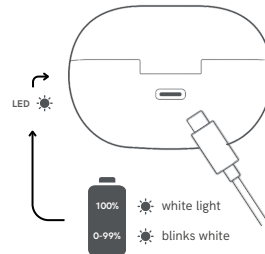

Insert the cable into the charging case. A blinking white light on the case indicates that the case is charging. The charging case is full when a white light on the case remains on.

Light on the case (when the case is not charging!):

- Full: case shows a red light (~4 seconds)
- Almost empty: case blinks red (~4 seconds)

Charging earbuds

Put the earbuds in the charging case. A red light on the earbud indicates that the earbud is charging. The earbud will show a white light for 30 sec. when it is fully charged.

Control

ON Take earbuds out or 2 sec. touch

OFF earbuds in case + close lid*

volume up: press 1x right


volume down: press 1x left

play/pause: press 2x (left or right)

skip track: press 3x right

voice assist: press 3x left

game mode: left press 1,5 sec

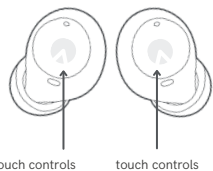

Hold the right earbud pressed for 2 seconds to switch between ANC, transparency, and normal modes.



You're receiving a call. Press twice to answer or hold down to reject. Press twice again to hang up.



How to wear



Twist the earbuds slightly until they best seal your ear. This is essential for sound quality, bass, noise cancelling and call experience.

- Insert the earbuds into your ear (preferably without touching the touch control).
- The opening of the microphone should point slightly towards your mouth.
- Ensure that the earbud and eartip seal well in your ear.
- If you don't wear the earbuds correctly in your ear, the sound will be less intense and the microphone may not work as well.

Problem? Solution.

- The earbuds don't connect to the phone or laptop. Charge the case and earbuds. Reconnect. If it doesn't work, check if they are connected to another device. If not: reset and try again.
- The earbuds don't disconnect in the charging case. This is always due to an empty charging case. Charge the charging case with the earbuds inside. They will disconnect.
 - I want to hear more bass. Set the volume sufficiently high to hear all tones well. Make sure device equalizers are off and ensure the earbuds seal your ear well.
 - The microphone is not working well. Check if it's really the microphone. Record a memo and check if you are clearly audible. If you are not clearly audible, clean the mic openings with a brush.
 - I can't hear my own voice well during calls. Turn on transparency mode during calls. You will then hear your own voice amplified in your ear.
 - The earbud stutters or the connection drops. Check if it's due to the device (restart, update, improve internet). Stuttering also occurs due to other strong signals in the air: a tram, a building, a station, a microwave, refrigerator, etc. As a last check, do a reset and try again.

Question? Answer.

- What is active noise cancelling? Active noise cancelling reduces ambient noise, allowing you to hear less of your surroundings. It particularly filters out low-frequency sounds. Test the noise cancelling feature in environments with predominantly high ambient noise, such as on an airplane or train.
- What is transparency mode? Transparency mode actively plays the ambient sound through your earbuds. It's useful when you want to hear the sounds around you while using your in-ear earbuds.
 - These earbuds have ENC mics. What is ENC? ENC stands for environmental noise cancelling. It reduces the impact of your environmental noise for the person you are speaking to during calls. However, ENC is not effective at filtering out hard wind noise, as microphones are sensitive to wind interference.
 - What is Game Mode? Game Mode minimizes audio-visual delay, ensuring synchronization between the sound and visuals. This is useful when watching videos or playing games.
 - How do I ensure the best sound? Make sure the earbuds fit properly in your ears, considering the position of the earbud and using the right-sized eartips. Select the best codec in your settings > Bluetooth > DunRock Pop > choose AAC. Opt for the highest quality in your music app. Disable any form of equalizer in your phone and music app. Also, make sure the bottom of the earbud sits close to your cheek.

Don't

- Avoid damaging or potentially hazardous situations: do not disassemble your earbuds.
- Avoid extreme temperatures for the earbuds (below 0°C and above 45°C).
- Avoid shining the lights near the eyes of children or animals.
- Avoid using earbuds in situations where being aware of ambient noise can contribute to your safety.
- Do not use the earbuds during a thunderstorm to prevent interference and reduce the risk of electric shock.
- Do not use aggressive chemicals or strong cleaning agents when cleaning this product.
- Do not use the earbuds for an extended period and/or at high volumes, as it can damage your hearing.

DunRock

