
Ultrasonic Cleaner


User Manual

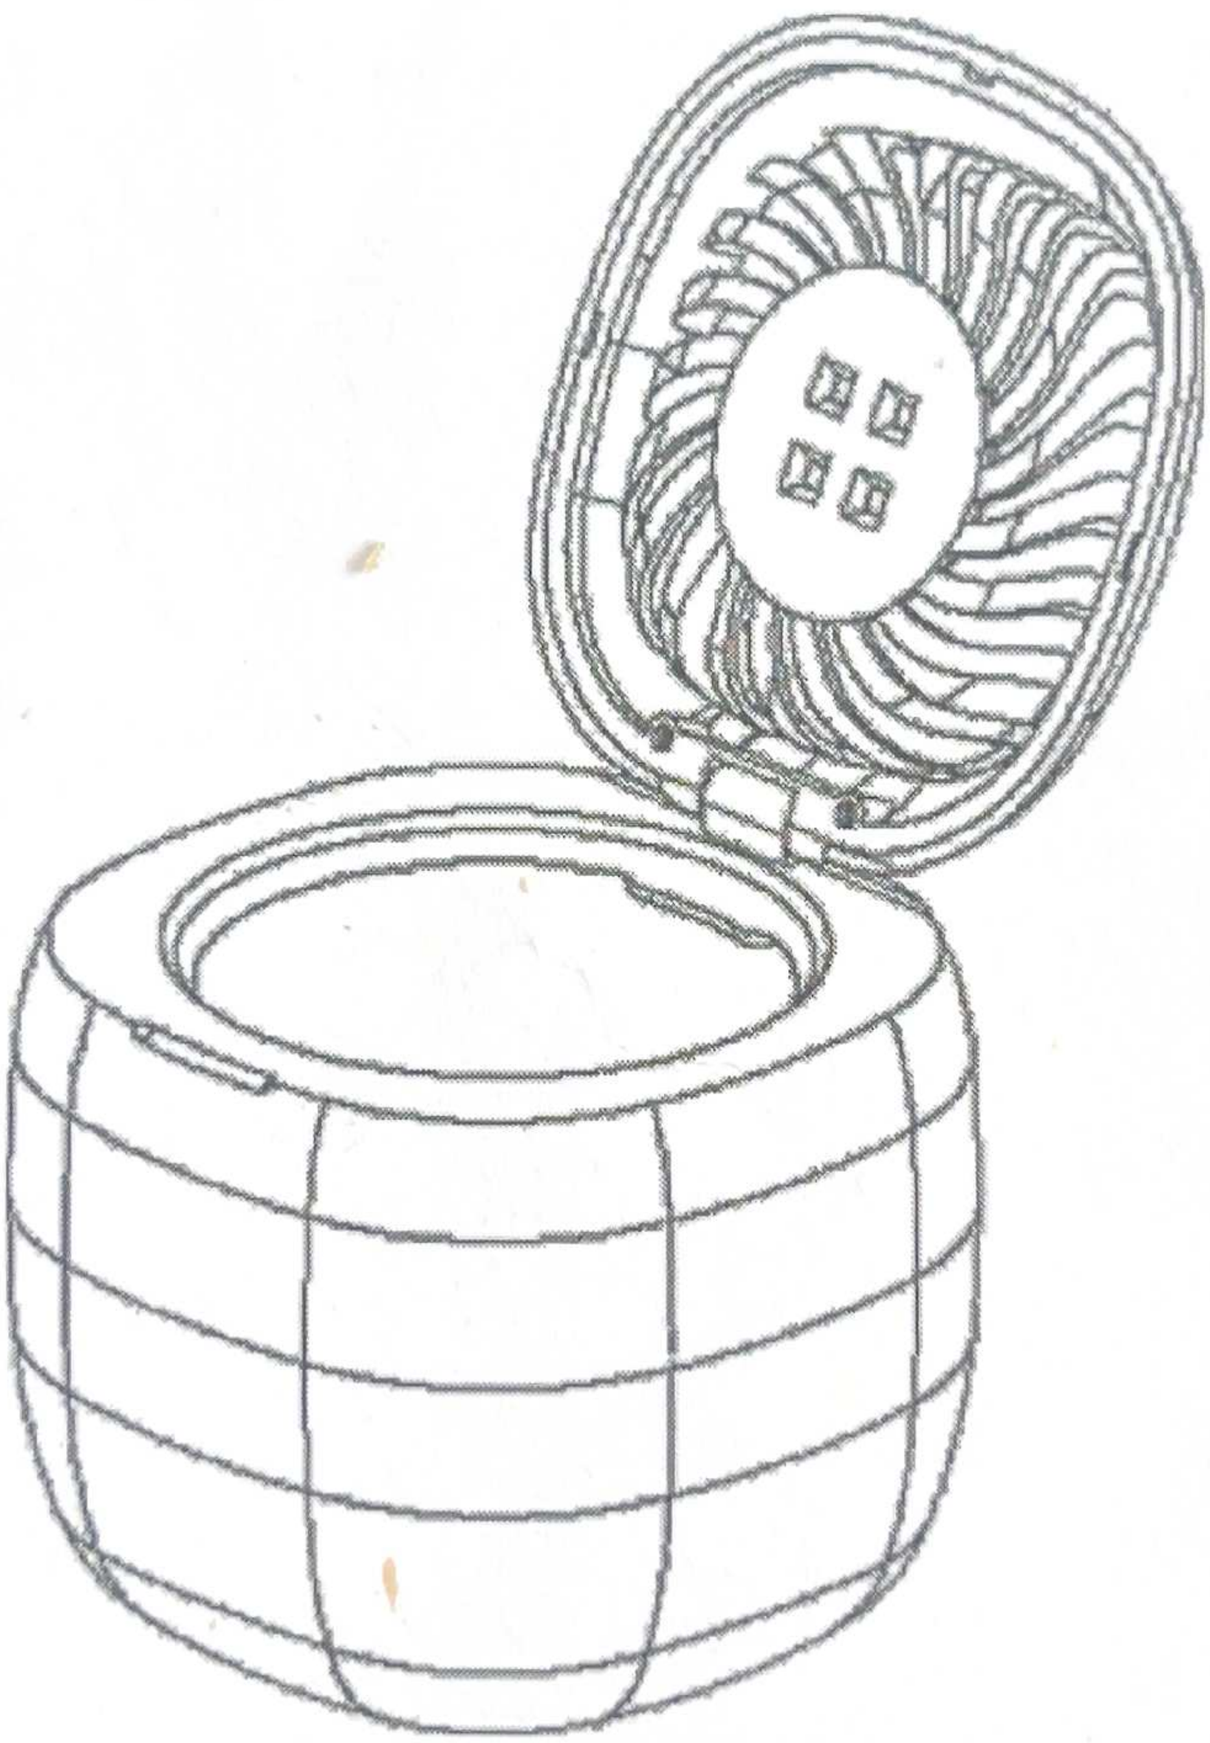

Thank you for choosing our ultrasonic cleaner.
Please read this manual carefully before use
and keep it properly for reference.


Ultrasonic Cleaner

User Manual

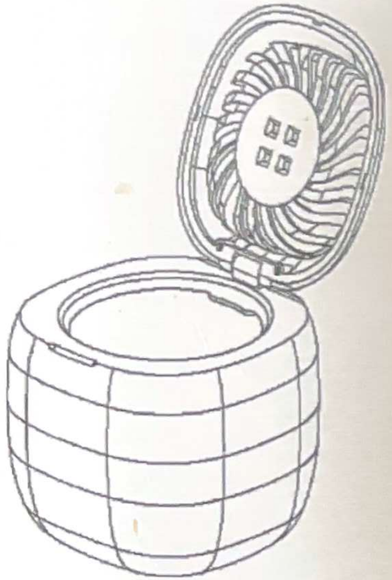

Thank you for choosing our ultrasonic cleaner.
Please read this manual carefully before use
and keep it properly for reference.

Product Details:

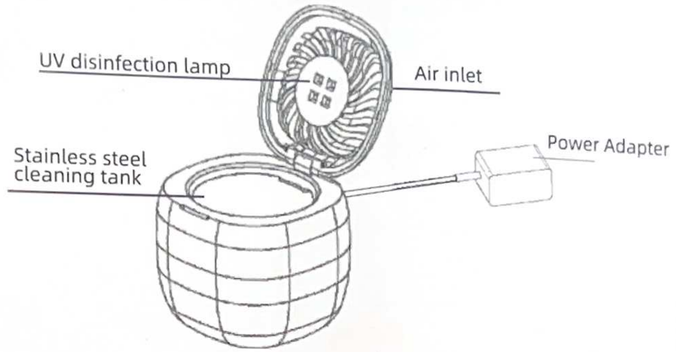


Product Specification

Input voltage	220-240V 50/60Hz
Frequency	45KHz
Power	25W±3W
Tank Capacity	180ml
Ultraviolet disinfection	4pcs UV sterilizing lamps
Product Size	115*115*120mm
Material	ABS/304 Stainless steel
Cleaning mode	3mins / 5mins / 8mins
Drying mode	5mins /10mins /15mins

Product Introduction:

Ultrasonic Cleaner is a device that uses ultrasonic principles to remove particles/dirt from the surfaces of dentures, orthotics, retainers, whitening trays, night dental guards, jewelry, electric toothbrush heads, manual toothbrushes, makeup brushes,etc.

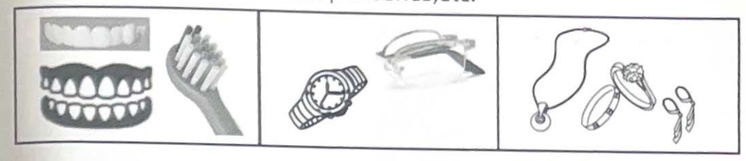

Attention: These products cannot be cleaned:

1. **Products that may fade.**
2. **Non-waterproof watches.**

Cleaning Function:

Long touch the 'Clean' button to start cleaning or stop cleaning. During cleaning, the screen displays seconds, the disinfection lamp and the ultrasonic wave turn on at the same time. After cleaning,the machine turns off.

NOTE:

For larger objects, you can place the parts needed to be cleaned in the tank and open the lid to proceed cleaning. he disinfection lamp doesn't turn on if the machine lid is open.

Drying Function:

Long touch the 'DRY' button to start drying or stop drying. During drying, the fan starts, the disinfection light turns on. After drying, the machine turns off.

Machine Maintenance:

1. How to clean the water tank?
a. Add half of the water level of "MAX" to the tank, clean with a soft sponge, and then rinse with clean water. When the stain is stubborn, add 2 drops of neutral detergent, thus the cleaning effect is better.


Note: Do not use a sponge with a hard surface, it will scratch the cleaning tank.
b. Wipe out the water with a dry cloth.

2. How to clean the main shell and cover?
a. Wet the rag with water and wipe the main shell and cover. Wipe the UV lamp lightly. When the stain is stubborn, you can add a little neutral detergent to the rag, and then wipe it.
b. Wipe out the water with a dry cloth.

3. The machine itself is not waterproof, so do not soak or flush the machine to prevent water from entering the machine and causing damage.

4.Do not operate the device continuously for a long time.

Instructions For Use:

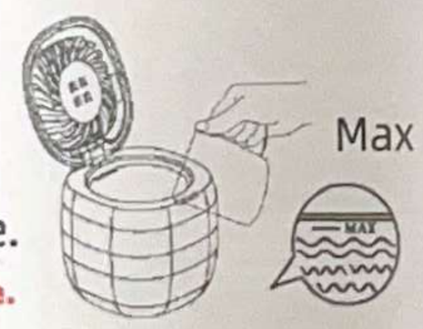

1. Add clean water to the stainless steel cleaning tank, and the water does not exceed the MAX line.


NOTE: If start cleaning without water, it will damage the machine.




2. Put in items that need to be cleaned. Machine should be placed flat during use.(You can add detergent or cleaning tablets to the water to achieve better cleaning results)

3. Plug the power lead into grounded outlet, and long touch the 'Clean' button to start cleaning for 3 minutes.
First touch: 180 seconds basic cleaning,
Second touch: 300 seconds moderate cleaning,
Third touch: 480 seconds deep cleaning.

(You can choose the appropriate time according to the degree of dirtiness of the item)

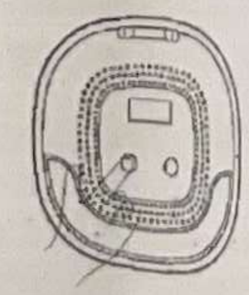

4. After cleaning, pour out the sewage, wipe the tank, and put the cleaning items into cleaning tank, then long touch the 'DRY' button to start the drying mode.There are 3 timing settings for drying: 5mins / 10mins /15mins.

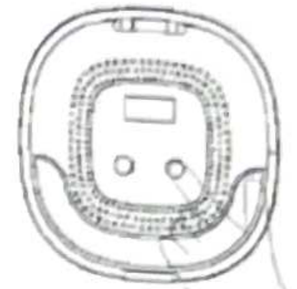

Safety Warnings:




1. Keep the machine and all related accessories out of reach of children.




2. Do not put liquid bleach, hot water, corrosive, flammable or ammoniacal liquids into the tank.



3. When the machine is not in use, unplug the power cord and do not touch the plug or socket with wet hands.

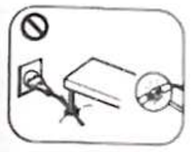

4. If the plug or adapter or wire is damaged, do not run the machine.

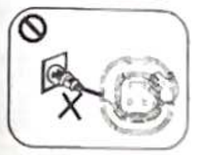

5. During drying, do not touch stainless steel tank or cover the air inlet with your hands.



6. During drying, do not turn on the Cleaning mode.