The Hall Light Remote

Auxiliary light source A, ON / OFF

LED main light source brightness stepless frequency conversion Dimming brightness increases each time Press to increase the brightness continuously and slowly

LED main light source color temperature stepless frequency conversion Each time the color is pressed, the color temperature decreases Long press to reduce color temperature continuously and slowly

If the remote control cannot control the light, please carry out the following operation: turn on the light, the remote control is facing the light, changan 5-second "SETUP" button, then disconnect the power of the light, turn on the light, press the "SETUP" button for 1 second, the remote control can control the light.

Turn on the LED main light source

LED main light source brightness 2W sleep mode

LED main light source color temperature stepless frequency conversion Each time the color is adjusted, the brightness increases Long press to increase color temperature continuously and slowly

LED main light source brightness stepless frequency conversion Each time the dimming is pressed the brightness decreases Long press to decrease brightness continuously and slowly

RGB scene manual mode

50% brightness and 100% brightness switch

Turn off the LED main light source

SETUP

ON
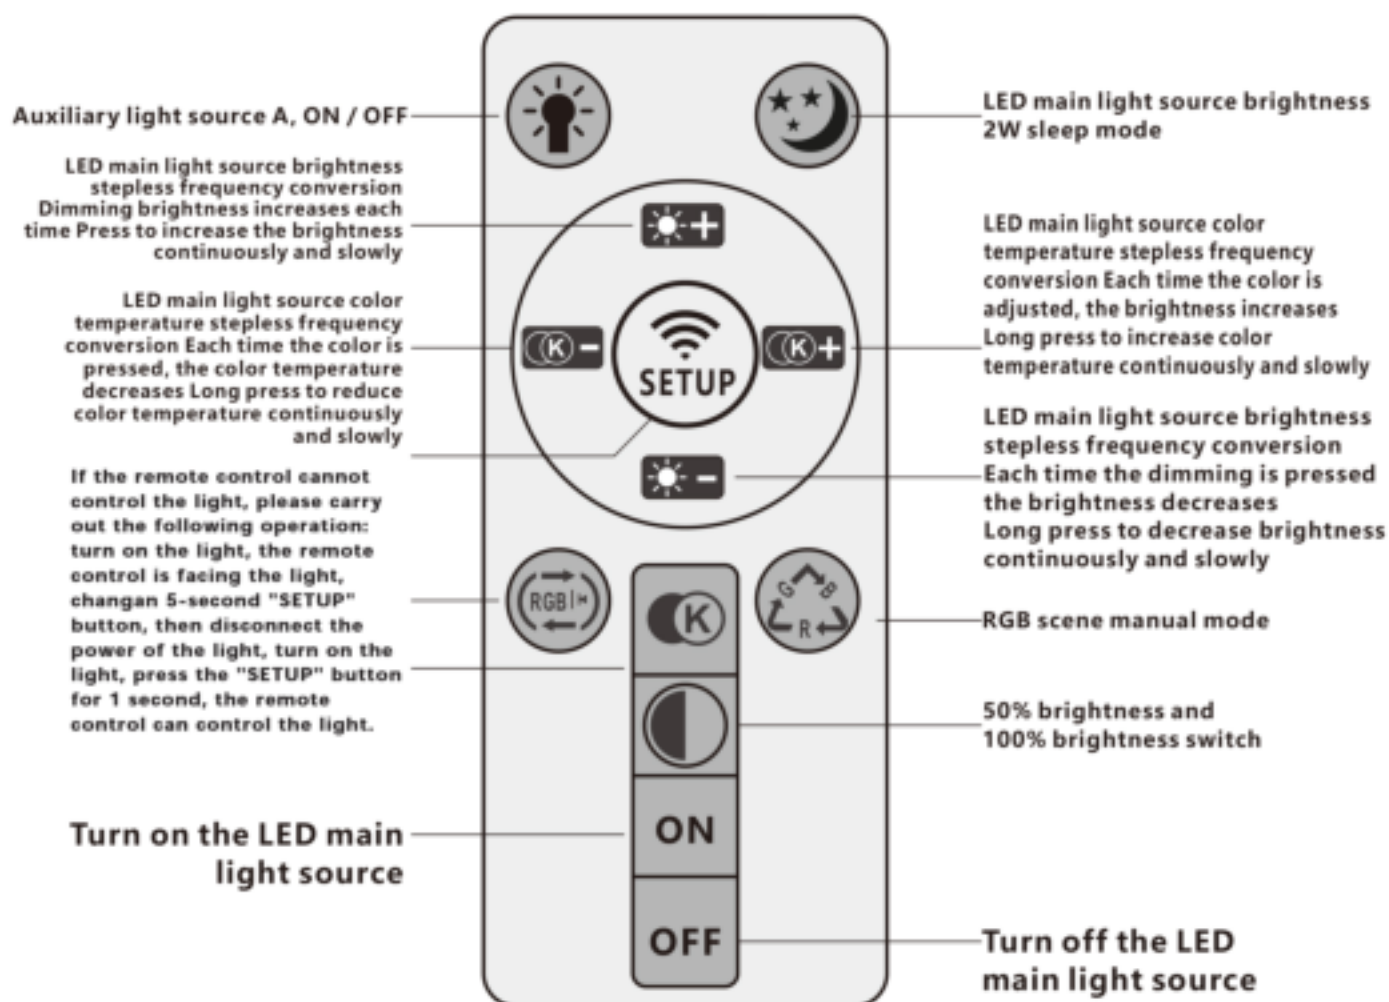
OFF

Multi-group control code matching method

Turn on the power and press the "System Settings" button to complete the master control code
(press the button within 5 seconds of turning on the power)

Use 2 AAA batteries