



Reiniging en onderhoud van de snijkop

Snijkop reiniging

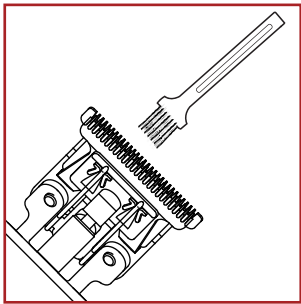

Maak het mes schoon met de reinigingsborstel.

Snijkop onderhoud


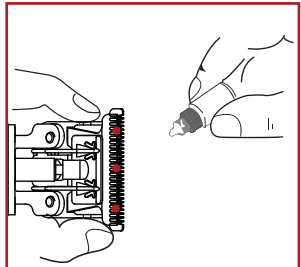


Onderhoud het mes voor en na gebruik. Doe dit door olie te druppelen op de rode punten (zie afbeelding).

Opmerkingen



1. Haal het product niet uit elkaar.
2. Er mag geen water worden gebruikt om de tondeuse te wassen. Blijf uit de buurt van vocht tijdens het gebruik.

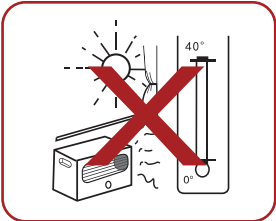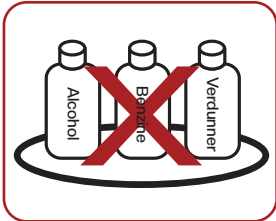

3. Gebruik alleen een natte doek of neutrale vloeibare zeep om het product schoon te maken.
4. Laad het product nooit op boven een warmtebron van 40 °C of in een omgeving onder de 0 °C.

* Lichte verwarming tijdens gebruik of tijdens het opladen is normaal.
* Nadat de levensduur van de batterij is verstreken, kan je de batterij in een speciale prullenbak gooien. Gooi de batterij nooit in een willekeurige container.

Garantie

Product naam	VRL Tondeuse		Garantie periode	
Product model	T9		Binnen een jaar sinds de aankoop datum	
Aankoop datum	Van:	(D/M/J)	Tot:	(D/M/J)

Koper	Ad.		Naam	
			Tel.	
Verkoper	Ad.		Naam	
			Tel.	

Productspecificaties

- Dit product is vervaardigd door het nauwkeurige kwaliteitsbeheer en inspectieproces.
- In het geval van een storing, kan de klant contact opnemen met de verkoper.
- In de volgende gevallen wordt géén gratis service verleend:
 - Bij schade die veroorzaakt wordt door transformatie en die niet wordt herkent door de fabrikant.
 - Bij schade die veroorzaakt wordt door een fout, onopzettelijk gebruik of een ongeval.
 - Bij schade die veroorzaakt wordt door natuurrampen en abnormale elektrische spanning.
 - Bij eventuele schade die veroorzaakt wordt door het niet naleven van de opmerkingen, zoals vermeld in deze handleiding.
- Deze garantiekaart is het enige garantiebewijs.


VRL



TONDEUSE
HANDLEIDING



Componenten

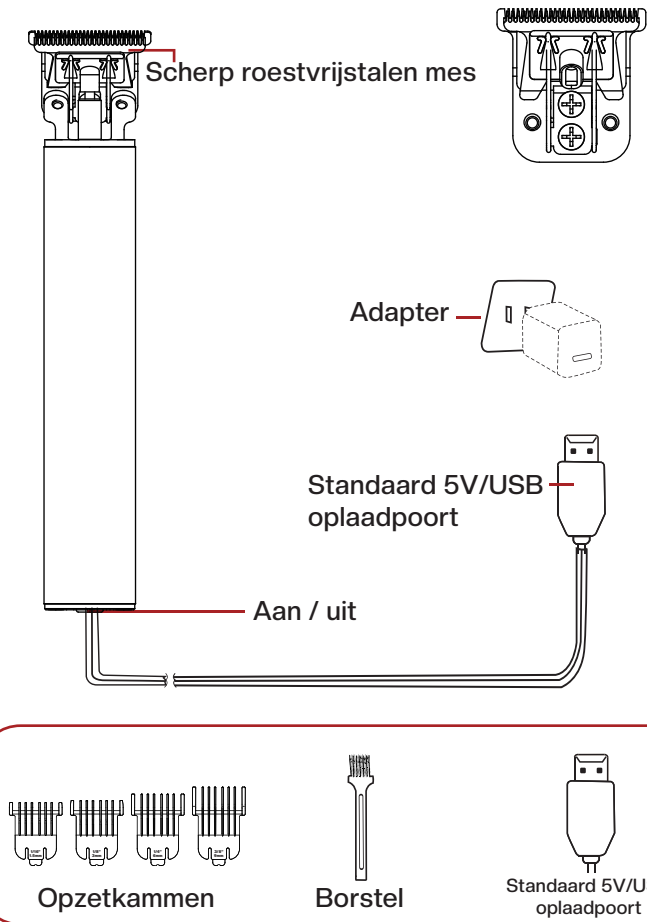

Parameters

Professionele tondeuse	Motor	Stroom spanning: 3V
	Batterij	Batterij type: 800mA
		Opladetid: 2h
		Gebruiksduur: 2h
	Laden	USB aansluiten met adapter 5V - 1000mA
		Stroom: 10W

Opladen




- Steek de oplader in de onderkant van de tondeuse en maak verbinding met de stroom om op te laden.
- De indicator voor vloeibare kristallen licht op, om aan te geven dat de tondeuse begint met opladen.

Opmerking: wanneer de stroom wordt ingeschakeld na het opladen, licht de indicator op om aan te geven dat de oplader is omgekeerd of verdraaid en vervangen moet worden.

Functie met vaste lengte

- Om de lengte van een knipbeurt te bepalen.
- Om de juiste limietkam te selecteren.

A: Bevat 4 lengtes (1,5, 3, 6 en 9 mm) om de haarlengte onder controle te houden.

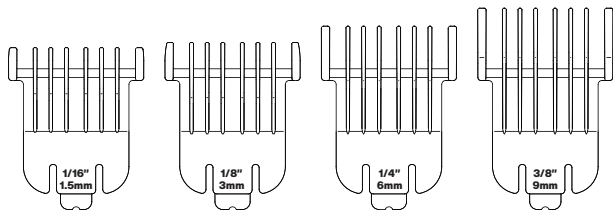

Monteer de limietkam:

- Lijn de limietkam uit met de mesrand.
- Duw de limietkam licht naar voren om deze te monteren.



Demonteer de limietkam:

- Trek hard aan de limietkam om deze te ontkoppelen.


Mes verwijderen en installeren

Mes verwijderen




- Verwijder de snijkop met een schroevendraaier.
- Om te voorkomen dat het mes valt, gebruik je andere hand om het mes vast te houden.

Mes installeren

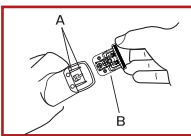

- De bladveer is uitgelijnd met de veer (A) op de meskop (B). Plaats de twee vaste schroeven en houd deze ingedrukt.

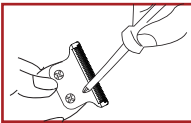


- Draai de schroef vast met een schroevendraaier om ervoor te zorgen dat de meskop er niet af valt.

Demonteer de meskop niet zonder enige vaardigheid.


Blade removal & installation

Blade removal

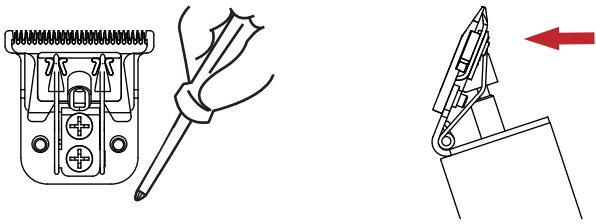


- Remove the cutter head with a screwdriver.
- To prevent the knife from falling, use antoher hand to hold it.

Blade installation

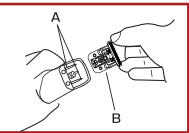

- The blade spring is aligned with spring
- A on the knife head B. Put in two fixed screws and hold it down.

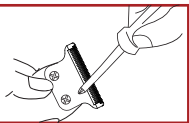


- Tighten the screw with a screwdriver to ensure the head will not fall off.

Do not disassemble the knife head without any skill.


Cutter cleaning and maintenance

Taper blade cleaning

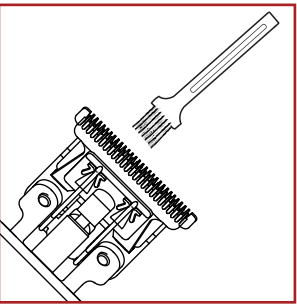


Clean up the blade with the cleaning brush.

Taper blade maintenance


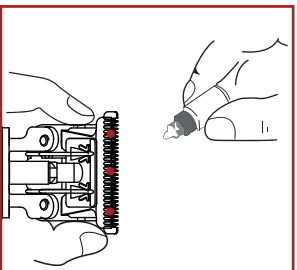


Maintain the blade before and after use by dripping some oil on the red points shown on the picture.

Notes

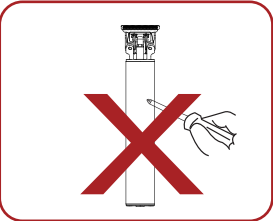

- Please do not disassemble the product.
- Water must not be used to wash the clipper. Keep away from dampness while operating.

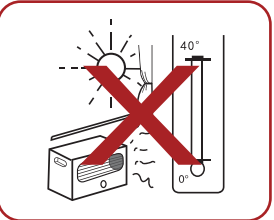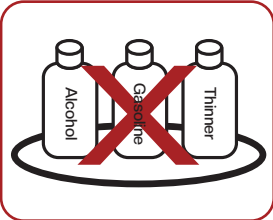

- Only use a little wet cloth or neutral liquid soap to clean the product.
- Never charge the product above 40 °C heat source or below 0 °C environment.

* Slight heating during use or during charging is normal.
* After the battery life expires, take the battery out and throw the batter away in a recycling bin. Never throw the battery in random containers.

Warranty

Product name	VRL Hair Trimmer	Warranty period
Product model	T9	Within one year since the purchase date
Purchase date	From: (M/D/Y)	To: (M/D/Y)

Customer	Add.		Name	
			Tel.	
Retailer	Add.		Name	
			Tel.	

Product assurances

- This product has been manufactured through the precise quality management and inspection process.
- In case of any failure, the customer may send the product to the retailer.
- Free service shall not be provided in either case:
 - Any damage caused by transformation that is not recognized by the manufacturer.
 - Any damage casued by mistake, inadvertent use or accident.
 - Any damage caused by natural disaster and abnormal voltage.
 - Any damage caused by non-compliance with the notes as stated in this operating manual.
- This warranty card shall be the only proof of warraty.

VRL

VRL Shop
Postbus 4189
3130 KD Vlaardingen
Nederland
www.vrl-shop.nl



CE RoHS





MADE IN CHINA



SCAN ME

Components

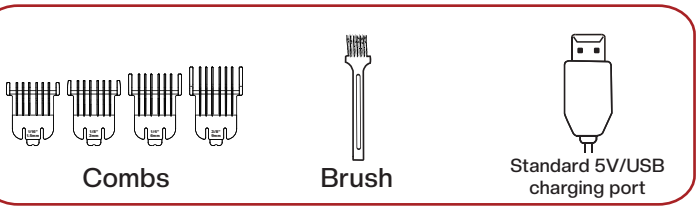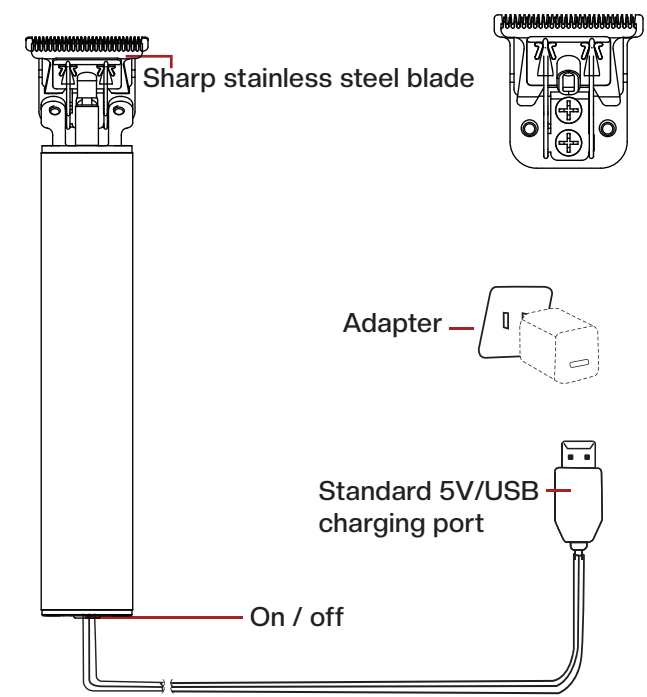

Parameters

Professional hair clipper	Motor	Operating volatge: 3V
	Battery	Battery type: 800mAh
		Charging time: 2h
	Charge	Operating time: 2h
		USB connect with adapter 5V - 1000mA
		Power: 10W

Charging




- Insert the charger into the tail of the clipper, connect to power to start charging.
- The liquid crystal indicator lights up, indicating that it starts charging.

Note: when the power is switched on after charging, the indicator lights up to indicate that the charging head is reversed or drawn to be repalced immediately.

Fixed-lenght function

- To determine the length of a haircut.
- To select the appropriate limit comb.

A: Features 4 lengths (1.5, 3, 6 and 9mm) adjusment to control hair length.

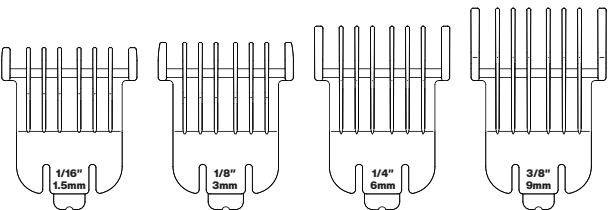

Mount the limit comb:

- Align the limit comb with the blade edge.
- Slightly forward push to mount it.

Disassemble the limit comb:
1. Just pull hard on the limit comb.

