

CLEANING & STORAGE

- ◆ The lifespan of the product will be greatly increased with proper maintenance and care.
- ◆ Please always clean the product before and after each use. Wash the silicone part with water and anti-bacterial soap, rinse with clean water and pat it dry with a lint-free towel. Do not use containing alcohol, petrol or acetone.
- ◆ Store the product in a dust-free place. Avoid direct sunlight and do not expose it to extreme heat.


WARRANTY SERVICE

- ◆ This product has a period of 1 year warranty after the date of original purchase. If you discover a defect, please notify us during the warranty period, we will give you a free replacement.
- ◆ Please keep your original purchase receipt for the duration of the warranty period.
- ◆ Any attempt to open and take part the product will void the warranty.

PRODUCT MANUAL



PRODUCT INSTRUCTION

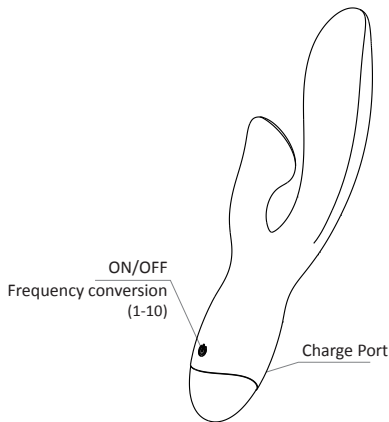

OPERATING INSTRUCTIONS

MODE :

- ◆ Turn ON: Press vibrator  button for about 1.5s to activate and start vibrating; single-click vibrator  button to change the frequency (1-10).
- ◆ Turn OFF: Press vibrator  button for about 1.5s to turn off your product.

SPECIFICATION

- ◆ Size: 206*75*37mm
- ◆ Material: FDA silicone, ABS
- ◆ Function: 10 frequencies, dual motors
- ◆ Battery: USB Rechargeable 3.7V Li-ion Battery
- ◆ Charging/Using time: 50mins/60mins
- ◆ Waterproof level: IPX6
- ◆ Weight: 136g

DIRECTION For CHARGE

- ◆ Insert the USB end of the power cable into a USB port, and connect the needle end of the power cable to charging DC port.
- ◆ The LED lights flicker and indicate that the product is charging, when it is fully charged, the light will stop blinking.
- ◆ DO NOT use the product while charging.
- ◆ Each charging process lasts for about 50 minutes, please remember to cut off the power supply after charging full.
- ◆ Please try to use the original power cable only and excellent quality USB adapter.

USING

In order to improve the comfortable using of this product, we recommend that you use lubricant with the product. We also suggest that do not use a silicone-based lubricant as it could make the product permanently damaged. A water-based lubricant is always the safest option.


REINIGING & OPSLAG

- ◆ De levensduur van het product wordt aanzienlijk verlengd bij goed onderhoud en zorg.
- ◆ Reinig het product altijd voor en na elk gebruik. Was het siliconen gedeelte met water en antibacteriële zeep, spoel af met schoon water en dep het droog met een pluisvrije doek. Gebruik geen producten die alcohol, benzine of aceton bevatten.
- ◆ Bewaar het product op een stofvrije plek. Vermijd direct zonlicht en stel het product niet bloot aan extreme hitte.

GARANTIESERVICE


- ◆ Dit product heeft een garantieperiode van 1 jaar vanaf de datum van oorspronkelijke aankoop. Als u een defect ontdekt, neem dan tijdens de garantieperiode contact met ons op; wij zullen u gratis een vervangend product toesturen.
- ◆ Bewaar alstublieft het originele aankoopbewijs gedurende de gehele garantieperiode.
- ◆ Elke poging om het product te openen of uit elkaar te halen, maakt de garantie ongeldig.

PRODUCT MANUAL

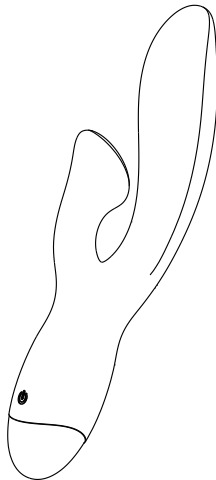

NEDERLANDS

PRODUCT INSTRUCTIES

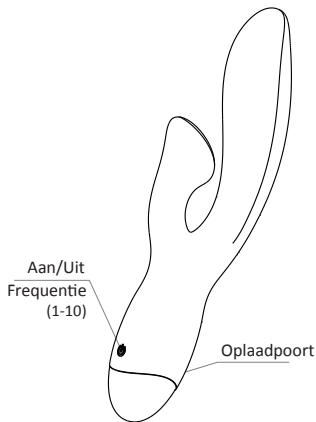

BEDIENINGSINSTRUCTIES

MODUS:

- ◆ **Aan:** Houd de  knop 1,5 seconde ingedrukt om het product te activeren en de vibratie te starten.
Wisselen: Druk eenmaal op de  knop om te schakelen tussen de 10 vibratiefrequenties.
- ◆ **Uit:** Houd de  knop opnieuw 1,5 seconde ingedrukt om het product uit te schakelen.

SPECIFICATIES

- ◆ Afmetingen: 206 × 75 × 37 mm
- ◆ Materiaal: FDA-siliconen, ABS
- ◆ Functie: 10 frequenties, dubbele motor
- ◆ Batterij: USB-oplaadbare 3.7V Li-ion batterij
- ◆ Laadtijd / gebruiksduur: 50 min / 60 min
- ◆ Waterdichtheidsniveau: IPX6
- ◆ Gewicht: 136 g

OPLAADINSTRUCTIES

- ◆ Steek de USB-kant van de voedingskabel in een USB-poort en sluit de naaldconnector aan op de DC-oplaadpoort.
- ◆ Het LED-lampje knippert om aan te geven dat het product wordt opgeladen; wanneer het volledig is opgeladen, stopt het lampje met knipperen.
- ◆ Gebruik het product niet tijdens het opladen.
- ◆ Elke oplaadcyclus duurt ongeveer 50 minuten. Schakel de stroomtoevoer uit zodra het product volledig is opgeladen.
- ◆ Gebruik bij voorkeur alleen de originele voedingskabel en een USB-adapter van hoge kwaliteit.

GEBRUIK

Om het gebruik van dit product prettiger te maken, raden wij aan een glijmiddel te gebruiken. Gebruik geen siliconen glijmiddel, omdat dit permanente schade aan het product kan veroorzaken. Een glijmiddel op waterbasis is altijd de veiligste optie