


Operation instruction of Hygrothermograph

Product Illustration

Product illustration

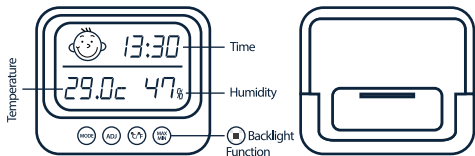

Product Specifications

Measurement Range of Temperature: $-50^{\circ}\text{C} \sim 70^{\circ}\text{C}$ ($-58^{\circ}\text{F} \sim 158^{\circ}\text{F}$)

Accuracy of Temperature measurement: $\pm 1^{\circ}\text{C}$ (1.8°F)

Temperature resolution: 0.1°C (0.2°F)

Measurement range of humidity: 10% RH - 99% RH

Measurement accuracy of Humidity: $\pm 5\%$ RH

Humidity Resolution: 1%

Battery using: AAA1.5V * 2

The Basic Functions

Temperature / Humidity display	Function of Daily alarm
$^{\circ}\text{C} / ^{\circ}\text{F}$ temperature switching display	Function of Calendar display
12 / 24-hour clock	Function of Maximum / Minimum memorization
Function of Hourly timekeeping	Backlight Function (for )


Disposal

For environmental reasons, do not dispose of the device in the household waste at the end of its life. Dispose of the unit at a suitable collection/recycling point. Dispose of the device in accordance with EC Directive 2012/19/EU and 2006/66/EU -WEEE. Contact local authorities for more information.




The Method of Operation


1. Follow the instructions on the back of the machine to open the battery port, insert two AAA battery, and then replace the battery switch. The machine is ready for using.

2. Function of keys: [MODE] Switches the clock and alarm clock displays mode / sets the current time, alarm clock, 12 or 24-hour clock, date; [ADJ] adjusts the value of the set item; [MAX / MIN] switches the function of maximum and minimum values (only for ); [$^{\circ}\text{C} / ^{\circ}\text{F}$] Switches the temperature unit to be displayed in $^{\circ}\text{C}$ (Celsius) $^{\circ}\text{F}$ (Fahrenheit).

3. In the initial state, press and hold [MODE] for 2 seconds. The minutes of the current time will start to flash. Press [ADJ] to adjust the minutes. Press [MODE] continuously to set the "clock" and "12/24" respectively.

4. In the current clock mode (two points for per second between the clock and the minute flashes) Press [MODE] once to switch to the alarm mode (the two points do not flash which between the clock and the minute), then press [ADJ] You can switch function of "Alarm Clock" (:) / hourly alarm (); then press [MODE] for 2 seconds. It can set the time of alarm, press [ADJ] to adjust the number of it.

5. In the mode of alarm, if there is no operation for one minute, it will automatically return to the current clock. At this time, press [ADJ] once to switch to the calendar display. After 3 seconds, it will automatically return to the current clock.


6. Press Backlight key to turn on the light, the light will last 5 seconds to turn off (only for )



Gebruiksaanwijzing van de hygrometer

Product illustratie

Product illustratie

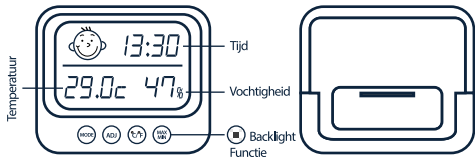

Product Specificaties

Meetbereik temperatuur: -50 °C ~ 70 °C (-58 °F ~ 158 °F)

Nauwkeurigheid van temperatuurmeting: ± 1 °C (1.8 °F)

Temperatuurreolutie: 0.1 °C (0.2 °F)

Meetbereik vochtigheid: 10% RH - 99% RH

Nauwkeurigheid van vochtigheidsmeting: ± 5% RH

Vochtighheidsresolutie: 1%

Batterijen: AAA1.5V * 2

De basisfuncties




Temperatuur / vochtigheid weergave	Functie dagelijks alarm
°C / °F temperatuurschakel display	Functie kalenderweergave
12 / 24-uurs klok	Functie maximum / minimum memoriseren
Functie uurlijkse tijdopname	Functie achtergrondverlichting (voor )

Disposal

Om milieuredenen mag het apparaat aan het einde van zijn levensduur niet bij het huisvuil worden gedaan. Voer het apparaat af bij een geschikt inzamel-/recyclingpunt. Voer het apparaat af in overeenstemming met de EG-richtlijn 2012/19/EU en 2006/66/EU - WEEE. Neem contact op met de lokale autoriteiten voor meer informatie.



The Method of Operation

1. Volg de instructies op de achterkant van het apparaat om de batterijpoort te openen, doe er twee AAA batterijen in en plaats de batterijschakelaar terug. De machine is klaar voor gebruik.
2. Functie van de toetsen: [MODE] Schakelt tussen de klok- en wekkerdisplays / stelt de huidige tijd, wekker, 12- of 24-uursklok, datum in; [ADJ] past de waarde van het ingestelde item aan; [MAX / MIN] schakelt tussen de functie van maximum- en minimumwaarden (alleen voor ); [°C / °F] Schakelt de temperatuureenheid die moet worden weergegeven in °C (Celsius) °F (Fahrenheit).
3. In de begintoestand houdt u [MODE] 2 seconden lang ingedrukt. De minuten van de huidige tijd zullen beginnen te knippen. Druk op [ADJ] om de minuten in te stellen. Druk voortdurend op [MODE] om de "klok" en "12/24" in te stellen.
4. In de huidige klokmodus (twee punten voor elke seconde tussen de klok en de minuten knippen) Druk eenmaal op [MODE] om naar de wekkerstand over te schakelen (de twee punten tussen de klok en de minuten knippen niet), druk dan op [ADJ] U kunt de functie van "Wekker (.)" / uurlijks alarm (); en druk dan [MODE] gedurende 2 seconden in. U kunt de tijd van het alarm instellen, druk op [ADJ] om het aantal in te stellen.
5. In de wekkerstand zal, als er gedurende een minuut geen bediening is, automatisch worden teruggekeerd naar de huidige klok. Druk op dat moment eenmaal op [ADJ] om over te schakelen naar de kalenderweergave. Na 3 seconden, zal het automatisch terugkeren naar de huidige klok.
6. Druk op de Backlight-toets om het licht aan te zetten, het licht gaat 5 seconden uit (alleen voor )

