

Operating instructions

IMPORTANT SAFEGUARDS
When using an electrical appliance, basic precautions should always be followed, including the points listed below. Read all instructions and safeguards before using the product.
DANGER
To reduce the risk of injury or death by electric shock:
1. Do not reach for an appliance that has fallen into water. Unplug immediately from the outlet.
2. Do not use while bathing in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place it in or drop into water or other liquid.
4. Always unplug this appliance from the electrical outlet immediately after using.
5. Always unplug this appliance before changing.

WARNING
To reduce the risk of burns, fire, electric shock or injury to persons:
• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
• Warning: Keep the Product Dry. It is essential to PREVENT electrical equipment from coming into contact with water or other liquids.
• Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
• If the power cord is damaged, it must be replaced by the manufacturer or authorized agent or similarly qualified person in order to avoid fire.
• Keep the cord away from heated surfaces.
• Do not use outdoors or operate where aerosol (spray) cans are being used or where oxygen is being administered.
• Do not use this appliance with damaged or broken power cords with wires missing from the blades, as injury may occur.

UK appliance - If a 13 amp (BS 1363) plug is used, a 3 amp fuse must be fitted, or if any other type of plug is used, a 5 amp fuse must be fitted either in the plug or adapter at the distribution board. Replacement fuses should be ASTA approved to BS 1362. Fuse cover must be fitted when changing the fuse. If fuse cover is lost, the plug must be replaced until a replacement is obtained. Information for obtaining the correct fuse carrier is marked on the carrier itself and in the bottom of the fuse cavity on the plug. These are obtained from Wahl UK. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

SAVE THESE INSTRUCTIONS

This clipper has been designed for household use.

A- Bottom blade D- Switch
B- Blade slide (on Multi-cut (MC) clipper only) E- Top blade
C- Taper lever (on Multi-cut (MC) clipper only) F- Power screw

CLIPPER MAINTENANCE

Your Wahl clipper blades are dull and aligned before leaving our factory; however, it is possible for blades to get bumped out of alignment. Blades must be realigned if they have been removed for cleaning or replacement. To determine if realignment is necessary, compare your clipper blades with diagram G.
1 If your clipper has a taper lever, position the taper lever in the close cut position. (H)
2 End of top blade teeth should be approximately 1/32" (41 mm) back from bottom blade. This is important so that the clipper does not cut too close or allow the moving cutter to touch the skin.
3 Extreme left-hand tooth of top blade must be covering or to the left of the first small tooth of bottom blade.
4 Extreme right-hand tooth of top blade must be touching the big tooth on the bottom blade.

If blade alignment is incorrect, add a few drops of Wahl Clipper Oil to the blades, turn clipper "On" for a few moments, turn "Off" and unplug. Loosen screws slightly and adjust (steps 2-4 listed above). Tighten screws after blades are aligned. Other than Wahl blades this clipper has no user serviceable parts. (diagram I)

OL (L)

The blades of your new clipper should be oiled every few haircuts. Simply place a few drops of Wahl Clipper Oil on the teeth of the blades. Use only the Wahl Clipper Oil included in the pack. Due to the high speed of your Wahl clipper, the correct type of oil must be used. Do not use hair oil, grease or any oil mixed with kerosene or any solvent, as the solvent will evaporate and leave the thick, sticky coating on the blades. Wahl Clipper Oil is a very thin, natural oil which will not evaporate and will not slow down the blades.

POWER SCREW (Not found on all models of Wahl Clippers)

If your clipper has a power screw, it has been adjusted for peak efficiency before leaving the factory. However, if voltage in your home is low, you may need to readjust it.
To adjust power, use the plastic brush, a screwdriver or a thin coin to turn power screw in a clockwise direction until the blade is just above the coil, slowing down the blades. Turn, slowly, turn power screw out (counterclockwise), just until slow stops. This is the maximum power setting. (K)

CORD

The cord should not be used to pull the clipper. Since freedom of movement needs to be maintained, care should be used to keep the cord unobstructed and unobstructed. When stored, the cord should be coiled and the unit placed in a protective carrying case.
If your clipper has a polarized plug: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug fits in a polarized outlet only one way. In the event the plug does not fit in the outlet, reverse the plug in the event it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug (I provided).

TAPER LEVER (Not found on all models of Wahl Clippers)

If your clipper has an adjustable taper lever, it is conveniently located near your thumb (if you're right-handed), so it can easily be adjusted while the clipper is in your hand.

The taper lever allows versatility to your clipper by allowing you to gradually change the closeness of your cut without a guide comb. When the taper lever is in the uppermost position, the blades will give you the closest cut and leave the hair very short. (diagram H) Pushing the lever downward gradually increases the cutting length. In its lowest position, the taper lever will leave the hair approximately the same length as the 1/8" cutting guide. (diagram H)

The taper lever will extend the use of your blades since a different cutting edge is used in each setting. In addition, it will allow heavy cutting on the blades, which will help you remove hair that has become wedged between the blades without removing the blades. While the clipper is running, rapidly move the lever from "close cut" to "longer cut" a couple of times. Doing this each time you've finished using your clipper will help keep the blades clear of cut hair. If your clipper is not cutting and this does not help, your cutting blades may be dull. Either replace them or return them to Wahl for sharpening.

WAHL'S GUIDE TO FOOLPROOF HOME HAIRCUTTING Before you cut your hair

- 1 Your clipper should be clean, oiled and in perfect working condition.
- 2 If your kit includes a plastic cape, place it around the neck, tying the straps and overlapping the cape portion to prevent hair from falling down into the collar. If no cape is provided, a towel will do nicely.
- 3 Position the clipper where you will be cutting and be sure that the top of his head is about even with your eyes.
- 4 After combing the hair to remove any tangles, hold the clipper in a relaxed, comfortable grip, with the napeplate under the palm near your index finger. This grip will help you maintain control, accurate cutting length.

NOTE: To attach guide combs, hold comb with the teeth up. Snap guide comb attachment firmly to the bottom of the clipper blade. (J)

Depends on the kit you purchased your kit may include all of the following:

Adjustable Guide Combs - allowing multiple cutting lengths in the convenience of a single comb.
Individual Black Guide Combs - providing predetermined lengths indicated on each guide comb.
Individual Color Guide Combs - providing predetermined lengths indicated on each guide comb. Combs are also color coded for quick cutting length reference.

Using adjustable guide comb has five settings from 1/8" to 5/8" (3mm to 16mm) in 1/8" (3mm) increments. (M)
Large adjustable guide comb has five settings from 1/4" to 1-1/4" (9mm to 14mm) in 1/8" (3mm) increments. (N)

Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have the settings and indicators that show position number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:
To use individual guide combs, hold the comb with the teeth up. When doing so, slowly move the comb forward and backward as all is needed to bring back that well-groomed look. Additional accessories not listed here may be available from your dealer or can be ordered directly from Wahl.

INDIVIDUAL GUIDE COMB LISTING:

- | | |
|--------------------------------|-------------------------------|
| • 3mm - Black/Dark Blue | • 6mm - Black/Purple |
| • 10mm - Black/Dark Blue | • 13mm - Black/Orange-Pink |
| • 16mm - Black/Light Blue | • 25mm - Black/White |
| • 22mm - Black/Green | • 28mm - Black/Light Blue |
| • 31mm - Black/White | • 35mm - Black only |
| • Right Ear Taper - Black only | • Left Ear Taper - Black only |

CUTTING

FOR MEDIUM TO LONG CUTS: (P)
The first time you cut the hair, cut only a small amount until you become accustomed to how long each guide comb leaves the hair. Always start by placing the largest guide comb on the clipper, then use shorter combs (or settings - if using adjustable guide combs) if a shorter length is desired. When doing so, slowly move the comb forward and backward as all is needed to bring back that well-groomed look. When doing so, slowly move the comb forward and backward as all is needed to bring back that well-groomed look.

FOR LONGER HAIR ON TOP:
By not using a guide comb, a longer cut can be achieved. Use either a barber comb or a regular comb and lift the hair on top of the head, cutting over the comb, or grasp the hair between the fingers and cut to desired length. Continue this procedure from the front to the back of the head, gradually cutting the hair shorter by reducing the space between the comb and the hair. Comb frequently to remove trimmed hair and check for uneven strands.

TAPERING AROUND EARS:
USING LEFT AND RIGHT EAR GUIDE COMBS
The Left and Right Ear Guide Combs have a built in taper ranging from 1/8" to 1/2". By following the outline of the ear with the appropriate comb you achieve a gradual taper and blending without having to use multiple combs.

TO TAPER THE AREA BORDERING THE LEAF:
Attach the Left Ear Taper comb to your clipper and stand facing the left ear. While holding the clipper at a slight angle against the head, position the guide comb just back of the left ear at the hairline. Then move the clipper in a small tight circle pattern around the left ear toward the front of the head. Depending on the length of hair you are working with you may need to take several small strokes as you proceed around the ear. When doing so, slowly move the clipper upward and outward being mindful of the ear. This will allow you to guide hair into the comb towards the clipper blades.

TO TAPER THE AREA BORDERING THE SIDEBURNS:
Attach the Right Ear Guide Comb to your clipper. Stand facing the right ear and repeat the process described above for the left ear.

Finish by outlining the area around the ear as described in the following section.

OUTLINING: (Q)
No attachments are needed. (On a multi-cut clipper, push the taper lever up to the "close-cut" position.) Comb hair into desired style. Stand behind the ear and the comb as shown at left. Hold clipper with corner edge of blade against the hairline. Slowly follow the desired outline of the hair over, around and behind the ears. For defining sideburns and the back of the neck, hold the clipper upside down against the skin at the desired length and move down. Comb hair and check that sides are even. Check for uneven spots throughout the haircut.

CREW CUTS AND SHORT CUTS: (R)
Starting with the longest guide comb, cut from the back of the neck to the crown. Hold the guide comb flat against the head and slowly move the clipper through the hair, as shown.


Use the same procedure from the lower side to the upper side of the head, as shown. Then cut the hair against the direction in which it grows. From the front to the crown, and even on the cut with long hair.

To give a "flat-top" look, the hair on top of the head must be cut over the top of the guide comb, rather than using the guide comb.

Use closer-cutting guide combs to "taper" the hair down to the neckline, as desired. Comb hair and check for uneven spots. Outline sideburns and neckline as previously described.

The five basic areas illustrated on the Wahl haircutting guide your "road map" to easy, do-it-yourself haircutting. For tips on the latest trends and fashions in haircutting, visit us at www.wahl.com.

If you reside within the EU and your unit is marked with the following symbol, do not discard in trash. This product is to be returned to the appropriate municipal waste collection facility for recycling and recovery.

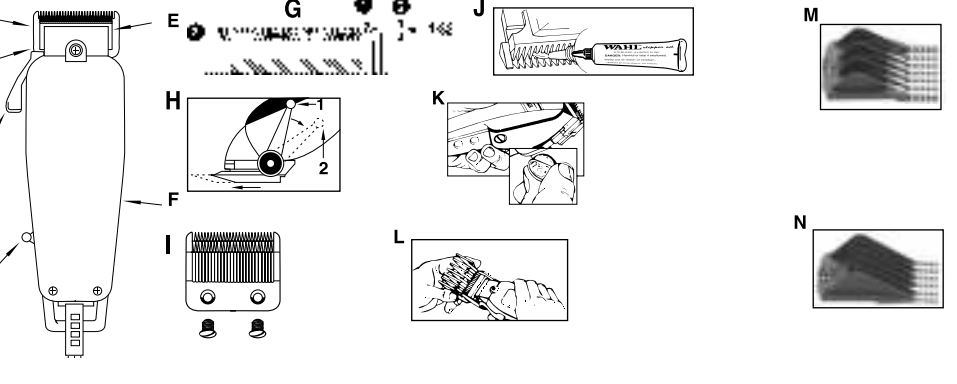

Gebrauchsanweisung

WICHTIGE SICHERHEITSHINWEISE
Beim Gebrauch eines Elektrogerätes sollten immer grundlegende Vorsichtsmaßnahmen beachtet werden, insbesondere die im Folgenden aufgeführten. Lesen Sie die Anweisungen und Sicherheitsbeisehe sorgfältig durch.
GEFÄHR
Vermeiden Sie das Risiko einer Verletzung oder des Todes durch einen elektrischen Schlag.
1. Greifen Sie nicht nach innen ins Wasser gefüllte Gefäß. Ziehen Sie sofort den Stecker aus der Steckdose.
2. Verwenden Sie das Gerät nicht in der Badewanne oder unter der Dusche.
3. Platzieren Sie das Gerät niemals auf dem Boden. Von dem es in ein Wasserbecken oder eine Wanne fallen oder gezogen werden könnte. Tauchen Sie das Gerät nicht in Wasser oder andere Flüssigkeiten und lassen Sie es nicht dort hängen fallen.
4. Ziehen Sie, außer wenn Sie das Gerät aufladen, nach jedem Gebrauch den Stecker des Gerätes aus der Steckdose.
5. Ziehen Sie vor dem Reinigen des Gerätes immer den Stecker aus der Steckdose.

WARNING
To Reduce the Risk of Personal Injuries, Burns, Strains and Sprains:
• Dieses Gerät kann von Jugendlichen ab 8 Jahren und Personen mit eingeschränkter physischer, sensorischer oder geistiger Fähigkeiten oder Personen mit mangelnder Erfahrung und Wissen verwendet werden, solange dies unter Beaufsichtigung erfolgt oder sie die notwendige Anleitung zum sicheren Umgang mit diesem Gerät erhalten haben und über die damit verbundenen Risiken aufgeklärt werden. Das Gerät darf von Kindern nicht als Spielzeug verwendet werden. Reinigung und Wartung dürfen von Kindern nur unter angemessener Aufsicht durchgeführt werden.
• Warnung: Halten Sie das Gerät trocken. Es ist äußerst wichtig zu VERHINDERN, dass Elektrogeräte in Kontakt mit Wasser oder anderen Flüssigkeiten kommen.
• Verwenden Sie dieses Gerät ausschließlich zum vorgesehenen und in dieser Gebrauchsanweisung beschriebenen Zweck. Verwenden Sie ausschließlich vom Hersteller empfohlene Zubehör.
• Schneiden Sie ausschließlich das Kabel des Ladegerätes in die entsprechende Buchse des Gerätes an.
• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Sauerstoff verwendet werden.
• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an. Um das Gerät vom Stromnetz zu trennen, schalten Sie sie zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

HEBEN SIE DIESE ANLEITUNG SORGFÄLTIG AUF

Diese Haarschneidemaschine ist für den privaten Gebrauch bestimmt.

A- Untere Klinge D- Schalter
B- Klingeneinrichtung (nur bei Multi-Cut-Haarschneidemaschinen (MC)) E- Obere Klinge
C- Schnittlänge regler (nur bei Multi-Cut-Haarschneidemaschinen (MC)) F- Schraube für Leistungswahl

WARTUNG DER HAARSCHNEIDEMASCHINE

Die Klengen der Haarschneidemaschine von Wahl sind wasserkalt gelüftet und ausgerichtet worden. Dennoch kann es vorkommen, dass die Ausrichtung der Klengen nicht mehr stimmt und eine Neuausrichtung erforderlich wird. Klengen müssen neu ausgerichtet werden, wenn sie für Reinigungs- oder Austausch Zwecke entnommen worden sind. Um festzustellen, ob eine Neuausrichtung erforderlich ist, vergleichen Sie die Klengen Ihrer Haarschneidemaschine mit dieser Zeichnung (G)

1 Wenn die Haarschneidemaschine mit einem Schnittlänge regler ausgerüstet ist, stellen Sie diesen in die Schließposition ein.
2 Das Ende der oberen Klinge sollte etwa 0,64 mm (1/21") hinter der unteren Klinge zurückstecken. (Dies ist wichtig, damit die Haarschneidemaschine nicht zu kurz schneidet und damit der Schneidesitz bei der Bewegung nicht überlastet wird.)
3 Der äußerste linke Zahn der oberen Klinge muss den ersten kleinen Zahn der unteren Klinge abdecken oder übersteigen.
4 Der äußerste rechte Zahn der oberen Klinge muss den ersten großen Zahn der unteren Klinge berühren.

Wenn die Klengen falsch ausgerichtet sind, geben Sie einige Tropfen Wahl Clipper Öl auf die Klengen, stellen Sie die Haarschneidemaschine wieder ein und versuchen Sie es ein weiteres Mal. Wenn Sie die Klengen nicht richtig ausgerichtet werden können, wenden Sie sich an einen Kundendienst. Wenn Sie die Klengen austauschen, haben. Mit Ausnahme der Klengen verfügt diese Haarschneidemaschine über keine vom Benutzer zu wartenden Teile. (I)

OL (L)
Die blades of your new clipper should be oiled every few haircuts. Simply place a few drops of Wahl Clipper Oil on the teeth of the blades. Use only the Wahl Clipper Oil included in the pack. Due to the high speed of your Wahl clipper, the correct type of oil must be used. Do not use hair oil, grease or any oil mixed with kerosene or any solvent, as the solvent will evaporate and leave the thick, sticky coating on the blades. Wahl Clipper Oil is a very thin, natural oil which will not evaporate and will not slow down the blades.

POWER SCREW (Not found on all models of Wahl Clippers)

If your clipper has a power screw, it has been adjusted for peak efficiency before leaving the factory. However, if voltage in your home is low, you may need to readjust it.
To adjust power, use the plastic brush, a screwdriver or a thin coin to turn power screw in a clockwise direction until the blade is just above the coil, slowing down the blades. Turn, slowly, turn power screw out (counterclockwise), just until slow stops. This is the maximum power setting. (K)

CORD

The cord should not be used to pull the clipper. Since freedom of movement needs to be maintained, care should be used to keep the cord unobstructed and unobstructed. When stored, the cord should be coiled and the unit placed in a protective carrying case.
If your clipper has a polarized plug: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug fits in a polarized outlet only one way. In the event the plug does not fit in the outlet, reverse the plug in the event it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug (I provided).

TAPER LEVER (Not found on all models of Wahl Clippers)

If your clipper has an adjustable taper lever, it is conveniently located near your thumb (if you're right-handed), so it can easily be adjusted while the clipper is in your hand.

The taper lever allows versatility to your clipper by allowing you to gradually change the closeness of your cut without a guide comb. When the taper lever is in the uppermost position, the blades will give you the closest cut and leave the hair very short. (diagram H) Pushing the lever downward gradually increases the cutting length. In its lowest position, the taper lever will leave the hair approximately the same length as the 1/8" cutting guide. (diagram H)

The taper lever will extend the use of your blades since a different cutting edge is used in each setting. In addition, it will allow heavy cutting on the blades, which will help you remove hair that has become wedged between the blades without removing the blades. While the clipper is running, rapidly move the lever from "close cut" to "longer cut" a couple of times. Doing this each time you've finished using your clipper will help keep the blades clear of cut hair. If your clipper is not cutting and this does not help, your cutting blades may be dull. Either replace them or return them to Wahl for sharpening.

WAHL'S GUIDE TO FOOLPROOF HOME HAIRCUTTING Before you cut your hair

- 1 Your clipper should be clean, oiled and in perfect working condition.
- 2 If your kit includes a plastic cape, place it around the neck, tying the straps and overlapping the cape portion to prevent hair from falling down into the collar. If no cape is provided, a towel will do nicely.
- 3 Position the clipper where you will be cutting and be sure that the top of his head is about even with your eyes.
- 4 After combing the hair to remove any tangles, hold the clipper in a relaxed, comfortable grip, with the napeplate under the palm near your index finger. This grip will help you maintain control, accurate cutting length.

NOTE: To attach guide combs, hold comb with the teeth up. Snap guide comb attachment firmly to the bottom of the clipper blade. (J)

Depends on the kit you purchased your kit may include all of the following:

Adjustable Guide Combs - allowing multiple cutting lengths in the convenience of a single comb.
Individual Black Guide Combs - providing predetermined lengths indicated on each guide comb.
Individual Color Guide Combs - providing predetermined lengths indicated on each guide comb. Combs are also color coded for quick cutting length reference.

Using adjustable guide comb has five settings from 1/8" to 5/8" (3mm to 16mm) in 1/8" (3mm) increments. (M)
Large adjustable guide comb has five settings from 1/4" to 1-1/4" (9mm to 14mm) in 1/8" (3mm) increments. (N)

Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have the settings and indicators that show position number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:
To use individual guide combs, hold the comb with the teeth up. When doing so, slowly move the comb forward and backward as all is needed to bring back that well-groomed look. Additional accessories not listed here may be available from your dealer or can be ordered directly from Wahl.

INDIVIDUAL GUIDE COMB LISTING:

- | | |
|--------------------------------|-------------------------------|
| • 3mm - Black/Dark Blue | • 6mm - Black/Purple |
| • 10mm - Black/Dark Blue | • 13mm - Black/Orange-Pink |
| • 16mm - Black/Light Blue | • 25mm - Black/White |
| • 22mm - Black/Green | • 28mm - Black/Light Blue |
| • 31mm - Black/White | • 35mm - Black only |
| • Right Ear Taper - Black only | • Left Ear Taper - Black only |

WAHL-RATGEBER FÜR KINDERLEICHES HAARSCHNEIDEN

1 Die Haarschneidemaschine sollte sauber, geölt und in einwandfreiem Betriebszustand sein.
2 Wenn Ihr Haarschneide-Set einen Frisuranker umfasst, binden Sie diesen um den Hals, ziehen Sie die Kordelle fest, und schließen Sie die Umkleekabine an den Krugen fallen können. Wenn kein Umkleekabinen vorhanden ist, erfüllt ein Handtuch diesen Zweck.
3 Lassen Sie die Person, die frisuriert werden soll, auf einem Stuhl Platz nehmen, dass sich die Kopfoberseite der Person etwa in Höhe Ihrer Augenlinie befindet, und benutzen Sie danach kurze Kämmen oder Entschneidkämmen vorhanden ist, erfüllt ein Handtuch diesen Zweck.

4 Nach dem Ausbürsten der Haare und dem Lösen aller Knoten halten Sie die Haarschneidemaschine entspannt und bequem in der Hand, wobei sich das Typenschild unter der Handfläche in der Nähe Ihres Zeigefingers befindet.
5 Nach dem Anhängen des Haarschneidemaschine so halten, dass die Handfläche nach unten zeigt und präzise kontrollieren.

HINWEIS: Zum Aufstecken von Führungskämmen halten Sie den Kamm mit der Zahnrseite nach oben. Schieben Sie den Kamm über den Hals und ziehen Sie die Klammern an der Oberseite des Kammes an.
Der Haarschneide-Set kann in jedem Modell die folgenden Kämmen enthalten:
• Verstellbare Führungskämme - ermöglichen verschiedene Schnittlängen mit einem einzigen Kamm.
• Individuelle farbige Führungskämme - ermöglichen verschiedene Schnittlängen mit einem einzigen Kamm.
• Individuelle farbige Führungskämme - mit vorgegebenen Längen, die auf jedem Führungskamm angegeben sind Kämmen sind auch farbcodiert, sodass eine rasche Identifizierung Ihrer Schnittlänge möglich ist.

VERWENDEBARE VERSTELLBARE FÜHRUNGSKÄMME:
Der kleinste verstellbare Führungskamm hat einen Bereich von 3 mm bis 16 mm (1/8" bis 5/8") in Stufen von jeweils 3 mm eingestellt werden. (M)
Der große verstellbare Führungskamm hat einen Bereich von 19 mm bis 32 mm (3/4" bis 1-1/4") in Stufen von jeweils 3 mm eingestellt werden. (N)

Mit Hilfe Ihres Daumens können Sie die Schnittlänge verändern, indem Sie einfach den verstellbaren Regler in die nächste Stellung schieben. Beide verstellbare Führungskämme sind mit Klickstopps und Stufenanzeiger sowie einer Anzeige der Schnittlänge in Millimetern ausgestattet, sodass sich die jeweilige Einstellung rasch und einfach ablesen lässt.

Der große verstellbare Führungskamm hat den Bereich vom Ohr bis zur Kopfoberseite verwendet werden. (O)
Der kleine verstellbare Führungskamm hat den Bereich vom Nacken bis zu den Ohren verwendet werden. (O2)

VERWENDEBARE INDIVIDUELLE FARBIGE FÜHRUNGSKÄMME:
Einige Sets enthalten nicht sämtliche Wahl-Führungskämme. Alle Kämmen (oder weiteren Zubehör, das hier nicht aufgelistet ist) können über den Händler bezogen oder direkt bei Wahl bestellt werden.

LISTE DER INDIVIDUELLEN FÜHRUNGSKÄMME:

- | | |
|------------------------------|------------------------------|
| • 3 mm - schwarz/weiß | • 6 mm - schwarz/weiß |
| • 10 mm - schwarz/dunkelblau | • 13 mm - schwarz/orangerosa |
| • 16 mm - schwarz/weiß | • 25 mm - schwarz/weiß |
| • 22 mm - schwarz/weiß | • 28 mm - schwarz/weiß |
| • 31 mm - schwarz/weiß | • 35 mm - nur schwarz |

• Haarschnitt im Bereich des rechten Ohrs - nur schwarz • Haarschnitt im Bereich des linken Ohrs - nur schwarz

SCHNEIDEN DIE HAARE AN DER KOPFOBERSEITE:
FÜR MITTELANGE HAARE BIS LANGES HAAR: (P)
Schneiden Sie beim ersten Mal nur wenige Haare ab, um erst einmal ein Gefühl dafür zu entwickeln, wie kurz der Schnitt bei Verwendung der verschiedenen Führungskämme sein wird. Stecken Sie immer zuerst den größten Führungskamm auf die Klinge und schneiden Sie dann die Haare ab. Wenn Sie einen kleineren Führungskamm, falls Sie verstellbare Führungskämme benutzen, wenn ein kürzerer Haarschnitt gewünscht wird.
Denken Sie daran, dass Haare nach einem professionellen Haarschnitt gleichmäßig wachsen und dass schon ein wenig Unterschied im Nacken und an den Seiten reichen kann, um wieder eine gleichmäßige Frisur zu erzielen. Wenn ein gleichmäßiger Schnitt zu erhalten, lassen Sie die Haarschneidemaschine locker durch das Haar gleiten. Fordern Sie den Schnitt nicht durch ein beschleunigtes Vorgehen.

1 Klammern Sie die Haare mit einem Kamm in der gewünschten Richtung ab.
2 Stecken Sie den größten Führungskamm auf die Haarschneidemaschine auf, und schneiden Sie zunächst die Seiten von unten nach oben. Führen Sie die Haarschneidemaschine sanft in das Haar, wobei die Zähne des Führungskammes nach oben zeigen und die Klinge leicht über das Haar gleitet. Halten Sie die Haarschneidemaschine langsam an und, schneiden Sie dann außen durch das Haar. Schneiden Sie dabei jeweils nur kleine Haarmengen ab.
Wiederholen Sie den Vorgang an den Seiten und am Hinterkopf.

Wenn ein kürzerer Haarschnitt gewünscht wird, wählen Sie entweder einen kürzeren Führungskamm (oder eine verstellbare Führungskämme) oder einen kürzeren Haarschnitt, oder setzen Sie die Maschine mit etwas mehr Druck an, und führen Sie die Maschine mit dem veränderten Aufsatz nicht so weit vom Kopf weg, wie gewünscht erforderlich. Es empfiehlt sich daher, die Haare bei den ersten Haarschnitten lieber etwas länger zu lassen, als sie zu kurz zu schneiden. Wenn Sie die Maschine in einem kleineren Halbkreis um das linke Ohr herum in Richtung der Vorderseite des Kopfes an, und schneiden Sie diese Frisur ein.
Wenden Sie den Vorgang an den Seiten und am Hinterkopf.

FÜR MITTELANGE HAAR AN DER KOPFOBERSEITE:
Wenn kein Führungskamm verwendet wird, lässt sich ein längerer Schnitt erzielen. Verwenden Sie einen Führungskamm oder einen gewöhnlichen Kamm.
Benutzen Sie Führungskämme für kürzere Schnitte, um das Haar bis zur Nackenlinie hinein flach zu schneiden. Kämmen Sie das Haar über dem Kamm ab, oder nehmen Sie das Haar zwischen Ihre Finger, um es auf die gewünschte Länge zu stützen. Setzen Sie diesen Vorgang von der Stirnseite bis zum Hinterkopf fort, und schneiden Sie das Haar stufenweise kürzer. Indem Sie die Maschine zwischen dem Haar und dem Hinterkopf langsam an, und schneiden Sie das Haar häufig aus, um abgeschneitene Haare zu entfernen und ungleichmäßige Strähnen zu entdecken.

SCHNEIDEN DER HAARE IM OHRRBEICH:
SCHNEIDEN DER HAARE AN DER OHREN- UND NACHEN-RECHEN-SEITE:
Die Führungskämme für den linken und rechten Ohrbereich (Left/Right Ear Guide Combs) haben einen Einstellbereich zwischen 3 bis 13 mm (1/8" bis 1/2"). Wenn Sie den Ohrbereich mit dem richtigen Kamm wählen, erzielen Sie einen abgestuften Schnitt und einen perfekten Übergang, ohne dabei verschiedene Kämmen benutzen zu müssen.

SCHNEIDEN DER HAARE AM RAND DES LINDEN OHRS:
Schneiden Sie den Kamm in den Haarschnitt im Bereich des linken Ohrs (Left Ear Taper Comb) auf die Haarschneidemaschine auf, und stellen Sie sich so hin, dass Sie auf das linke Ohr schauen. Halten Sie die Haarschneidemaschine leicht angewinkelt an den Kopf, und setzen Sie den Führungskamm direkt hinter dem linken Ohr am Haarschnitt an. Benutzen Sie die Haarschneidemaschine in einem kleinen Halbkreis um das linke Ohr herum in Richtung der Vorderseite des Kopfes. Je nach Länge der Haare, die Sie schneiden, müssen Sie unter Umständen mehrere kleine Ansätze vornehmen, wenn Sie in der Umgebung des Ohrs schneiden. Bewegen Sie das linke Ohr nach außen, um die Haare zu schneiden, und schneiden Sie auch das Ohr. So frisieren Sie das Haar in den Kamm und weiter in Richtung des Schneidesitzes.

HINWEIS: Sie können auch die Kordelkette schneiden, indem Sie diesen Bereich einziehen, wenn Sie die Haarschneidemaschine mit dem Frisuranker verwenden.
SCHNEIDEN DER HAARE AM RAND DES RECHTEN OHRS:
Stecken Sie den Führungskamm für den Haarschnitt im Bereich des rechten Ohrs (Right Ear Guide Comb) auf die Haarschneidemaschine auf, stellen Sie sich so hin, dass Sie auf das rechte Ohr schauen, und wiederholen Sie den Vorgang für das linke Ohr beschrieben Vorgang.
Schließen Sie die Frisur ab, indem Sie den Bereich um das Ohr herum wie im folgenden Absatz beschrieben kontrollieren.

KONTURIEREN: (Q)
Keine Zusätze sind erforderlich. (Schieben Sie bei Verwendung einer Multi-Cut-Haarschneidemaschine den Schnittlänge regler in die Stellung für „Kurz-Schnitt“.) Bringen Sie das Haar durch den Kamm in die gewünschte Form. Beginnen Sie, wie links gezeigt, zwischen dem Ohr und den Kamm. Halten Sie die Haarschneidemaschine mit der Ecke an der Haar- oder Ohren-Frisur um Kopf verriegeln. Ein gewünschter Kontur des Haares im Bereich der Ohren. Zum Konturieren der Kordelkette und des Haaransatzes am Nacken, halten Sie die Haarschneidemaschine mit der Oberseite nach unten in der gewünschten Länge auf die Haut, und bewegen Sie die Maschine nach unten.
Kämmen Sie das Haar, und prüfen Sie, ob die Seiten gleichmäßig sind. Untersuchen Sie die gesamte Frisur auf ungleichmäßige Stellen.

IGEL-SCHNITTE UND KURZ-SCHNITTE (R)
Beginnen Sie mit dem längsten Führungskamm, und schneiden Sie Ihre vom Nacken abwärts in die gewünschte Form des Kopfes. Halten Sie den Führungskamm flach gegen den Kopf, und führen Sie die Haarschneidemaschine nach oben und nach hinten, bis das Haar über dem Kamm ist.
Wenden Sie das Haar gleich den Strähnen, wie gezeigt, von der Unterseite bis zur Kopfoberseite des Kopfes an. Schneiden Sie das Haar gegen die Vordreh, und arbeiten Sie sich dabei von der Vorderseite bis zur Kopfoberseite und dann weiter entlang der Seiten.

Um eine „Flat-Top-Frisur“ zu erzielen, müssen die Haare auf der Kopfoberseite über einem flachen Kamm und nicht mit Hilfe eines Führungskammes abgeschnitten werden.
Benutzen Sie Führungskämme für kürzere Schnitte, um das Haar bis zur Nackenlinie hinein flach zu schneiden. Kämmen Sie das Haar, und prüfen Sie, ob ungleichmäßige Stellen vorhanden sind. Konturieren Sie Kordelkette und Nackenlinie wie zuvor beschrieben.
Wenn ein kürzerer Haarschnitt gewünscht wird, wählen Sie einen kürzeren Führungskamm (oder eine verstellbare Führungskämme) oder einen kürzeren Haarschnitt, oder setzen Sie die Maschine mit etwas mehr Druck an, und führen Sie die Maschine mit dem veränderten Aufsatz nicht so weit vom Kopf weg, wie gewünscht erforderlich. Es empfiehlt sich daher, die Haare bei den ersten Haarschnitten lieber etwas länger zu lassen, als sie zu kurz zu schneiden. Wenn Sie die Maschine in einem kleineren Halbkreis um das linke Ohr herum in Richtung der Vorderseite des Kopfes an, und schneiden Sie diese Frisur ein.
Wenden Sie den Vorgang an den Seiten und am Hinterkopf gewünscht wird, beachten Sie das Haar häufig aus, um abgeschneitene Haare zu entfernen und ungleichmäßige Strähnen zu entdecken.

REGELUNG FÜR EU-STAATEN:

