

EN

NL

FR


ES

IT

user manual

PROJECTOR LIGHTS

projectie lamp • projecteur lumineux • proyector de luz • luce proiettore

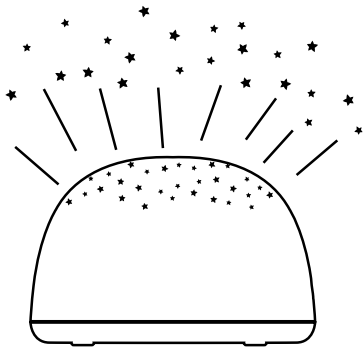

LITTLE
LOVELY
company™

© ALLC 2019



ALLC B.V.
Postbus 5151 • 9700 GD Groningen • The Netherlands
service@alittlelovelycompany.nl

WWW.ALITTLELOVELYCOMPANY.COM



EN

Before using the product, read this user manual carefully.

projector light (LED)

This eco-friendly light is child safe and made from BPA- and phthalate free ABS. Gives a soft glow when turned on.


In this box

1x projector light (LED) • 1x User manual

Technical specifications

Input voltage	4,5 V
Input current	52 mA
Power consumption	0,23 W
Battery	3 x AAA 1,5 V
Weight	± 150 gram

How to use: Light on/off/timer & batteries located under the light.

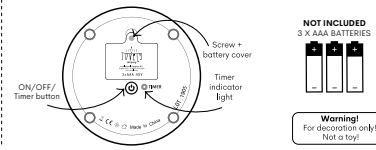

Placing the batteries To place batteries:

1. Use a screwdriver to remove the compartment cover screw.
2. Remove the battery compartment cover, place 3 AAA (LR03) batteries making sure they are fitted with their poles in the right direction (as indicated on the product).
3. Replace the cover and tighten the screw.

Timer ON

Press light button. Timer indicator light will turn on & light will turn off after 30 minutes.

Timer OFF mode

Hold light button down for 3 seconds. The timer indicator light will turn off.

TO CHANGE COLOUR			
Press switch	Colour	Timer*	Press & hold switch 3 seconds
X 1	rotating	On	Timer Off
X 2	orange	On	Timer Off
X 3	green	On	Timer Off
X 4	blue	On	Timer Off
X 5	Off		

*Timer indicator light on and light will fade after 30 minutes

Cleaning

Use a damp cloth and mild detergent to wipe the light. DO NOT use spray cleaners, running water, or submerge the product in water or any other liquid. During cleaning no moisture should come into contact with electrical components.

Servicing

Do not attempt to service this product by opening or removing covers. This may damage the product and expose you to hazards. In addition the warranty will expire.

Disposal

Dispose product according to local/state/national rules and regulations for the disposal of batteries or products containing them. Dispose of paper packaging according to local recycling guidelines.

Warranty

We offer a world-wide warranty of 2 years on manufacturing defects on our projector lights, under the condition that the light is used and installed according to the instructions the packaging and user manual. Make sure you retain a copy of your purchase invoice in case you need to make a warranty claim. The warranty does not cover defects resulting from improper usage, access by third parties or own attempts to make technical amendment to the product. Any warranty provided by ALLC does not negatively affect the mandatory legal rights and claims of the consumer vis-à-vis ALLC. A complete overview of our warranty terms and conditions and additional contact information can be found on www.alittlelovelycompany.com

Product safety certifications

EN71 part 1/2/3, CE-EMC, RoHS, FCC, EN62115, EN60825

! important safety instructions

When using electrical products all basic safety instructions should be followed. Read the following information and keep this user manual for further reference.

- Always replace the battery cover and the screws after replacing battery.
- This product has a choking and serious injury risk if the battery cover is not secured with tightening screws on the cover.
- Do not use in bathroom or place near water or other liquids.
- Use only the size and type of batteries specified.
- Be sure to follow the correct polarity when installing batteries.
- Different types of batteries or new and used batteries are not to be mixed.
- Empty batteries are to be removed.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Remove batteries if product will be stored for an extended period of time.
- Supply terminals are not to be short-circuited.
- Do not put batteries in a fire under any circumstance as they may explode.
- Battery acid leakage can cause personal injury and damage to the product and surrounding property.

- Keep batteries always away from fire and heat as they are a explosion hazard.
- If battery leakage occurs, thoroughly wash any affected skin, making sure to keep battery acid away from eyes, ears, nose and mouth.
- Immediately wash any clothing or other surface that comes into contact with the battery acid.
- Leaking batteries may make "popping" sounds.
- For indoor use only.
- Keep the packaging out of reach of children.
- This is a decorative item only. This is not a toy and should be used under adult supervision at all times.
- Keep electrical products out of reach of small children.
- Only use the attachments supplied by the manufacturer.
- In case of malfunction do not disassemble the LED module yourself.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire should be replaced.

QUESTION?
WE LOVE TO HELP
+31 (0)50 - 7370191

MADE IN
HUIZHOU,
CHINA

NL

Lees deze gebruiksaanwijzing zorgvuldig door voor gebruik van het product.

projectie lamp (LED)

Dit milieuvriendelijke lampje is kindveilig en gemaakt van BPA- en ftalaatvrij ABS. Geeft een zachte gloed wanneer je het aanzet.


In de doos

1x projectie lamp (LED) • 1x gebruiksaanwijzing

Technische specificaties

Input voltage	4,5 V
Invoerstrom	52 mA
Energieverbruik	0,23 W
Batterij	3 x AAA 1,5 V
Gewicht	± 150 gram

Om te gebruiken: Lamp aan/uit/timer knop & batterijen bevinden zich aan de onderzijde van het lampje.

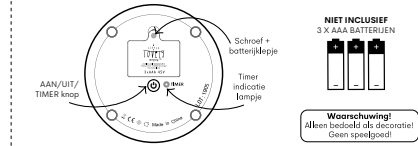

De batterijen plaatsen Om de batterijen te plaatsen:

1. Draai de schroef van het klepje met een schroevendraaier los.
2. Schroef het klepje van het batterijenvakje los, plaats 3 AAA (LR03) batterijen, met de polen naar de juiste kant (zoals op het product aangeduid wordt).
3. Plaats het klepje weer terug en draai de schroef volledig aan.

Timer aan functie

Druk op aan/uit knop. De timerfunctie staat automatisch aan. Timer-indicatielampje gaat branden en het lampje zal na 30 minuten uitgaan.

Timer uit

De timerfunctie is uit te schakelen door simpelweg de aan/uit knop 3 seconden ingedrukt te houden. Dan zal het lampje blijven branden tot je hem handmatig uit zet.

VERANDEREN VAN KLEUR			
Druk op schakelaar	Kleur	Timer*	Houd 3 seconden ingedrukt
X 1	roterend	On	Timer Uit
X 2	oranje	On	Timer Uit
X 3	groen	On	Timer Uit
X 4	blauw	On	Timer Uit
X 5	Off		

*Timerindicatielampje aan en het licht gaat na 30 minuten uit

Schoonmaken

Gebruik een vochtige doek en een mild reinigingsmiddel om het lampje schoon te maken. Gebruik geen spuitreinigingsmiddel of stromend water en dompel het product niet onder in water of enige andere vloeistof. Tijdens het reinigen mogen de elektrische onderdelen niet in contact komen met vocht.

! belangrijke veiligheidsinstructies

Volg bij het gebruik van elektrische producten altijd de standaard veiligheidsvoorschriften op. Lees de volgende informatie en bewaar deze gebruiksaanwijzing voor verdere referentie.

- Draai altijd de schroef van het batterijklepje aan na het plaatsen van batterijen.
- Dit product heeft een risico op verstikking en ernstig letsel als de batterijklep niet wordt vastgezet met schroeven.
- Gebruik niet in een badkamer of plek met water of andere vloeistoffen.
- Gebruik alleen de grootte en het type batterijen die zijn aangegeven.
- Zorg ervoor dat u de juiste polariteit volgt bij het installeren van de batterijen.
- Verschillende soorten batterijen of nieuwe en gebruikte batterijen mogen niet worden gecombineerd.
- Legge batterijen dienen uit de lamp te worden verwijderd.
- Niet-oplaadbare batterijen mogen niet worden opgeladen.
- Oplaadbare batterijen uit het speelgoed verwijderen voordat ze worden opgeladen.
- Als er uitneembare oplaadbare batterijen worden gebruikt, mogen die alleen onder toezicht van een volwassene worden opgeladen.
- Verwijder de batterijen als het product wordt opgeslagen voor langere tijd.
- Let erop dat de batterijen geen kortsluiting genereren.
- Houd batterijen altijd weg van vuur en warmtebronnen i.v.m. explosiegevaar.

- Lekkage van batterijen kan fysiek letsel veroorzaken en schade aan het product en omringende eigendommen.
- Bij lekkage van batterijen: was alle aangetaste huid grondig en laat het batterijzuur niet in contact komen met ogen, oren, neus en mond.
- Was onmiddellijk alle kledingstukken of andere oppervlaktes die in contact zijn gekomen met het batterijzuur.
- Lekkende batterijen kunnen 'plofende' geluiden maken.
- Alleen voor gebruik binnenshuis.
- Houd de verpakking buiten bereik van kinderen.
- Dit is slechts een decoratief object. Dit product is geen speelgoed en moet te allen tijde onder toezicht gebruikt worden.
- Houd elektrische producten buiten het bereik van kinderen. Dit is geen speelgoed.
- Gebruik alleen de door de fabrikant geleverde accessoires.
- In geval van storing, haal de LED module niet zelf uit elkaar.
- De lichtbron van deze lamp is niet vervangbaar; wanneer de lichtbron het einde van zijn levensduur bereikt, moet de gehele lamp vervangen worden.

VRAAG?
WE HELPEN GRAAG
+31 (0)50 - 7370191

GEMAAKT IN
HUIZHOU,
CHINA

