

1



**Wake Up Light**  
LO-WL001

**USER MANUAL**

Please read the user manual carefully before using the device

2

### SPECIFICATIES


**Productnaam:** Lichtwekker  
**Adapter-ingang:** 100-240V~50/60Hz 0.2A  
**Adapter-uitgang:** 5V-1A  
**Lichtwekker-ingang:** DC5V-1A  
**Verlichtingskracht:** 3W  
**Gebruikstemperatuur:** -10°C - 50°C  
**Netto gewicht van product:** 288g  
**Productgrootte:** Ø 106 X 151 mm

### BELANGRIJKE SYMBOOL DEFINITIES


T	Slaaplamp timer toets (Tik voor timer: schakel de lamp uit na 10, 30, 60 minuten).
⌚	Klok insteltoets (⌚) Alarm insteltoets
+	Toename van de tijd van klok en wekker Stijging volume wekker
-	Afname van de tijd van klok en wekker Daling volume wekker

3

### UITLEG KNOPPEN

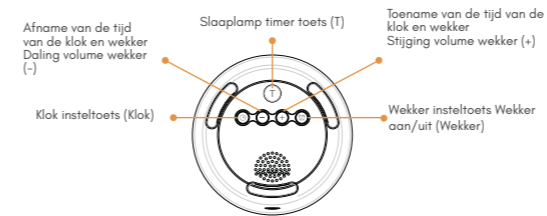


Smart toets: Licht beheren, wekker uit  
 Lang duwen om van warm wit licht te switchen naar kleurenmodus  
 Klik om de helderheid in te stellen van de lamp  
 Kies de krachtvolle kleur die je wil, lamp aan/uit

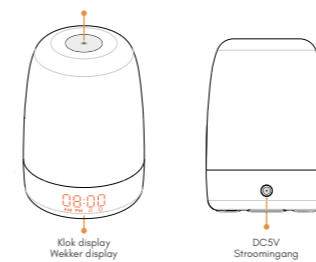


4

### UITLEG DISPLAY

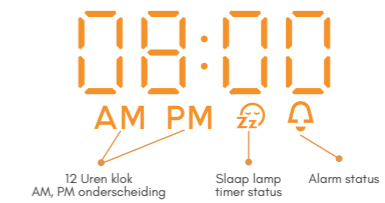

### STROOMAANSLUITING (AAN/UIT)

Dit apparaat zonder ingebouwde batterij. Wanneer u het apparaat gebruikt, gelieve de standaard stroomadapter die erbij zit te gebruiken, het apparaat gaat aan vanaf deze verbonden zijn.

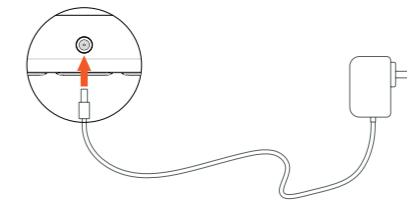

5

### KLOK INSTELLINGEN

Klik op de klok insteltoets (⌚) om de klok instellingen te activeren. Klik "+" en "-" toetsen om 12 of 24 uren te gebruiken. Bevestig door kort op de ⌚ toets te duwen.  
 Klik "+" en "-" om de uur instellingen te kiezen. Bevestig dit door op de ⌚ toets te duwen, klik dan "+" en "-" toetsen om de minuut instellingen te kiezen. Bevestig de minuten door op de ⌚ toets te duwen. (In 12 uren modus, kies ook voor AM of PM periode wanneer u de klok instelt).

### LICHTWEKKER INSTELLINGEN

Druk lang op de "T" toets om de lichtwekker instellingen te openen, op het display zullen de uren en de minuten rood knipperen. Kies de tijd met de "+" en "-" toetsen, en klik op "T" om te bevestigen. Nadat u de wekker bevestigd heeft, ga je onmiddellijk naar de keuze van het wekkergeluid. Er zijn er 7 verschillende. Klik de "+" en "-" toetsen om je favoriet te selecteren. Opties 1-5 zijn de modes met de alarmbel en de zonsopkomst licht simulatie, optie 6 is alleen een alarmbel zonder zonsopkomst simulatie en optie 7 is alleen de lichtsimulatie en geen alarmbel, nadat je je keuze hebt gemaakt druk je op "T". Het wekker icoon "⌚" komt dan tevoorschijn op het scherm en de wekker instellingen zijn afgewerkt. Als je de wekker wil uitzetten druk je op "T".

Wekker volume-instellingen: Klik of druk lang op de "+" en "-" toetsen om het volume van de wekker te wijzigen. Wanneer de wekker afgaat kan je op de smart toets bovenaan of eender welke andere knop drukken.

6

### ZONSOPGANG WEKKER GEBRUIK

Geniet van het wakker worden met de "zonsopkomst" modus en natuurgeluiden. De licht gaat automatisch 30 minuten voor het afgaan van de wekker aan, en gaat traag helderder worden. De helderheid zal op zijn maximum staan wanneer de wekker afgaat en dan worden ook de natuurgeluiden afgespeeld. U kan de bovenkant aanraken of eender welke andere toets om de wekker te stoppen. Als je het zelf niet uitzet gaat de wekker in snooze modus na 5 minuten, en dan gaat het geluid na 5 minuten weer aan. Nadat de wekker afgaan is kan je op eender welk moment de bovenkant of eender welke toets aanraken om de wekker uit te zetten.  
 Als je voor optie 7 koos (alleen licht), en de 5 minuten zijn afgelopen, zonder dat je de bovenkant aanraakte zal de lamp na 15 minuten uitgaan.

### SLAAP LAMP GEBRUIK

Klik de timer "T" toets om de slaaplamp aan te zetten. Het slaap icoon "⌚" komt dan tevoorschijn op het scherm. De slaaplamp heeft 3 timer opties: 10/30/60 minuten. De timer zal afgebeeld worden op het scherm als die aanstaat en zal uitgaan wanneer deze wordt uitgezet.  
 Nadat de slaaplamp aanstaat, gaat de lamp van helder naar donker, en gaat geleidelijk aan uit om je te helpen in slaap te vallen.

7

### TAFEL LAMP GEBRUIK

Wanneer het apparaat in de stroom zit, kan je de lamp met een simpele druk op het metalen paneel aanzetten, er zijn 3 intensiteiten, zacht, gemiddeld, helder en uit.  
 Lang op hetzelfde paneel drukken switch tussen de tafel lamp en de kleuren lamp en dus ook de overgaande kleurenmodus, als je terug druk gaat de lamp uit.

### VEILIGHEIDSVORSCHRIFTEN

- Voor je het product verbind aan de stroomadapter, check eerst of het voltage op de stroom adapter geschikt is voor het voltage in het stopcontact.
- Gebruik nooit een adapter die het voltage en de stroom dat het apparaat aankan overschrijd.
- Als er iets abnormaal gebeurd tijdens het gebruik van het product, stop meteen met het product te gebruiken en haal het uit de stroom.
- Laat het apparaat niet in contact komen met water, niet in een vochtige omgeving gebruiken (vb.: badkamer, zwembad...).
- Gelieve het product niet te gooien of te slaan om beschadiging te voorkomen.
- Aanbevolen het product in de normale temperatuur omstandigheden te gebruiken: -10°C - 50°C.
- Als je het apparaat een lange tijd niet gebruikt gelieve het uit te schakelen.

8

### GARANTIE

Dank u voor de aankoop van dit fijn ontworpen kwaliteitsproduct van ons.

Wij hebben onze uiterste zorg en aandacht besteed om u een product te leveren dat u een jaar lang probleemloos van dienst zal zijn. Onze producten zijn gedekt door de garantie van defecten in materiaal en vakmanschap en zal worden gerepareerd of vervangen door gelijke eenheden (naar onze keuze) zonder kosten, met inachtneming van de volgende bepalingen. Inspectie van de apparaten moet uitwijzen dat alle defecten zijn zoals gespecificeerd en dat defecte apparatuur niet onjuist en in strijd met onze instructies is gewijzigd, beschadigd door onjuiste netspanningen of polariteit, verhoging van de waarde van de zekering anders dan aanbevolen, beschadigd of op onzorgvuldige manier behandeld.

Wij zijn niet verantwoordelijk voor productschade veroorzaakt door verkeerd gebruik.



Has inspection Checker:QC01

1



2

**SPECIFICATIONS**


**Product Name:** Wake Up Light  
**Adapter Input:** 100-240V~50/60Hz 0.2A  
**Adapter Output:** 5V 1A  
**Wake Up Light Input:** DCSV 1A  
**Lighting Power:** 3W  
**Operating Temperature:** -10°C - 50°C  
**Product Net Weight:** 288g  
**Product Size:** Ø 106 X 151 mm

**KEY ICON DEFINITION**


T	Sleep lamp timer key (Tap for timer: Turn off the lamp at 10, 30, 60 minutes.)
⌚	Clock set key ⌚ Alarm clock set key
+	Time and alarm clock adjustment increase Alarm volume increase
-	Time and alarm clock adjustment decrease Alarm volume decrease

3

**BUTTON EXPLANATION**

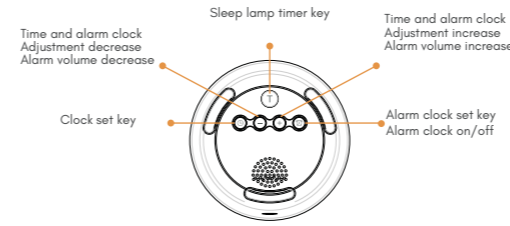


Smart touch key: Control light, alarm clock off  
 Long press to switch the warm white table lamp or colorful light mode  
 Tap for adjust the brightness of the table lamp, choose the colorful light you need, on/off lamp.

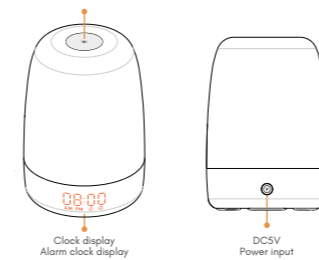


4

**DISPLAY FUNCTION EXPLANATION**

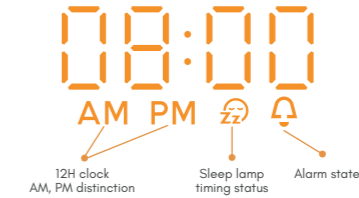

**POWER CONNECTION (ON/OFF)  
STROOMAANSLUITING (AAN/UIT)**

This machine without built-in battery.  
 When using the machine, please use the standard power adapter which included in the accessories, the power is turned on when they connected.

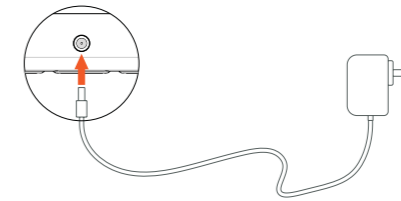

5

**CLOCK SETTING**

Short press the clock setting button "⌚" to activate clock settings. Press "+" and "-" keys to select 12H or 24H. Confirm the setting by short press the key "⌚".  
 Press "+" and "-" keys to choose the hours setting. Confirm the hours setting by short press the key "⌚", then press "+" and "-" keys to set the minutes setting. Confirm the minutes setting by short press the key "⌚". (In 12H mode, match the corresponding "AM" and "PM" time periods when setting the clock)

**WAKE UP LIGHT ALARM CLOCK SETTING**

Hold down the alarm clock key "⌚" to activate the alarm clock settings, the display will flash the hours or minutes digital symbol. Adjust alarm time with use of "+" and "-" keys, then press the key "⌚" to confirm. After setting the alarm time, it enters the selection for alarm sound directly. It has 7 options. Click the "+" and "-" button to select the favorite options. Options 1-5 are the mode with the alarm ring and sunrise simulation wake up light mode, option 6 only with alarm ring and no sunrise simulation wake up light mode, option 7 only with sunrise simulation wake up light and no alarm ring mode, after selecting press "⌚" to complete the setting. The alarm icon "⌚" is appeared on the screen and the alarm setting is completed and ready. If you want to turn off the alarm clock, please press the alarm clock key "⌚".  
 Alarm clock volume setting: Click or long press the "+" and "-" key to adjust the volume of the alarm ringtone under normal conditions.  
 When the alarm sounds, you can touch the top touch key or press any keys to stop the alarm.

6

**SUNRISE WAKE UP LIGHT ALARM CLOCK USE**

Enjoy the morning waking up in "sunrise" and nature sound. The light will turn on automatically before 30 minutes of alarm time, and slowly brighten up. The brightness will reach the max at the alarm time while the nature sound start to ring. You can touch the top touch key or press any keys to stop the alarm. If it is not turned off by hands, it will be entered into the snooze mode after 5 minutes. You can touch the top touch key or press any keys to stop the alarm at any time after the alarm ring.  
 If you choose the option 7 only light wake up mode and no alarm ring, when the alarm time is up, if without close the light by tap the top touch board, the light will be auto turned off after 15 minutes.

**SLEEP LAMP USE**

Click the timer sleep button "T" to activate the sleep light mode. The sleep light icon ⌚ will be light up on the display. The sleep light has three timer options: 10/30/60 minutes timer. the timer will be displayed on the screen when setted, and then click to turn off.  
 After the sleep light is turned on the light changes from bright to dark, and gradually goes out to help you fall sleep.

7

**TABLE LAMP APPLICATION**

When the machine connect the power, the table lamp with the touch of your finger on the metal panel, there are 3 level light, low, middle, high bright, off. Long touch the panel will convert between the table lamp and the colorful light, in the colorful light mode, you can touch and switch the color of the lantern and the streamer gradient color, and then touch to turn off the light.

**SAFETY REGULATIONS**

1. Before connecting the product to the power adapter, first check whether the voltage on the power adapter is suitable for the voltage in the socket.
2. Never use an adapter that exceeds the voltage and current that the device can handle.
3. If anything abnormal happens while using the product, stop using the product immediately and unplug it from the power.
4. Do not let the device come into contact with water, do not use it in a damp environment (eg: bathroom, swimming pool...).
5. Please do not throw or hit the product to avoid damage.
6. Recommended to use the product in normal temperature conditions: -10°C - 50°C.
7. If you do not use the device for a long time, please turn it off.

8

**WARRANTLY**

Thank you for purchasing this finely designed quality product from us.

We have taken the utmost care and attention to provide you with a product that will provide you with trouble free service for one year. Our products are warranted against defects in material and workmanship and will be repaired or replaced with equivalent units (at our discretion). choice) at no cost, subject to the following provisions. Inspection of the devices must determine that all defects are as specified and that defective equipment has not been modified incorrectly and contrary to our instructions, damaged by incorrect mains voltages or polarity, increase in value of the fuse other than recommended, damaged or handled carelessly.

We are not responsible for product damage caused by misuse.



Has inspection Checker:QC01