

Waterfilter ter vervanging van Brita Intenza

BELANGRIJK

De PX.1.4.12 is ontworpen om klanten een hoogwaardige vervangende cartridge te bieden voor gebruik met koffiemachines en andere apparaten die het Brita Intenza-filtersysteem gebruiken.

De installatie is afgestemd op die van de originele cartridge, maar er is geen 'aroma regeling' omdat de menging en stroom berekend zijn op basis van gemiddeld gebruik en verbruik tijdens het ontwerpen van het filter.


Bereid de Cartridge Voor

- (1) Was uw handen grondig voordat u het filter hanteert.
- (2) Haal de cartridge uit de polybag; let op dat deze verpakking recyclebaar is en bij het meeste huishoudelijk plastic afval kan worden weggegooid.
- (3) Gebruik een schone kom met koud vers water om de cartridge onder te dompelen en schud deze om alle gevangen lucht in het filter te laten ontsnappen.



Plaats de Cartridge


- (1) Terwijl de watertank nog aan de machine vastzit, verwijder de deksel en plaats de cartridge stevig in de houder.
- (2) Zorg ervoor dat de cartridge vastklikt. Zorg dat de cartridge stevig zit en dat er geen speling is, want een slecht aangebrachte cartridge zal de prestaties negatief beïnvloeden.

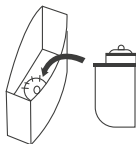

Spoelen en Voorbereiden

- (1) Verwijder de watertank van de koffiemachine.*
- (2) Vul de watertank met schoon, koud water.
- (3) Plaats de watertank terug in de koffiemachine.*
- (4) Activeer het filter door de cartridge-vervang procedure met spoelen op uw koffiemachine uit te voeren of, bij machines zonder deze functie, door de eerste volledige tank water als 'alleen heet water' door te laten lopen (zonder koffie te gebruiken).

*Raadpleeg indien nodig de instructies van de fabrikant.



Onderhoud

- (1) Inspecteer de watertank periodiek visueel om te zorgen dat de cartridge goed geplaatst blijft en dat de filtratie effectief werkt.
- (2) Vervang de cartridge elke 250 kopjes of elke 8 weken, afhankelijk van wat het eerst komt.

* Opmerking: Als de machine langer dan twee weken niet is gebruikt (zoals tijdens een vakantie), raden we aan de filter te vervangen voordat u het gebruik hervat.

Waarschuwing: Zorg altijd dat cartridges worden verwijderd voordat u het apparaat ontkalkt.

Coffee Machine Filter to Replace Brita Intenza

IMPORTANT

The PX.1.4.12 has been designed to offer customers a high-quality replacement cartridge for use with coffee machines and other appliances utilizing the Brita Intenza filtration system.

Installation is made to match that of the original cartridge, however, there is no 'aroma adjustment' as the blending and flow have been calculated based on average usage and consumption during the filter design.


Prepare the Cartridge

- (1) Thoroughly wash hands prior to handling the filter.
- (2) Remove the cartridge from the polybag, noting that this packaging is recyclable and can be disposed of with most household plastics.
- (3) Using a clean bowl filled with fresh cold water, submerge the cartridge and shake it to release any trapped air within the filter.



Fit the Cartridge

- (1) With the water tank still fitted to the machine, remove the lid and firmly seat the cartridge into the receiver.
- (2) Ensure the cartridge clicks into place. Ensure the cartridge is tightly fitted and there is no free-movement, as a poorly fitted cartridge will adversely affect its performance.

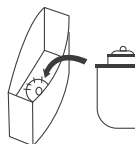

Flush and Prepare

- (1) Remove the water tank from the coffee machine.*
- (2) Fill the water tank with clean, cold water.
- (3) Refit the water tank to the coffee machine.*
- (4) Initiate the filter either by running the cartridge change-flush procedure on your coffee machine or, for machines without this facility, by running the first full tank of water through as 'hot water only' (without using coffee).

*Refer to manufacturer's instructions where necessary.



Maintenance

- (1) Visually inspect the water tank periodically to ensure the cartridge remains seated and filtration is working effectively.
- (2) Replace the cartridge every 250 cups or every 8 weeks, whichever comes first.

* Note: If the machine has not been used for a period of more than two weeks (such as going on holiday) we recommend replacing the filter prior to resuming usage.

Warning: Always ensure cartridges are removed before descaling the appliance.