


Ultrasoon Reiniger - Handleiding

PRODUCT PARAMETERS

Productnaam:	Ultrasoon Reiniger
Productmodel:	GXZ-UC01
Materiaal:	ABS / PC / Metaal / PCB
Ingangsspanning:	DC 12V
Voedingsadapter:	AC 100-240V ~ 50-60Hz 0,8A / 12V ~ 2000mA
Adaptervermogen:	24W
Gebruik van vermogen:	≥ 22W
Capaciteit watertank:	450 ml
Productafmetingen:	69 x 101 x 210 mm
Nettogewicht product:	450 g
Uitvoerende standaard:	GB4706.1-2005
Kwaliteitsinspectie:	Gekwalificeerd Product
Plaats van herkomst:	Shenzhen, China

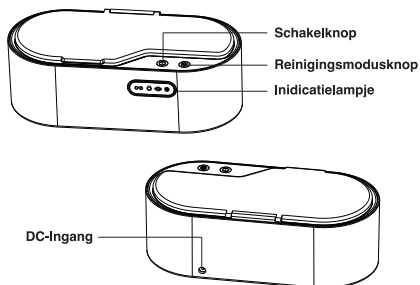

BEDIENINGSFUNCTIES

Schakelfunctie: Druk de schakelknop één keer in om de ultrasoon reiniger in de brillereinigingsmodus te starten. Druk de knop nogmaals in om deze uit te schakelen.

Reinigingsmodus: Gebruik deze knop om tussen de reinigingsmodi te schakelen. (1. Brillen, 2. Sieraden, 3. Horloges, 4. Overige).


Modus Werktijd: Het apparaat stopt automatisch wanneer de reinigingsmodus is voltooid, dit is voor: Brillen – 2 minuten, Sieraden – 3 minuten, Horloges – 5 minuten en voor Overige – 10 minuten.

Let op: Om oververhitting van interne componenten te voorkomen, beschikt het apparaat over een oververhittingsbeveiliging. Het indicatielampje knippert wanneer de beveiliging actief wordt. Wanneer deze uitgaat, is de reiniger weer klaar voor gebruik.

INDICATIELAMPJES

Bij het kiezen van een reinigingsmodus zal het corresponderende symbool op het apparaat oplichten, dit is voor: Brillen – een bril, Sieraden – een ring, Horloges – een horloge, Overige, een cirkel met golflijntjes.

GEBRUIK STAPPEN



Sluit de stroom aan met de meegeleverde voedingsadapter



Open het deksel en en plaats je item in de reiniger.



Voeg schoon water toe (let op: overschrijd de max-lijn niet)



Zet de reiniger aan om te starten en kies de gewenste modus.



Haal het schone item eruit en gooi het vuile water weg, maak de tank schoon.

VOORZORGSMAATREGELEN

- Voeg water toe voordat u het gebruikt. Het is verboden om het zonder water te gebruiken.
- Het is verboden sterk bijtende reinigingsmiddelen toe te voegen.
- Controleer of uw horloge waterdicht is voordat u het schoonmaakt.
- Het wordt afgeraden om kostbare sieraden zoals natuurlijke edelstenen en parels met barsten schoon te maken (als het echt nodig is, raadpleeg dan de verkoper of de reiniger gebruikt kan worden voor het schoonmaken).
- Spoel de reiniger bij het schoonmaken niet direct onder water om kortsluiting te voorkomen. Het wordt aanbevolen om het apparaat af te vegen met een zachte doek.
- Dit apparaat mag niet zonder toezicht worden gebruikt door kinderen jonger dan 6 jaar.

VERPAKKINGSINHOUD


1 Ultrasoon Reiniger, 1 Voedingsadapter, 1 Handleiding, 1 Certificaat

Teems
CARING BEYOND WORDS

Ultrasonic Cleaner - User Manual

PRODUCT PARAMETERS

Product Name:	Ultrasonic Cleaner
Product Model:	GXZ-UC01
Material:	ABS / PC / Metal / PCB
Input Voltage:	DC 12V
Power Adapter:	AC 100-240V ~ 50-60Hz 0,8A / 12V ~ 2000mA
Adapter Power:	24W
Using Power:	≥ 22W
Water Tank Capacity:	450ml
Product Size:	69 x 101 x 210 mm
Product Net Weight:	450g
Executive Standard:	GB4706.1-2005
Quality Inspection:	Qualified Product
Place of Origin:	Shenzhen, China

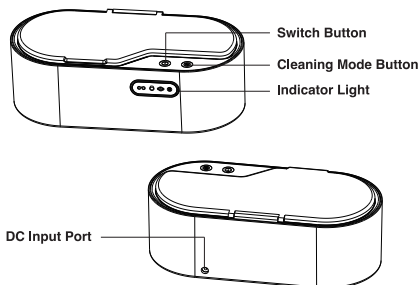

FUNCTION OPERATION

Switch Function: Touch the switch button once to start the Ultrasonic Cleaner in the glasses cleaning mode. Touch the button again to turn it off.

Cleaning Mode: Use this button to cycle between the cleaning modes. (1. Glasses, 2. Jewelry, 3. Watches, 4. Other).


Mode Working Time: The cleaner will automatically stop when the cleaning mode is finished this is for: Glasses – 2 minutes, Jewelry – 3 minutes, Watches – 5 minutes and for Other – 10 minutes.

Note: To prevent the overheating of internal components, the device has an overheating protection. The indicator light will blink when the protection becomes active. When the blinking stops and the indicator light turns off, the ultrasonic cleaner is ready to be used again.

INDICATOR LIGHTS

When choosing a cleaning mode, the corresponding symbol on the device will light up, this is for: Glasses – glasses, Jewelry – a ring, Watches – a watch, Other, a circle with wavy lines.

USING STEPS



Connect power with the included power adapter.



Open the lid and place your item in the cleaner.



Add clean water (note: do not exceed the max line)



Turn on the cleaner to start and choose the desired mode.



Take out the clean item and throw away the dirty water, clean the tank.

PRECAUTIONS

- Please add water before using it, it is forbidden to use it without water.
- It is forbidden to add high corrosive cleansers.
- Please take note whether your watch is waterproof before cleaning it.
- It is not recommended to clean precious jewelry such as natural gems and pearls with cracks (if you really need to clean it, consult the seller to confirm whether it can be used for cleaning).
- When cleaning the ultrasonic cleaner, don't flush it directly under water to avoid short circuiting. It is recommended to wipe the device with a soft cloth.
- This device should not be used by children under 6 years old without supervision.

PACKAGE CONTENTS

1 Ultrasonic Cleaner, 1 Power Adaptor, 1 Instruction Manual, 1 Certified Card

Teems
CARING BEYOND WORDS