

DISTINQ

CE

WHITE NOISE MACHINE
HANDLEIDING



10^{uur}
Speeltijd

INHOUDSOPGAVE

HANDLEIDING - NEDERLANDS

Pagina 3

HANDLEIDING - ENGELS


Pagina 9



29

GELUIDEN

30 - 60 - 90 MIN.

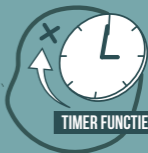

TIMER FUNCTIE



SUPER HANDIG

GEHEUGEN FUNCTIE


BATTERIJ

3.7 V / 1200 MAH



LICHT

7 VERSCHILLENDE KLEUREN

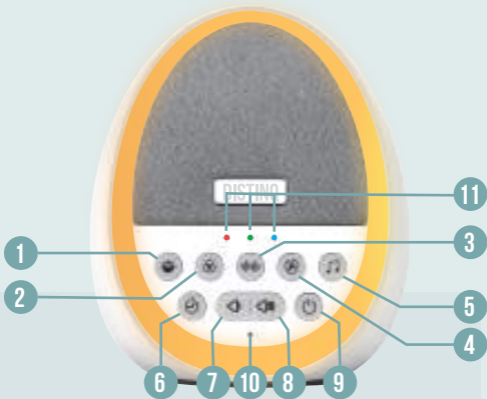

KNOPPEN EN FUNCTIES

- 1. Lichtschakelaar / helderheid regelknop**
 - 1.Kort indrukken om door deze drie modus te bladeren: inschakelen, ademend licht en uitschakelen.
 - 2.Houd de knop lang ingedrukt om de helderheid van het licht aan te passen: de helderheid van het licht kan veranderen van helder naar donker en geleidelijk van donker naar helder. Laat de knop los om de juiste helderheid te krijgen.
- 2. Kleur licht aanpassen**
 - 1.Druk knop kort in om de kleur te selecteren, kies uit rood, oranje, geel, groen, cyan, blauw, violet en wit.
 - 2.Lang indrukken om geleidelijk 7 gemengde kleuren licht weer te geven.
- 3. Witte ruis-knop**

7 verschillende soorten witte ruis en een ronde toon zijn te horen na een loop.
- 4. Ventilatorknop**

7 verschillende ventilatorgeluiden, na een loop is een ronde toon te horen.

- 5. Natuurgeluiden-knop**
Kort indrukken om te kiezen uit 15 ingebouwde verschillende geluiden: Vogel geluiden in bos, golven, krekel, kampvuur, trein, slinger, donder, oceaan, regen, water, druppelen, sissen, foetaal geluid, slaapliedje en muziekdoos. Na een loop hoor je een toon.
- 6. Timing-knop**
Druk op deze knop om de timer in te stellen op 30, 60, 90 min en non-stop. Er is geen indicatie voor non-stop timer-start. Nadat de timing functie is gestart, kan het volume geleidelijk afnemen tijdens het afspeel proces voordat de machine automatisch wordt uitgeschakeld.
- 7. Volume verlagen knop**
Druk lang of kort op deze knop om het volume te verlagen.
- 8. Volume verhogen knop**
Druk deze knop kort of lang in om het volume te verhogen; bij maximaal volume is er een "ding" geluid te horen.

9. Aan / uit-knop
Houd 2 seconden ingedrukt om in of uit te schakelen. Na het opstarten onthoudt de machine alle instellingen voor de laatste uitschakeling.
10. Oplaadindicator
Het indicatorlampje brandt continu rood tijdens het opladen. Nadat het apparaat volledig is opgeladen, wordt het groen weergegeven.
opmerking: Het indicatielampje knippert rood als de batterij bijna leeg is.
11. Timing-indicator
Toont een gele kleur.

INGANG FUNCTIES

12. Type-C USB
DC 5V oplaadpoort.
13. Oortelefoon output poort
Wanneer deze is aangesloten zal het geluid automatisch het geluid van de luidspreker afsnijden.

SPECIFICATIES

1. Laadspanning: DC 5V
2. Oplaadtijd 2,5 uur
3. luidspreker specificatie: 52 mm, 5W
4. THD: <1%
5. SNR: >78dB
6. Batterijcapaciteit: 3,7 V / 1200 mAh
7. Product grootte: L: 96.7 * B: 79.1 * H 112.5 mm

GARANTIE

Wettelijke garantie via Semaco B.V.
info@semacobv.nl



29

SOUNDS

30 - 60 - 90 MIN.



TIMER FUNCTION



REALLY EASY

MEMORY FUNCTION


BATTERY

3.7 V / 1200 MAH



LIGHT

7 DIFFERENT COLORS

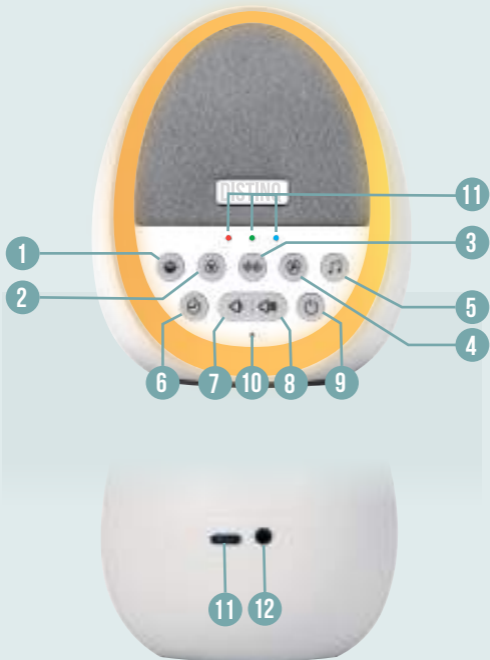

BUTTON FUNCTIONS

- 1. Light switch / Brightness control button**
 - 1.Short press to cycle through these three modes: power on, breathing light and power off.
 - 2.Long press the button to adjust the brightness of the light: the brightness of the light can change from bright to dark and gradually from dark to bright. Release the button to get the correct brightness.
- 2. Color light adjust**
 - 1.Briefly press button to select color, choose from red, orange, yellow, green, cyan, blue, violet and white.
 - 2.Long press to gradually display 7 mixed color light.
- 3. White noise button**

7 different types of white noise and a round tone can be heard after a loop.
- 4. Fan button**

7 different fan sounds, a round tone is heard after a run.

- 5. Nature sounds button**
Short press to choose from 15 built-in different sounds: Bird sounds in the forest, waves, crickets, campfire, train, pendulum, thunder, ocean, rain, water, drip, hiss, fetal sound, lullaby and music box. After a run you will hear a tone.
- 6. Timing button**
Press this button to choose the timer as: 20, 60, 90, and non-stop. No indicators is on for non-stop timer start. After the timing function is started, the volume can gradually decrease during the playing process before the machine is automatically shut down.
- 7. Volume decrease button**
Long press or short this button to decrease until the sound is less.
- 8. Volume increase button**
Short press or long press this button to increase, a "ding" prompt sound can be heard at maximum.

- 9.** Power button
Press and hold for 2 seconds to turn on or off. After startup, the machine remembers all settings for the last shutdown.

- 10.** Charge indicator
The indicator light lights red continuously during charging. After the device is fully charged, it displays green. note: The indicator light flashes red when the battery is low.

- 11.** Timingindicator
Shows a yellow color.

PORT FUNCTIONS

- 12.** Type-C USB
Dc 5V charging port.

- 13.** Earphone output port
When plugged, it will automatically cut off the sound from the speaker.

SPECIFICATIONS

1. Charging voltage: DC 5V
2. Charging time : 2,5 hours
3. Loudspeaker specifications: 52 mm, 5W
4. THD: <1%
5. SNR: >78dB
6. Battery capacity: 3,7 V / 1200 mAh
7. Product size: L: 96.7 * B: 79.1 * H 112.5 mm

WARRANTY

Legal warranty through Semaco B.V.
info@semacobv.nl

A photograph of a woman and a young child lying in bed together, smiling. The image is overlaid with a semi-transparent teal filter. The word "DISTINQ" is written across the center in a bold, sans-serif font. The letters "DISTIN" are white, and the letter "Q" is red. The bottom of the image features a white, scalloped-edged decorative border.

DISTINQ