



**Vaanzwijzing:** Het snoer van deze verlichtingsset kan niet worden vervangen. Wanneer het snoer beschadigd is, moet het verlichtingsset worden vernietigd. De lampen zijn niet vervangbaar. Deze verlichtingsset heeft 3 functies: 1. "TIMER" voor automatisch 6 uur aan en 18 uur uit, 2. "ON" voor continu aan, 3. "OFF" voor continu uit.

**l'emploi:** Le cordon de cet ensemble d'éclairage ne peut pas être remplacé ; si le cordon est endommagé, l'ensemble d'éclairage doit être détruit. Les lampes ne peuvent pas être remplacées. Cet ensemble d'éclairage a 3 fonctions : 1. "TIMER" pour allumé pendant 6 heures et éteint pendant 18 heures, 2. "ON" pour allumé en continu, 3. "OFF" pour éteint en continu.

**chsanleitung:** Das flexible Kabel dieses Beleuchtungssets kann nicht ausgetauscht werden; wenn das Kabel beschädigt ist, das Beleuchtungsset zu beseitigen. Die Lampen können nicht ausgetauscht werden. Dieses Beleuchtungsset hat 3 Funktionen: 1. „TIMER“ = automatisch 6 St. an und 18 St. aus, 2. „ON“ = Dauerbetrieb, 3. „OFF“ = dauerhaft aus.

**ing instructions:** The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed. The lamps are not replaceable. This light set has 3 functions: 1. "TIMER" for switching the light automatically (6 hours on and 18 hours off); 2. "ON" for continuously switched on; 3. "OFF" for continuously switched off.

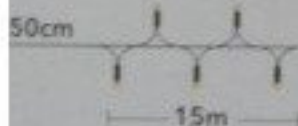

4 x AA (Not included)

Itemnr.: 231532



8 713619 406195

CBD - P.O. BOX 16  
1738 ZG - WAARLAND (NL)

