


STREX

LAPTOP COOLING PAD INSTRUCTION MANUAL SP163

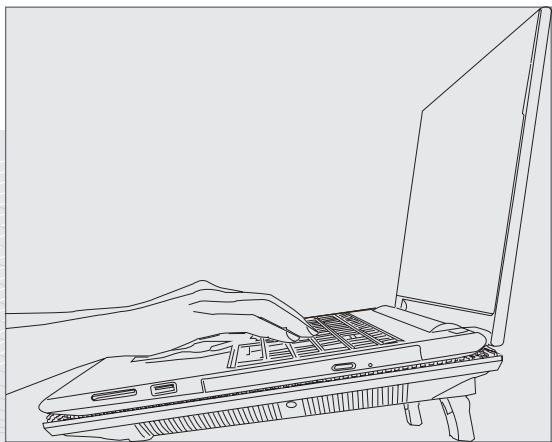

Thanks for choosing Strex! Read the manual carefully for correct and safe operation of the product. Always follow the instructions for safe usage.

If you have any questions about the product or encounter problems, you can contact us by email: info@strex.nl

English

Nederlands

SPECIFICATIONS / SPECIFICATIES

- Compatible with 12"-17" laptops - Geschikt voor laptops van 12"-17"
- Dimensions: 380 x 300 x 35MM - Afmetingen: 380 x 300 x 35MM
- Total of 5 fans - 5 Ventilatoren
- Rated voltage: 5V DC - Voltage 5V DC
- USB Ports: 2 - USB Poorten: 2
- Speed: 1000+/- 2100RPM - Snelheid 1000+/- 2100RPM
- Material: ABS - Materiaal: ABS
- USB cable length: 60CM - USB kabel lengte: 60CM
- 3 Modus: 1, 4 or 5 fans - 3 Standen: 1, 4 of 5 ventilatoren aan

INSTRUCTIONS - INSTRUCTIES

ENG:

1. Insert the USB cable of the cooling pad into the USB slot of your laptop
2. Turn on the Strex laptop cooling pad using the button on the side.
3. You can turn on 1, 4 or 5 fans depending on your needs. To turn on/off the fans, please use the buttons on the side of the cooling pad. Button 1 is 1 fan, button 2 is for 4 fans. With both buttons on, you will have a total of 5 fans.

NL:

1. Sluit de USB kabel van de laptop koeler aan op de USB van je laptop
2. Zet de laptop koeler aan middels de knoppen aan de zijkant
3. Je kan 1, 4 of 5 ventilatoren aanzetten. Om een ventilator aan/uit te zetten druk je simpelweg op de knop aan de zijkant. Knop 1 is voor 1 ventilator, knop 2 is voor 4 ventilators. Beiden knoppen ingeschakeld zorgen dus voor in totaal 5 ventilators

STREX

SBD Trading B.V. (Strex Europe)

Noorwegenstraat 6-A4

7418BC Deventer

The Netherlands

info@strex.nl • www.strex.nl